

150Mbps Wireless Broadband Router

BR-6228nC / BR-6228nS
User Manual

Version 1.1 / September, 2011



Copyright© by Edimax Technology Co, LTD. all rights reserved. No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language, in any form or by any means, electronic, mechanical, magnetic, optical, chemical, manual or otherwise, without the prior written permission of Edimax Technology Co, LTD.

Edimax Technology Co, LTD makes no representations or warranties, either expressed or implied, with respect to the contents hereof and specifically disclaims any warranties, merchantability or fitness for any particular purpose. Any software described in this manual is sold or licensed "as is". Should the programs prove defective following their purchase, the buyer (and not this company, its distributor, or its dealer) assumes the entire cost of all necessary servicing, repair, and any incidental or consequential damages resulting from any defect in the software. Further, Edimax Technology Co, LTD reserves the right to revise this publication and to make changes from time to time in the contents hereof without obligation to notify any person of such revision or changes.

The product you have purchased and the setup screen may appear slightly different from those shown in this QIG. For more detailed information about this product, please refer to the User Manual on the CD-ROM. The software and specifications are subject to change without notice. Please visit our web site www.edimax.com for the update. All rights reserved including all brand and product names mentioned in this manual are trademarks and/or registered trademarks of their respective holders .

Linux Open Source Code

Certain Edimax products include software code developed by third parties, software code is subject to the GNU General Public License ("GPL") or GNU Lesser General Public License ("LGPL"). Please see the **GNU** (www.gnu.org) and **LPGL**(www.gnu.org) Websites to view the terms of each license.

The GPL Code and LGPL Code used in Edimax products are distributed without any warranty and are subject to the copyrights of their authors. For details, see the GPL Code and LGPL Code licenses. You can download the firmware-files at <http://www.edimax.com> under "Download" page.

CATALOG

<i>Chapter I: Product Information</i>	5
1-1 Introduction and safety information.....	5
1-2 Safety Information	7
1-3 System Requirements	8
1-4 Package Contents	9
1-5 Familiar with your new wireless broadband router.....	10
<i>Chapter II: System and Network Setup</i>	13
2-1 Establish network connection.....	13
2-2 Setup client computers to obtain IP address automatically	15
2-2-1 Windows 95/98/Me IP address setup:	16
2-2-2 Windows 2000 IP address setup:	18
2-2-3 Windows XP IP address setup:.....	20
2-2-4 Windows Vista IP address setup:.....	22
2-3 Connect to broadband router by web browser	24
2-4 Using 'Quick Setup'	30
2-4-1 Using 'Dynamic IP' as broadband connection type	33
2-4-3 Using 'PPPoE' as broadband connection type	36
2-4-4 Using 'PPTP' as broadband connection type	38
2-4-5 Using 'L2TP' as broadband connection type.....	41
<i>Chapter III: General Setup</i>	44
3-1 System	46
3-1-1 Time Zone	47
3-1-2 Password Settings	48
3-1-3 Remote Management	49
3-2 WAN	51
3-2-1 Dynamic IP	52
3-2-2 Static IP	54
3-2-3 PPPoE	56
3-2-4 PPTP	58
3-2-5 L2TP.....	61
3-2-5 L2TP.....	61
3-2-6 WISP	64
3-3 LAN (Wired)	66
3-3-1 Before you start - Suggestions for deciding an IP address to be used with this broadband router	66
3-3-2 LAN IP.....	68
3-3-3 DHCP Server	69
3-3-4 Static DHCP Leases.....	70

3-2 Wireless.....	72
3-2-1 Basic Settings	73
3-2-1-1 AP mode	74
3-2-1-2 Station-Infrastructure	77
3-2-1-3 AP Bridge-Point to Point	80
3-2-1-4 AP Bridge-Point to Multi-Point	82
3-2-1-5 AP Bridge-WDS	84
3-2-1-6 Universal Repeater	87
3-2-2 Set Security	90
3-2-3 MAC Address Filtering	96
3-2-4 WPS (Wi-Fi Protected Setup) Settings	98
3-3 Advance Settings.....	100
3-3-1 QoS.....	101
3-3-1-1 Basic QoS Settings	101
3-3-2 DDNS.....	105
3-3-3 Port Forwarding	108
3-3-4 DMZ.....	110
3-5 NAT	112
3-5-2 Special Applications	116
3-5-3 UPnP Setting	119
3-5-4 ALG Settings	120
3-5-5 Static Routing.....	121
3-6 Firewall.....	123
3-6-1 Access Control.....	123
3-6-2 URL Blocking	128
3-6-3 DoS.....	130
3-6-4 Parental Control	133
3-7 Status.....	135
3-7-1 Internet Connection.....	136
3-7-2 Device Status.....	137
3-7-3 System Log	138
3-7-4 Security Log.....	139
3-7-5 Active DHCP Client	140
3-7-6 Statistics	141
3-8 Tools	142
3-8-1 Configuration Tools	143
3-8-2 Firmware Upgrade	144
3-8-3 Restart.....	145
3-9 Language	146

Chapter I: Product Information

1-1 Introduction and safety information

Thank you for purchasing BR-6228nS_nC wireless broadband router! This high cost-efficiency router is the best choice for **Small office / Home office** users, all computers and network devices can share a single xDSL / cable modem internet connection at high speed. Easy install procedures allows any computer users to setup a network environment in very short time - within minutes, even inexperienced. When the number of your computers and network-enabled devices grow, you can also expand the number of network slot by simple attach a hub or switch, to extend the scope of your network!

With built-in IEEE 802.11b/g/Draft-N wireless network capability, all computers and wireless-enabled network devices (*including PDA, cellular phone, game console, and more!*) can connect to this broadband router without additional cabling. ***New Draft-N wireless capability also gives you the highest speed of wireless experience ever! With a compatible wireless card installed in your PC, you can transfer file for up to 300 Mbps! The radio coverage is also doubled, so don't worry if your office or house is really big!***

Do you think it is trouble to setup wireless security? With WPS (Wi-Fi Protected Setup) function, you can setup wireless security in just seconds! Just press the button on WPS-compatible wireless device, or input a random 8-digit number, you can establish a secure wireless connection.

Other features of this router including:

- **High Internet Access throughput**
- Allow multiple users to share a single Internet connection
- Supports up to 253 LAN users sharing a single Cable or xDSL internet connection
- Four wired LAN ports (10/100M) and one WAN port (10/100M)
- Provides IEEE 802.11b/g/n wireless LAN capability
- Support DHCP (Server/Client) for easy client IP-address setup
- Advanced network and security features like: Special Applications, DMZ, Virtual Servers, Access Control, Firewall.

- Allow you to monitor the router's status like: DHCP Client Log, System Log, Security Log and Device/Connection Status
- Easy to use Web-based GUI for network configuration and management purposes
- Remote management function allows configuration and upgrades from a remote computer (over the Internet)
- Auto MDI / MDI-X function for all wired Ethernet ports.

1-2 Safety Information

In order to keep the safety of users and your properties, please follow the following safety instructions:

1. This router is designed for indoor use only; DO NOT place this router outdoor.
2. DO NOT put this router at or near hot or humid places, like kitchen or bathroom. Also, do not left this router in the car in summer.
3. DO NOT pull any connected cable with force; disconnect it from the router first.
4. If you want to place this router at high places or hang on the wall, please make sure the router is firmly secured. Falling from high places would damage the router and its accessories, and warranty will be void.
5. Accessories of this router, like antenna and power supply, are danger to small children under 3 years old. They may put the small parts in their nose or month and it could cause serious damage to them. KEEP THIS ROUTER OUT THE REACH OF CHILDREN!
6. The router will become hot when being used for long time (***This is normal and is not a malfunction***), DO NOT put this router on paper, cloth, or other flammable materials.
7. There's no user-serviceable part inside the router. If you found that the router is not working properly, please contact your dealer of purchase and ask for help. DO NOT disassemble the router, warranty will be void.
8. If the router falls into water when it's powered, DO NOT use your hand to pick it up. Switch the electrical power off before you do anything, or contact an experienced technician for help.
9. If you smell something strange, or even see some smoke coming out from the router or power supply, remove the power supply or switch the electrical power off immediately, and call dealer of purchase for help.

1-3 System Requirements

- Internet connection, provided by xDSL or cable modem with a RJ-45 Ethernet port.
- Computer or network devices with wired or wireless network interface card.
- Web browser (*Microsoft Internet Explorer 4.0 or above, Netscape Navigator 4.7 or above, Opera web browser, or Safari web browser*).
- An available AC power socket (100 – 240 V, 50/60Hz)**

1-4 Package Contents

Before you starting to use this router, please check if there's anything missing in the package, and contact your dealer of purchase to claim for missing items:

<input type="checkbox"/> BR-6228nS_nC Broadband router (1 pcs).....	1
<input type="checkbox"/> Quick installation guide (1 pcs)	2
<input type="checkbox"/> CDROM with multi-languages setup wizard, multi-languages Quick installation guide and User manual (1pcs)	3
<input type="checkbox"/> 5V 1A power adapter (1 pcs).....	4
<input type="checkbox"/> Ethernet Cable (1 pcs).....	5
<input type="checkbox"/> Antenna (1 pcs).....	6

1-5 Familiar with your new wireless broadband router



Front Panel




BR-6228nS




BR-6228nS_nC

LED Name	Light Status	Description
PWR 	ON	Router is switched on and correctly powered
	OFF	Router is not powered (or not correctly powered)
WLAN 	On	Wireless network is switched on
	Off	Wireless network is switched off
	Flashing	Wireless LAN activity (transferring data) or WPS mode is on. (LED will on and off every 1 second)
WAN 10/100M	On	WAN port (Internet) is running at 100Mbps
	Off	WAN port (Internet) is running at 10Mbps
	Flashing	WAN activity (transferring data)
WAN LNK/ACT	On	WAN port is connected
	Off	WAN port is not connected
	Flashing	WAN activity (transferring data)
LAN 10/100M	On	LAN port is running at 100Mbps
	Off	LAN port is running at 10Mbps
LAN LNK/ACT	On	LAN port is connected
	Off	LAN port is not connected
	Flashing	LAN activity (transferring data)

Back Panel

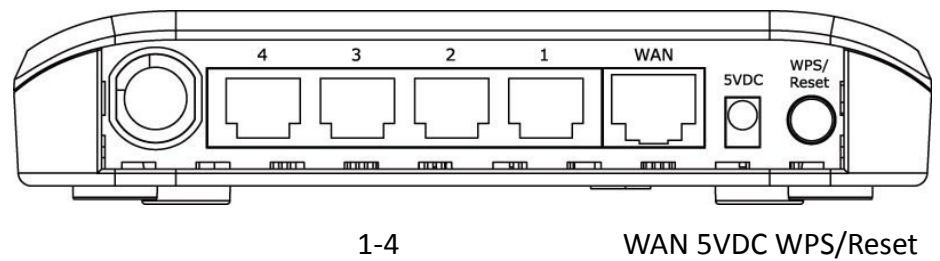


BR-6228nS

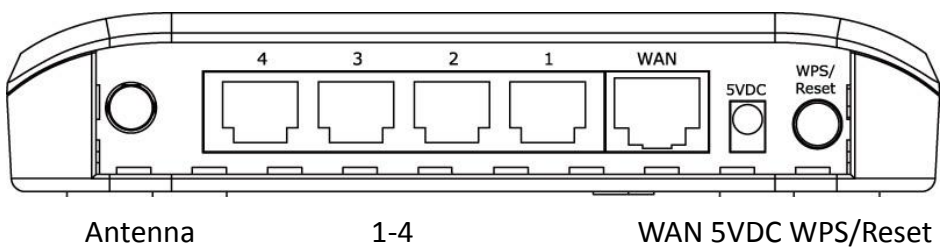

BR-6228nS_nC

Item Name	Description
Antenna	Wireless antenna
1 – 4 (Yellow)	Local Area Network (LAN) ports 1 to 4
WAN (Blue)	Wide Area Network (WAN / Internet) port
5VDC	Power connector, connects to power adapter
WPS / Reset	Reset the router to factory default settings (clear all settings) or start WPS function. Press this button and hold for 20 seconds to clear all settings, and press this button for less than 20 seconds to start WPS function.

Bottom

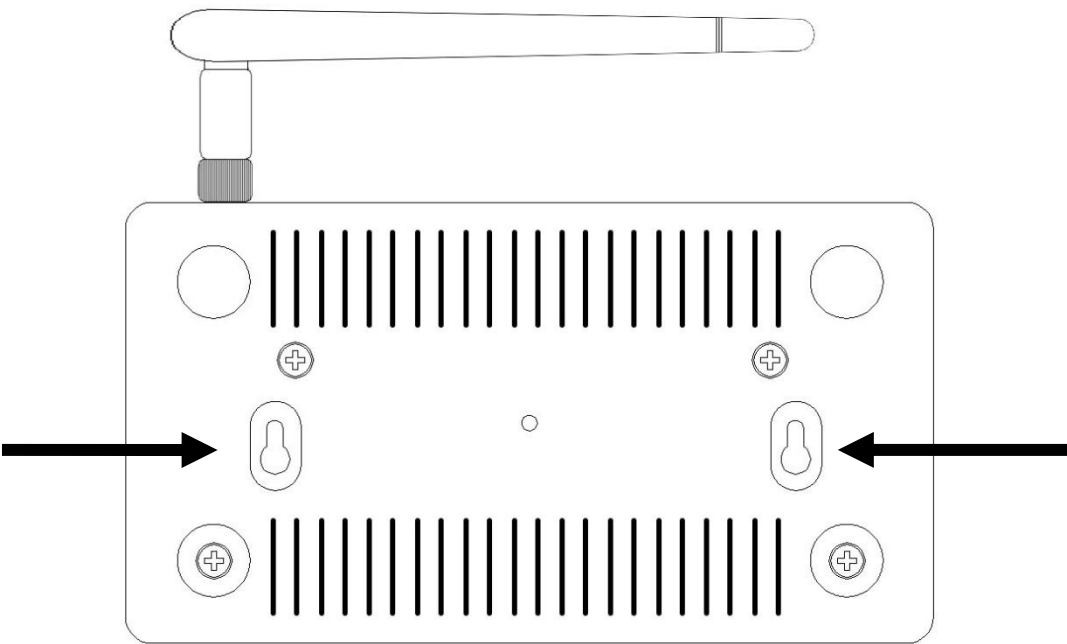


Item Name	Description
Wall mount hole	Mount BR-6228nS_nC on the wall.

Chapter II: System and Network Setup


2-1 Establish network connection

Please follow the following instruction to build the network connection between your new Broadband router and your computers, network devices:


1. Connect your xDSL / cable modem to the WAN port of router by Ethernet cable.

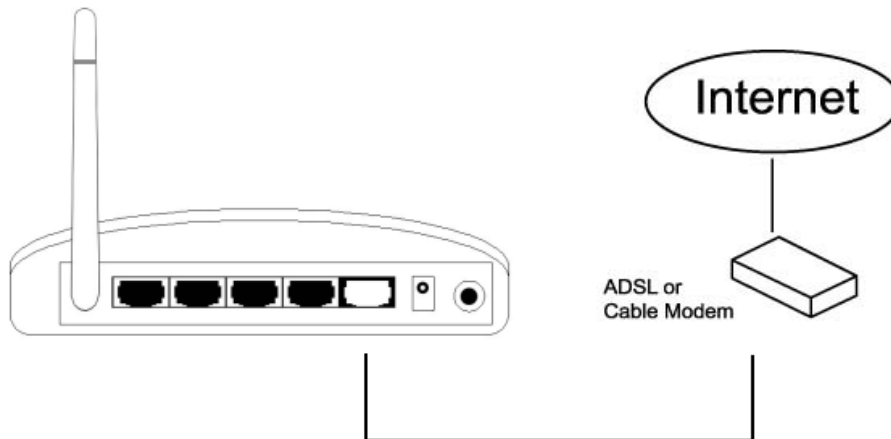

2. Connect all your computers, network devices (network-enabled consumer devices other than computers, like game console, or switch / hub) to the LAN port (Labeled as 1 to 4) of the router.

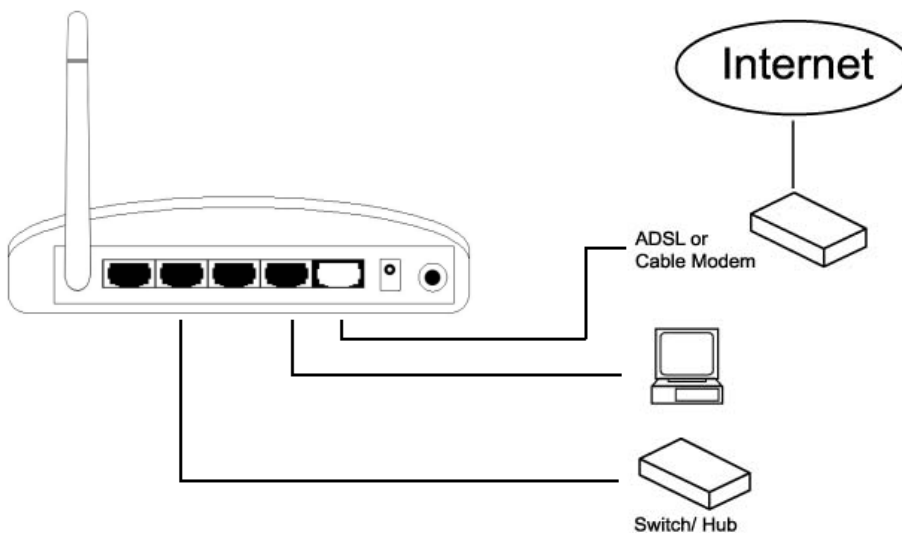

3. Connect the power adapter to the wall socket, and then connect it to the '5VDC' socket of the router.

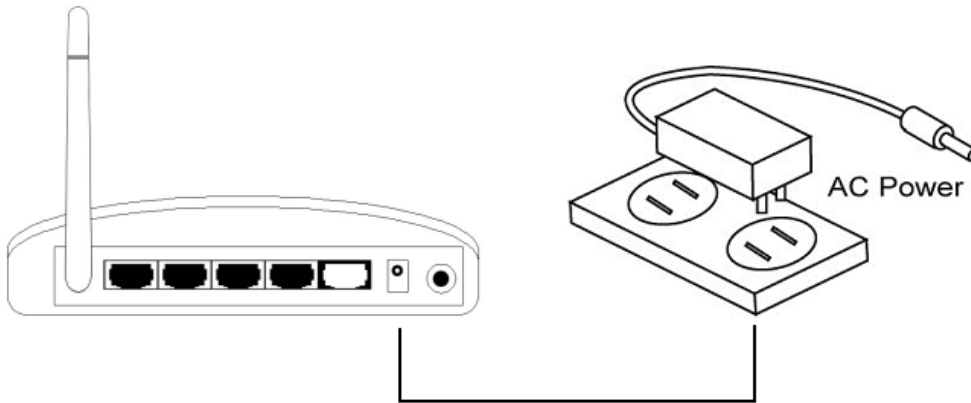

4. Please check all LEDs on the front panel. 'PWR' LED should be steadily on, WAN and LAN LEDs should be on if the computer / network device connected to the respective port of the router is powered on and correctly connected. If PWD LED is not on, or any LED you expected is not on, please recheck the cabling.
5. To improve wireless signal reception, please arrange the antenna and make it perpendicular to the ground, and place the wireless access point in open space. Please keep the distance between antennas, if the antennas are too close to each other, wireless signal reception will be affected.

2-2 Setup client computers to obtain IP address automatically

After the network connection is established, the next step you should do is setup the router with proper network parameters, so it can work properly in your network environment.


Before you can connect to the router and start configuration procedures, your computer must be able to get an IP address automatically (use dynamic IP address). If it's set to use static IP address, or you're unsure, please follow the following instructions to configure your computer to use dynamic IP address:

If the operating system of your computer is....


- | | |
|-------------------------|-------------------------------------|
| Windows 95/98/Me | - please go to section 2-2-1 |
| Windows 2000 | - please go to section 2-2-2 |
| Windows XP | - please go to section 2-2-3 |
| Windows Vista | - please go to section 2-2-4 |

2-2-1 Windows 95/98/Me IP address setup:

1. Click 'Start' button (it should be located at lower-left corner of your computer), then click control panel. Double-click **Network** icon, and **Network** window will appear. Select 'TCP/IP', then click 'Properties'.

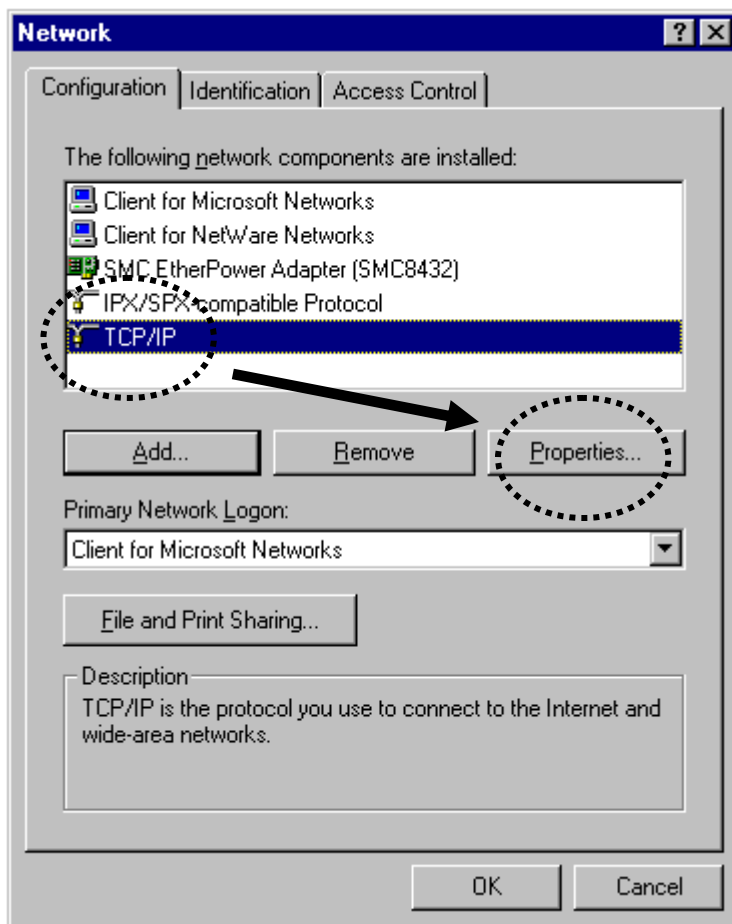


2. Select 'Obtain an IP address from a DHCP server', then click 'OK'.

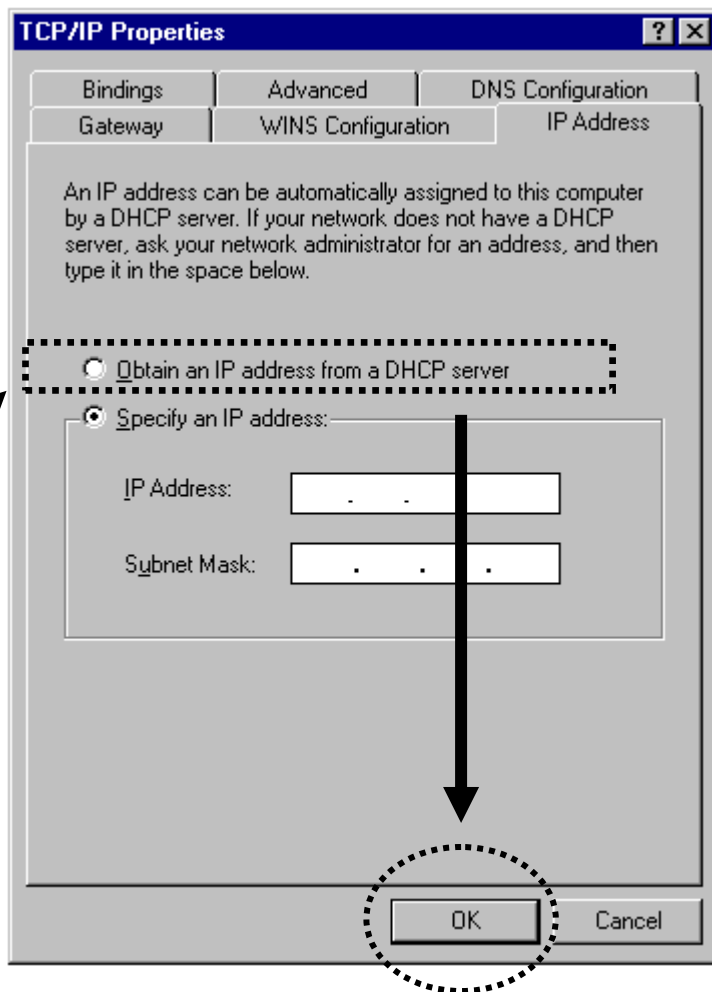


2-2-2 Windows 2000 IP address setup:

1. Click 'Start' button (it should be located at lower-left corner of your computer), then click control panel. Double-click **Network and Dial-up Connections** icon, double click **Local Area Connection**, and **Local Area Connection Properties** window will appear. Select 'Internet Protocol (TCP/IP)', then click 'Properties'

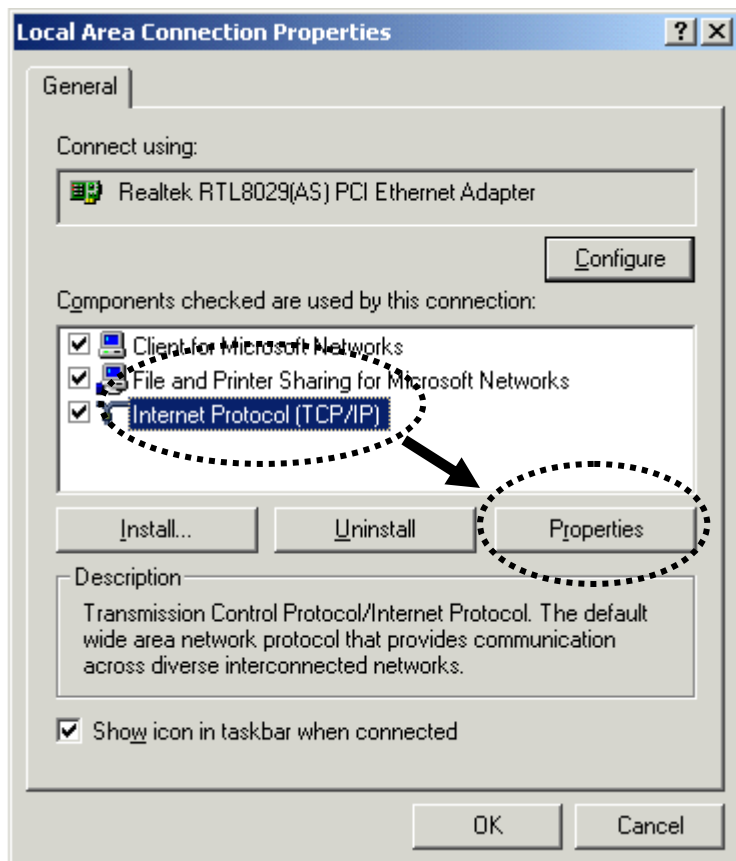


2. Select 'Obtain an IP address automatically' and 'Obtain DNS server address automatically', then click 'OK'.

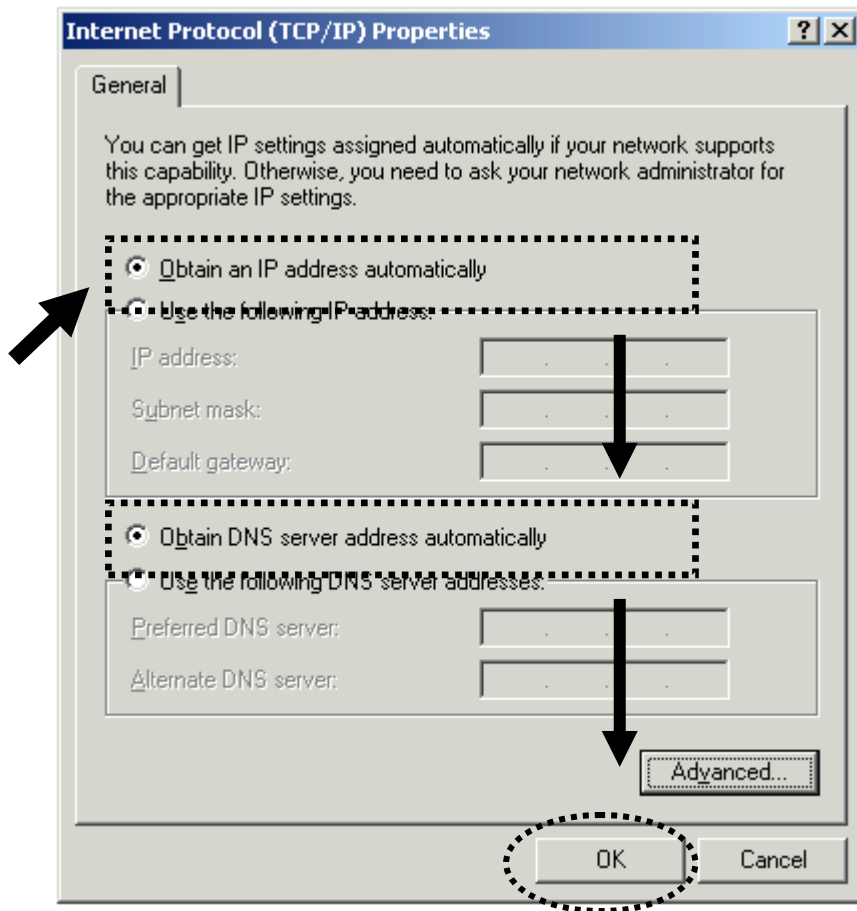


2-2-3 Windows XP IP address setup:

1. Click 'Start' button (it should be located at lower-left corner of your computer), then click control panel. Double-click **Network and Internet Connections** icon, click **Network Connections**, then double-click **Local Area Connection, Local Area Connection Status** window will appear, and then click 'Properties'

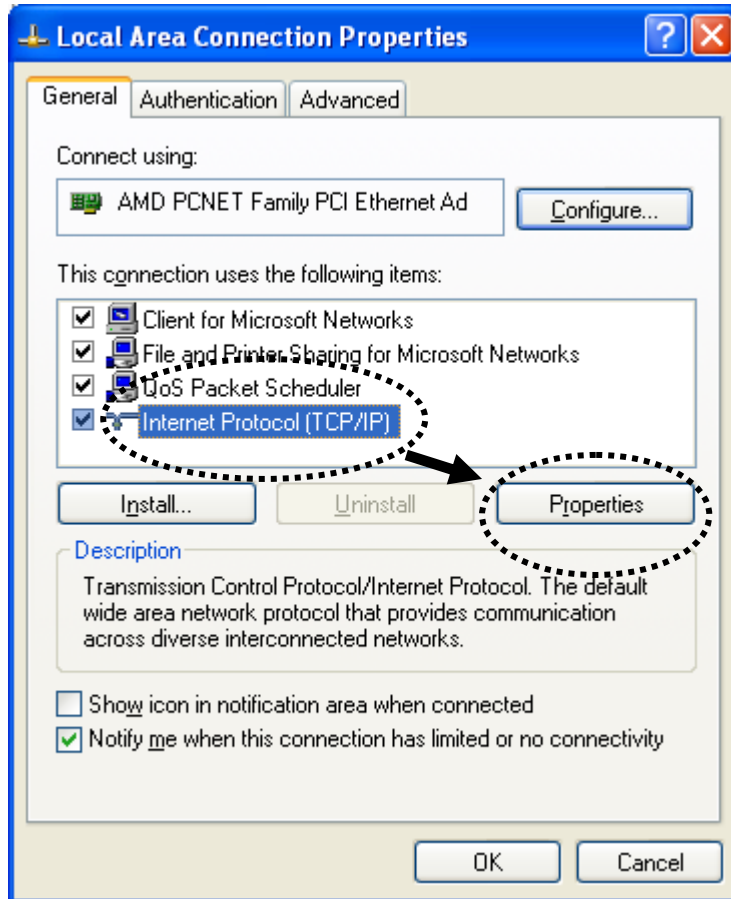


2. Select 'Obtain an IP address automatically' and 'Obtain DNS server address automatically', then click 'OK'.

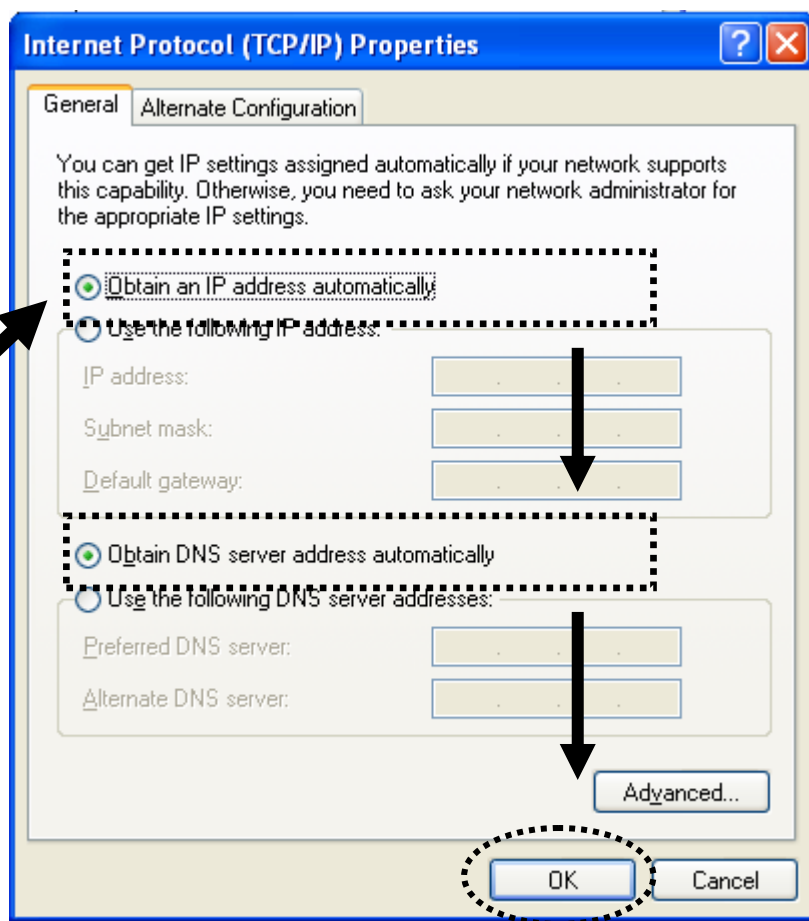


2-2-4 Windows Vista IP address setup:

1. Click 'Start' button (it should be located at lower-left corner of your computer), then click control panel. Click **View Network Status and Tasks**, then click **Manage Network Connections**..Right-click **Local Area Network**, then select '**Properties**'. **Local Area Connection Properties** window will appear, select 'Internet Protocol Version 4 (TCP / IPv4), and then click 'Properties'

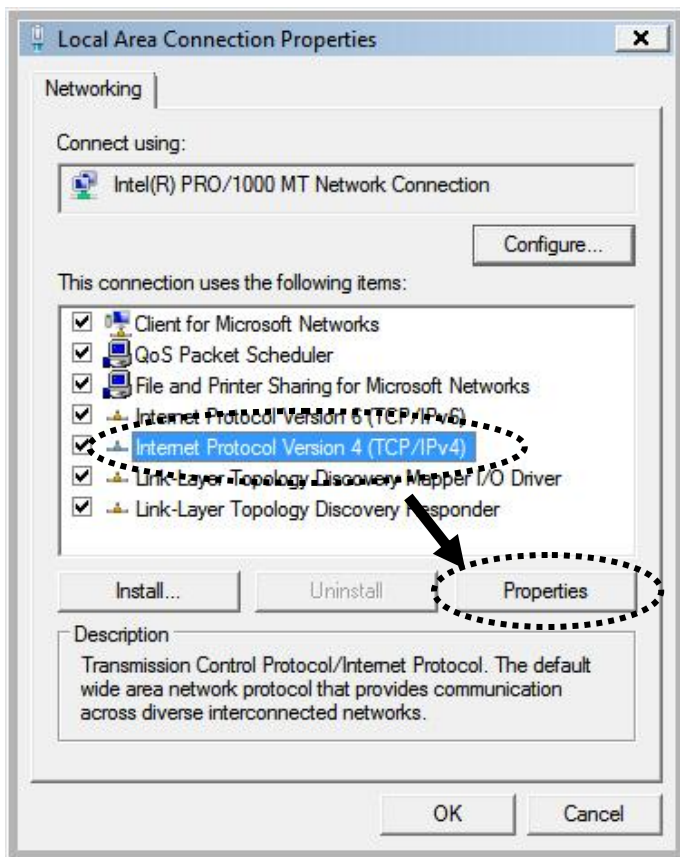


2. Select 'Obtain an IP address automatically' and 'Obtain DNS server address automatically', then click 'OK'.

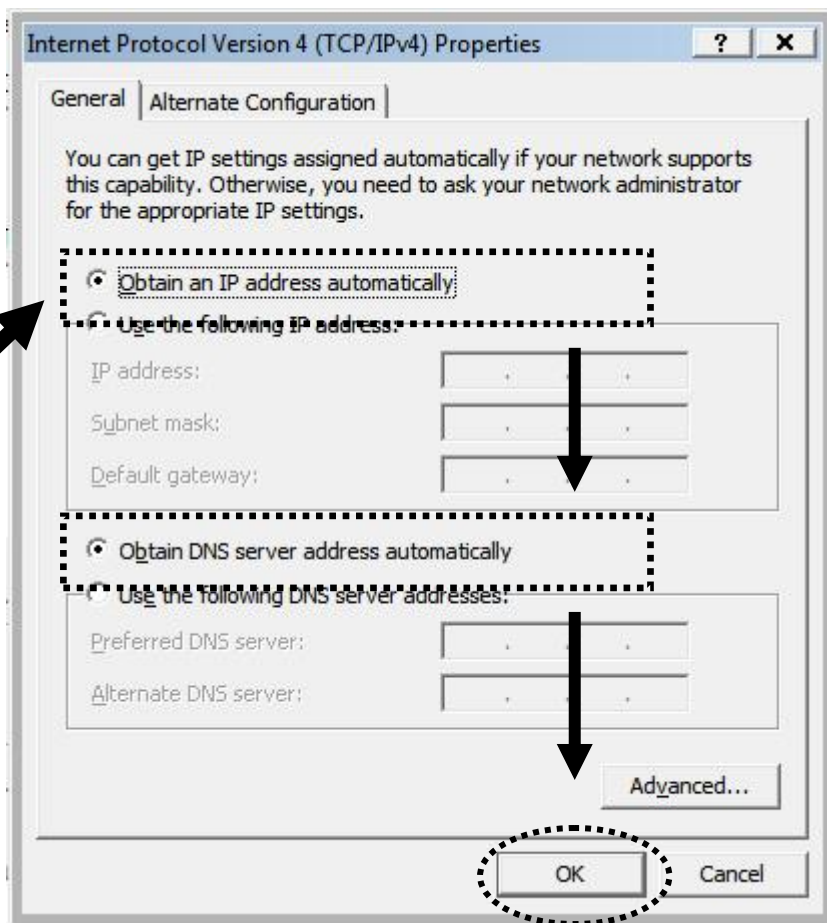


2-3 Connect to broadband router by web browser

Default IP address of this broadband router is '192.168.2.1', and you can connect to broadband router's web-based configuration interface by any connected computer with web browser (Internet Explorer 5.x or above, Firefox, or Netscape).


Please input '192.168.2.1' in web browser's address bar and press 'Enter' key to establish connection:

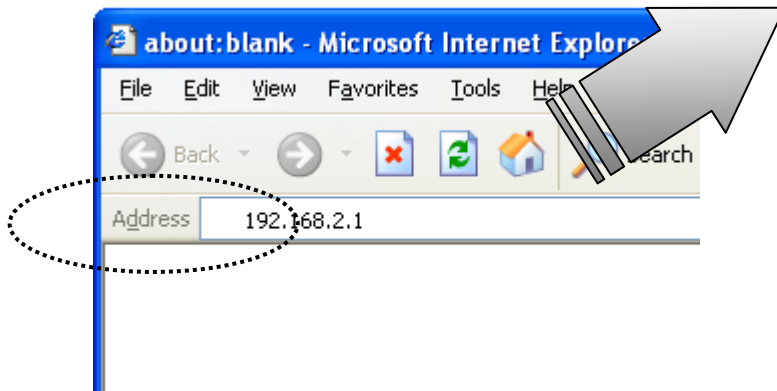

You should see the following authentication window:

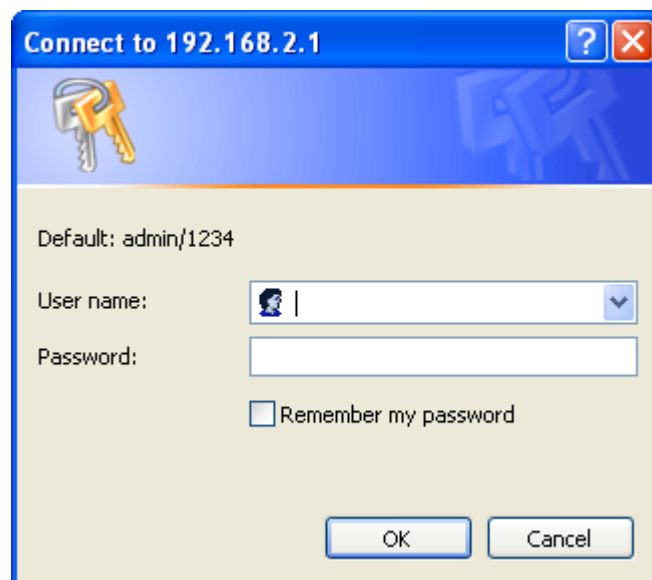

Please input 'admin' in 'User name' field, and '1234' in 'Password' field, and click 'OK' button to enter web configuration interface.

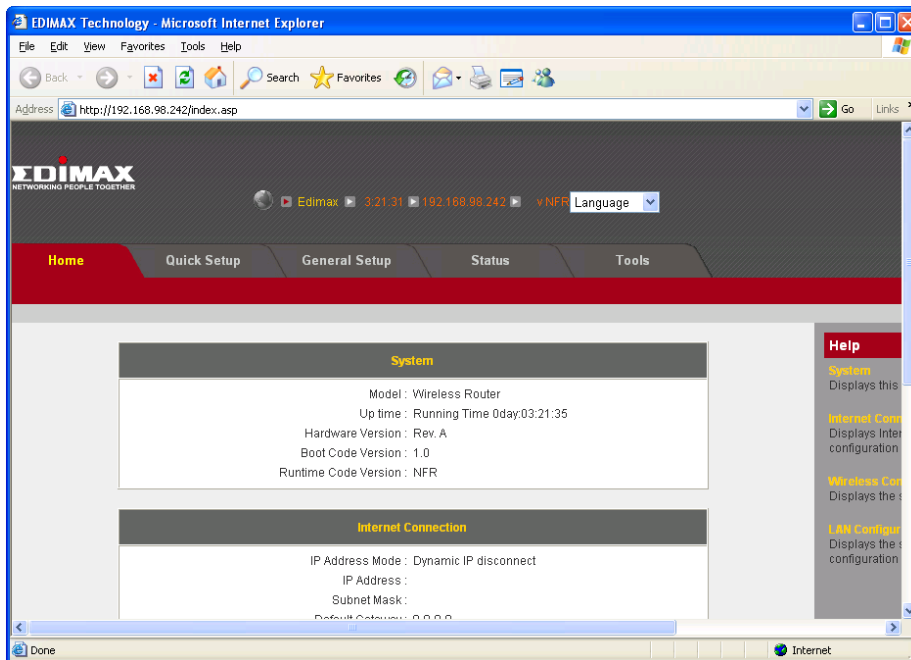

The page you'll see after logon is 'Home', you can check all settings and system information of BR-6228nS_nC wireless broadband router:

System:

Model	Displays the model name of this broadband router. Useful when you need technical services.
Up time	Displays the time since this router is switched on.
Hardware Version	Displays the hardware version of this broadband router. Useful when you need technical services.
Boot Code Version	Displays the boot code version of this broadband router. Useful when you need technical services.
Runtime Code Version	Displays the runtime code version of this broadband router. Useful when you need technical services.

Internet Connection:

IP Address Mode	Displays current mode of how this broadband router obtains IP address.
IP Address	Displays the IP address of WAN connection.
Subnet Mask	Displays the subnet mask of WAN connection.
Default Gateway	Displays IP address of the default gateway of WAN connection.
MAC Address	The physical address of WAN port.
Primary DNS	Displays IP address of first DNS server of WAN connection.
Secondary DNS	Displays IP address of second (backup) DNS server of WAN connection.


Wireless Configuration

Mode	Displays the operation mode of wireless access point.
ESSID	Displays the ESSID (Extend Service-Set Identifier, or the name of access point).
Channel Number	Displays the channel number of wireless network.
Security	Displays the security authentication mode of wireless access point.

LAN Connection

IP Address	Displays the IP address of LAN connection.
Subnet Mask	Displays the subnet mask of LAN connection.
DHCP Server	Displays the status of internal DHCP server.
MAC Address	The physical address of LAN port.


The SSID, up time, IP address of LAN connection, and runtime code number will always display on the top of webpage:

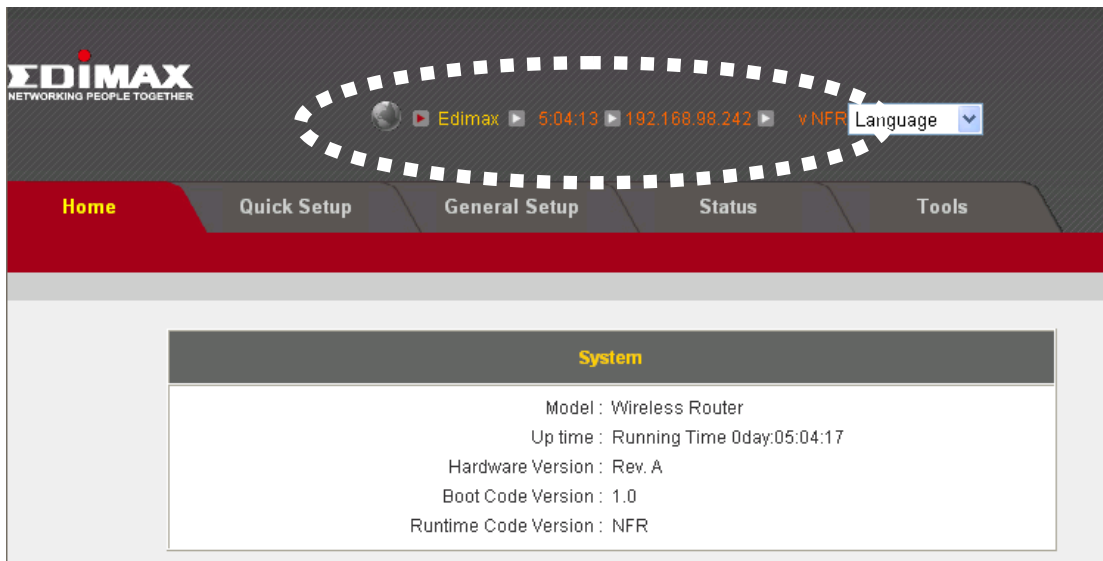


TIPS: If you can't establish connection with broadband router with web browser (got 'The page cannot be displayed' or similar error message), the IP address you inputted may be wrong. If you've changed the IP address of this broadband router previously, please input correct IP address instead of the default IP address '192.168.2.1'.

If the DHCP server function of this broadband router is enabled, please follow the following instructions to find out the IP address of this broadband router:


Please click 'start' -> 'run' at the bottom-lower corner of your desktop:

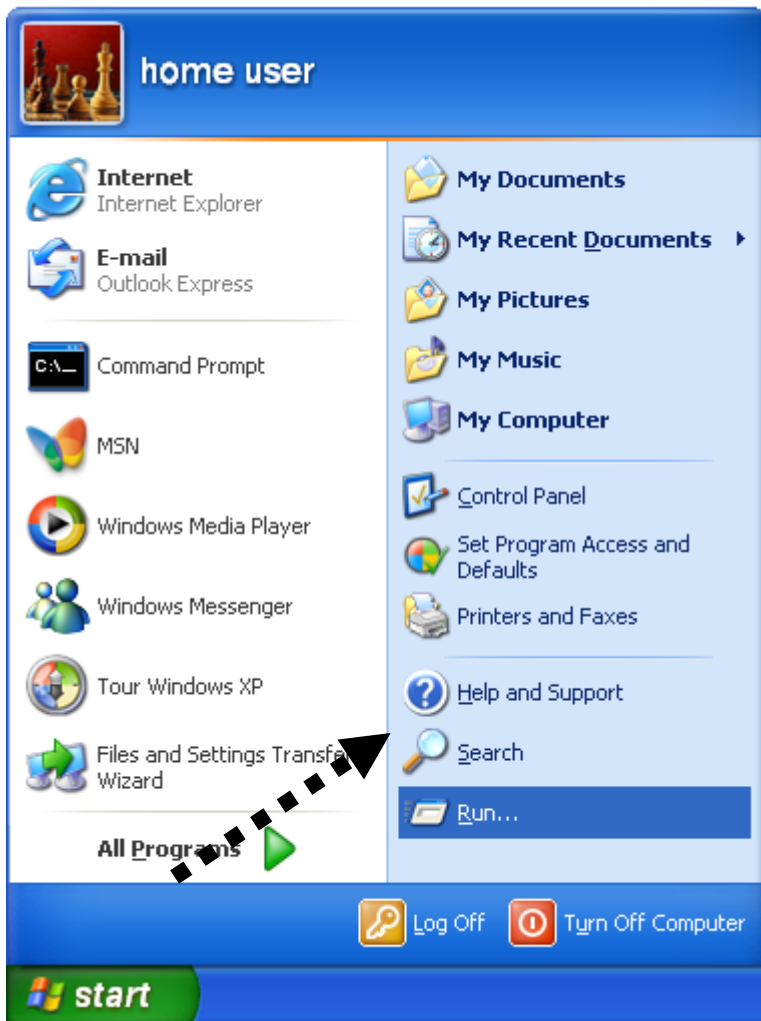

Input 'cmd', then click 'OK'

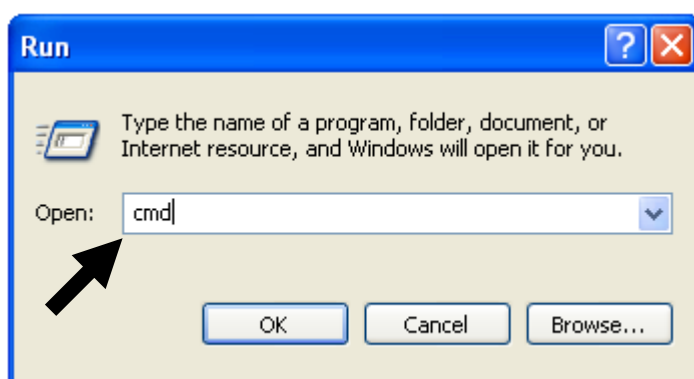

Input 'ipconfig', then press 'Enter' key. Please check the IP address followed by 'Default Gateway' (In this example, the IP address of router is 192.168.2.1, ***please note that this value may be different.***)

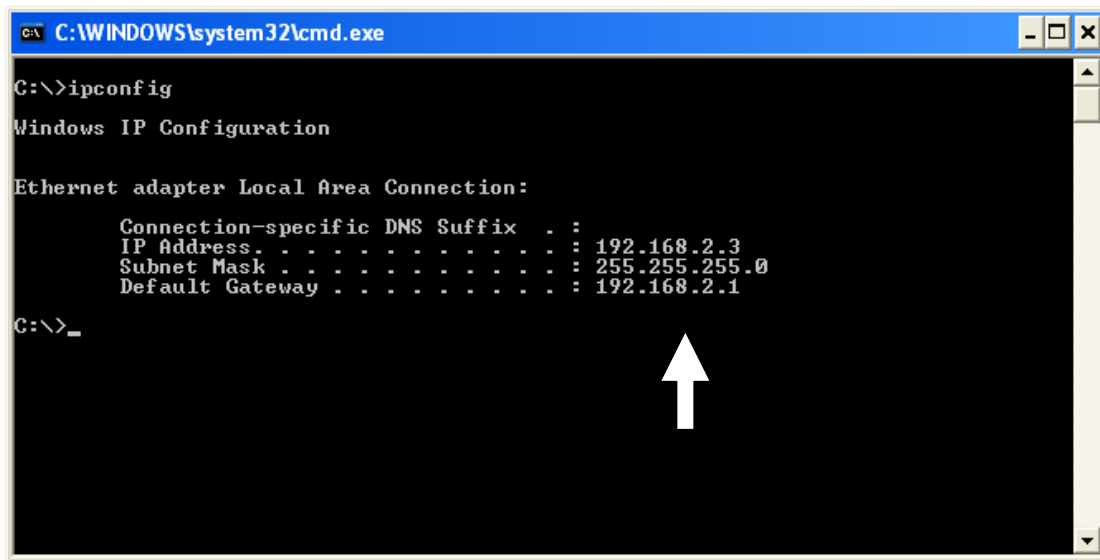

```
C:\>ipconfig

Windows IP Configuration

Ethernet adapter Local Area Connection:

    Connection-specific DNS Suffix  . : 
    IP Address . . . . . : 192.168.2.3
    Subnet Mask . . . . . : 255.255.255.0
    Default Gateway . . . . . : 192.168.2.1

C:\>_
```

NOTE: If the IP address of Gateway is not displayed, or the address followed by 'IP Address' begins with '169', please recheck network connection between your computer and router, and / or go to the beginning of this chapter, to recheck every step of network setup procedure.


If you tried the instructions listed above and still cannot find the IP address of this broadband router / you forget the password, please jump to chapter xx-xx to reset the broadband router.

2-4 Using 'Quick Setup'

This broadband router provides a 'Quick Setup' menu, and you can setup basic parameters of this broadband router.

Please follow the following instructions to use 'Quick Setup' menu:

1. Click 'Quick Setup' after logged in.

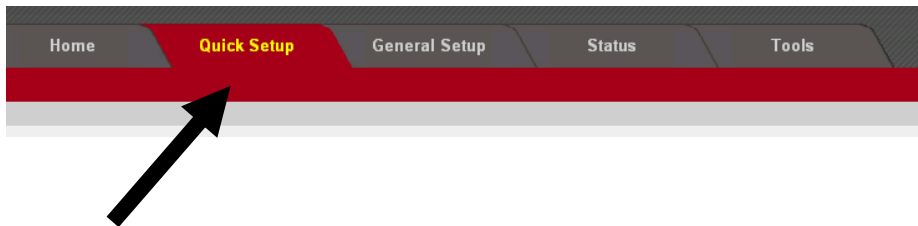

2. In the first step of quick setup, you can setup automatic time synchronization settings.

A screenshot of the 'Time Zone' configuration page within the router's quick setup menu. The page has a title bar that says 'Time Zone'. Below the title bar, there are three main configuration sections: 'Set Time Zone' with a dropdown menu currently showing '(GMT)Greenwich Mean Time: Dublin, Edinburgh, Lisbon, London'; 'Time Server Address' with a text input field containing '192.43.244.18'; and 'Daylight Savings' with an unchecked checkbox labeled 'Enable Function' followed by two date pickers set to 'January 1' and 'January 1'. At the bottom right of the form are two buttons: 'Back' and 'Next'.

The descriptions of every setting items are listed as follow:

Item Name	Description
Time Zone	Please select a time zone of the country or region of your residence here. If you can't find the country / region of your residence here, please select a city / region which time zone is the same with the country / region of your residence.
Time Server Address	This load-balance router supports NTP (Network Time Protocol). NTP server will provide correct time for this router to setup the date and time of the router automatically. Please input the host name or IP address of

	NTP server here. If you don't know the host name or IP address of time server, please ask network administrator or use 'pool.ntp.org' as time server.
Daylight Savings	If the country / region of your residence use daylight saving time, please check 'Enable Function' box, and select the beginning and ending date of daylight time saving.

After you finish with time zone settings, please click 'Next' to proceed to next step of quick setup - broadband type:

The screenshot shows a web interface for selecting a broadband type. At the top, there's a header bar with a green circle and the text "Dynamic IP". Below this, there are two input fields: "Host Name :" and "MAC address :". The "MAC address :" field contains "000000000000". To the right of the "MAC address :" field is a button labeled "Clone Mac address". Below these fields are four more radio button options, each with a label: "Static IP", "PPPoE", "PPTP", and "L2TP". At the bottom right of the interface are two buttons: "Back" and "OK".

Please choose the broadband (Internet connection) type you're using in this page. There are six types of Internet connection, they are:

- | | |
|------------|------------------------------|
| Dynamic IP | - Please go to section 2-4-1 |
| Static IP | - Please go to section 2-4-2 |
| PPPoE | - Please go to section 2-4-3 |
| PPTP | - Please go to section 2-4-4 |
| L2TP | - Please go to section 2-4-5 |

If you're not sure, please contact your Internet service provider. A wrong Internet connection type will cause connection problem, and you will not be able to connect to internet.


If you want to go back to previous step, please press 'Back' button on the bottom of this page.

NOTE:

**To setup WISP (Wireless ISP) connection, please use General Setup
-> WAN setup menu.**

2-4-1 Using 'Dynamic IP' as broadband connection type


If your Internet service provider will assign IP address to you automatically by 'DHCP' (Dynamic Host Configuration Protocol), you need to select this connection type.

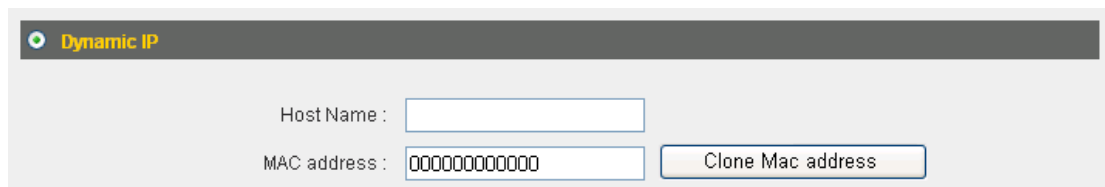A screenshot of a network configuration window titled "Dynamic IP". It features a "Host Name" text box, a "MAC address" text box containing "000000000000", and a "Clone Mac address" button.

Here are descriptions of every setup items:

Item Name	Description
<i>Host Name</i>	<i>Please input the host name of your computer, this is optional, and only required if your service provider asks you to do so.</i>
<i>MAC address</i>	<i>Please input MAC address of your computer here, if your service provider only permits computer with certain MAC address to access internet. If you're using the computer which used to connect to Internet via cable modem, you can simply press 'Clone Mac address' button to fill the MAC address field with the MAC address of your computer.</i>


If you wish to select another connection type as broadband connection type, click 'Back'; or you can click 'OK' to finish with quick setup. You'll see the following messages:

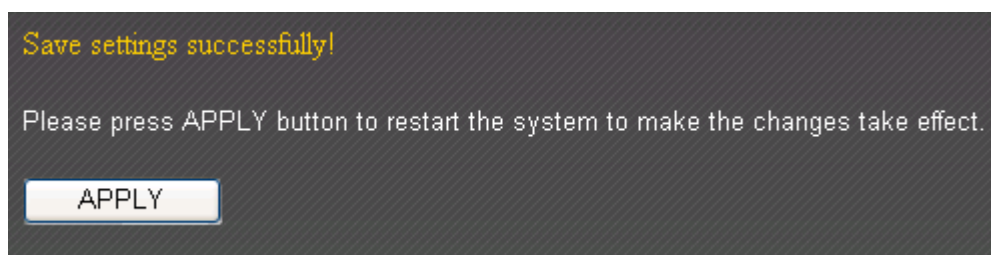A screenshot of a dark grey dialog box with a diagonal line pattern. It displays the text "Save settings successfully!" in yellow, followed by "Please press APPLY button to restart the system to make the changes take effect." in white. At the bottom is a white "APPLY" button.

Please click 'Apply' to save changes you made and restart the broadband router, this requires about 30 seconds and the broadband router will stop responding (this is normal and is not malfunction). You can reconnect to this broadband router and continue on other settings later.

2-4-2 Using 'Static IP' as broadband connection type

If your ISP requires you to set a fixed IP address to establish connection, you can use this connection type to input the IP address information assigned by your ISP. Generally you'll get a letter from your ISP, which indicates an IP address, subnet mask, gateway address, and DNS address.

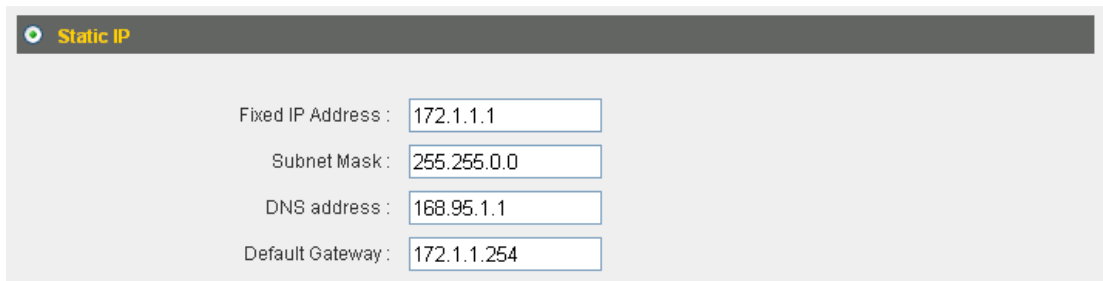

The screenshot shows a configuration window titled "Static IP". It contains four labeled input fields with the following values:


- Fixed IP Address : 172.1.1.1
- Subnet Mask : 255.255.0.0
- DNS address : 168.95.1.1
- Default Gateway : 172.1.1.254

Here are descriptions of every setup items:

Item Name	Description
<i>Fixed IP Address</i>	<i>Please input IP address assigned by your service provider.</i>
<i>Subnet Mask</i>	<i>Please input subnet mask assigned by your service provider.</i>
<i>DNS address</i>	<i>Please input the IP address of DNS server provided by your service provider.</i>
<i>Default Gateway</i>	<i>Please input the IP address of default gateway provided by your service provider.</i> <i>Note: Some ISP may call this as 'Default route'</i>

You must use the addresses provided by your Internet service provider, wrong setting value will cause connection problem.


If you wish to select another connection type as broadband connection type, click 'Back'; or you can click 'OK' to finish with quick setup. You'll see the following messages:

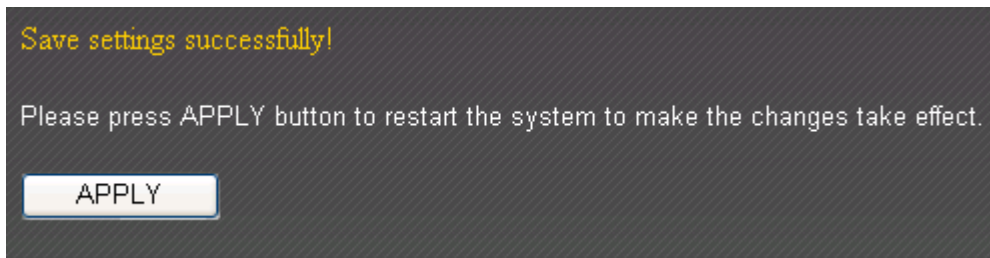

Please click 'Apply' to save changes you made and restart the broadband router, this requires about 30 seconds and the broadband router will stop responding (this is normal and is not malfunction). You can reconnect to this broadband router and continue on other settings later.

2-4-3 Using 'PPPoE' as broadband connection type

If your ISP requires you to establish Internet connection by PPPoE (Point-to-Point Protocol over Ethernet), you can use this connection type to establish Internet connection.

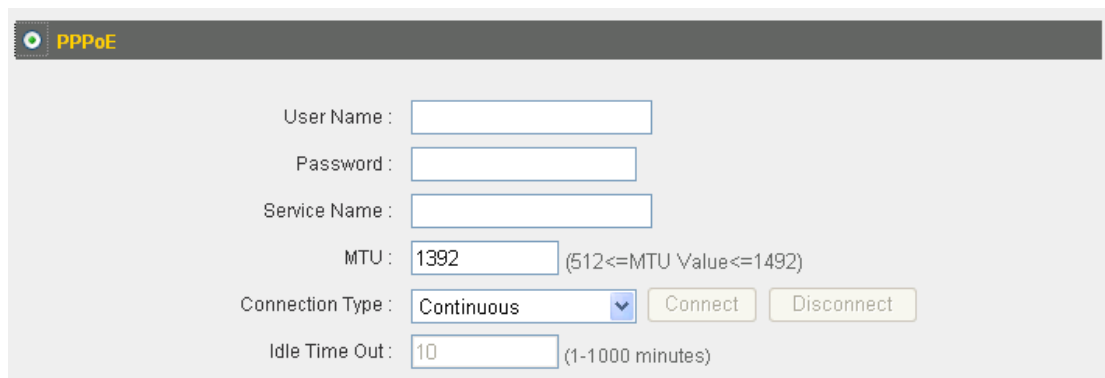


The screenshot displays a web-based configuration page for PPPoE. At the top, there is a header with a green circle icon and the text 'PPPoE'. Below this, the form includes several input fields: 'User Name', 'Password', and 'Service Name', each followed by a text box. The 'MTU' field is set to '1392' with a range '(512<=MTU Value<=1492)' in parentheses. The 'Connection Type' is a dropdown menu currently showing 'Continuous'. To the right of this dropdown are two buttons: 'Connect' and 'Disconnect'. The 'Idle Time Out' field is set to '10' with a range '(1-1000 minutes)' in parentheses.

Here are descriptions of every setup items:

Item Name	Description
<i>User Name</i>	<i>Please input user name assigned by your Internet service provider here.</i>
<i>Password</i>	<i>Please input the password assigned by your Internet service provider here.</i>
<i>Service Name</i>	<i>Please give a name to this Internet service, this is optional.</i>
<i>MTU</i>	<i>Please input the MTU value of your network connection here. If you don't know, you can use default value.</i>
<i>Connection Type</i>	<p><i>Please select the connection type of Internet connection you wish to use. There are 3 options:</i></p> <p><i>'Continuous' - keep internet connection alive, do not disconnect.</i></p> <p><i>'Connect on Demand' - only connects to Internet when there's a connect attempt,</i></p> <p><i>Manual - only connects to Internet when 'Connect' button on this page is pressed, and disconnects when 'Disconnect button is pressed.</i></p>

<i>Idle Time Out</i>	<i>Please specify the time to shutdown internet connect after no internet activity is detected in minute(s). This option is only available when connection type is 'Connect on Demand'.</i>
----------------------	---

If you wish to select another connection type as broadband connection type, click 'Back'; or you can click 'OK' to finish with quick setup. You'll see the following messages:

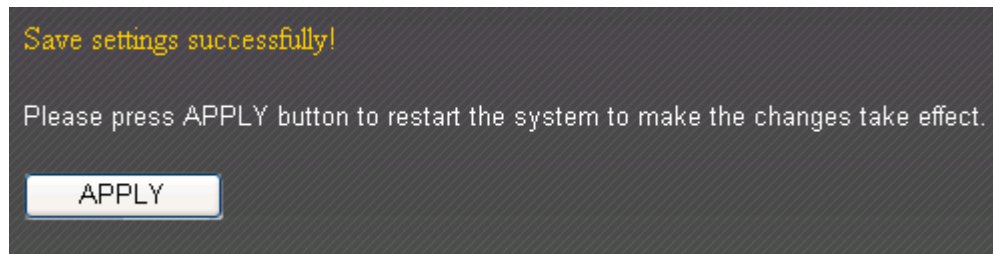


Please click 'Apply' to save changes you made and restart the broadband router, this requires about 30 seconds and the broadband router will stop responding (this is normal and is not malfunction). You can reconnect to this broadband router and continue on other settings later.

2-4-4 Using 'PPTP' as broadband connection type

If your ISP requires you to use PPTP (Point-to-Point Tunneling Protocol) to establish connection, you can select this connection type to establish Internet connection.

PPTP connection type requires two kinds of setting: WAN interface setting (setup IP address) and PPTP setting (PPTP user name and password). Here we start from WAN interface setting first:

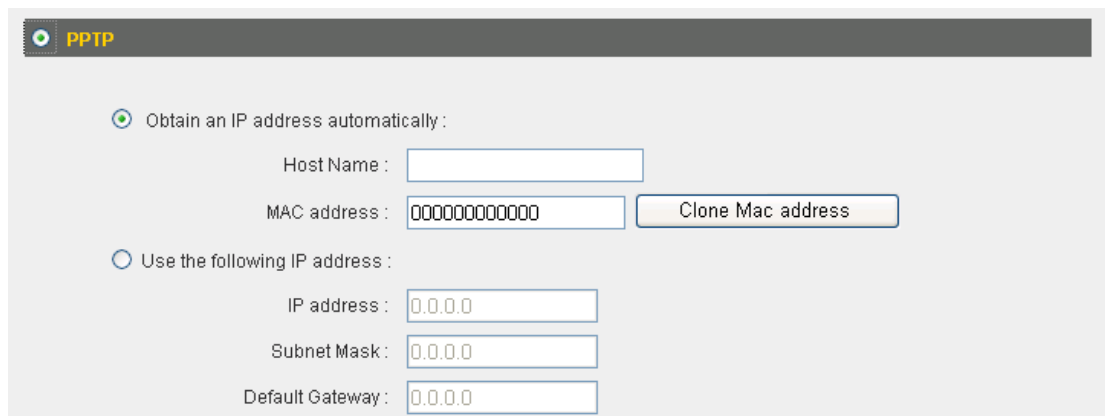


The screenshot shows the 'PPTP' configuration window. At the top, there is a tab labeled 'PPTP'. Below it, there are two radio button options. The first option, 'Obtain an IP address automatically:', is selected. It includes a 'Host Name' text box, a 'MAC address' text box containing '000000000000', and a 'Clone Mac address' button. The second option, 'Use the following IP address:', is unselected. It includes three text boxes: 'IP address' (0.0.0.0), 'Subnet Mask' (0.0.0.0), and 'Default Gateway' (0.0.0.0).

Select the type of how you obtain IP address from your service provider here. You can choose 'Obtain an IP address automatically' (equal to DHCP, please refer to 'Dynamic IP' section above), or 'Use the following IP address' (i.e. static IP address).

WAN interface settings must be correctly set, or the Internet connection will fail even those settings of PPTP settings are correct. Please contact your Internet service provider if you don't know what you should fill in these fields.

Now please go to PPTP settings section:

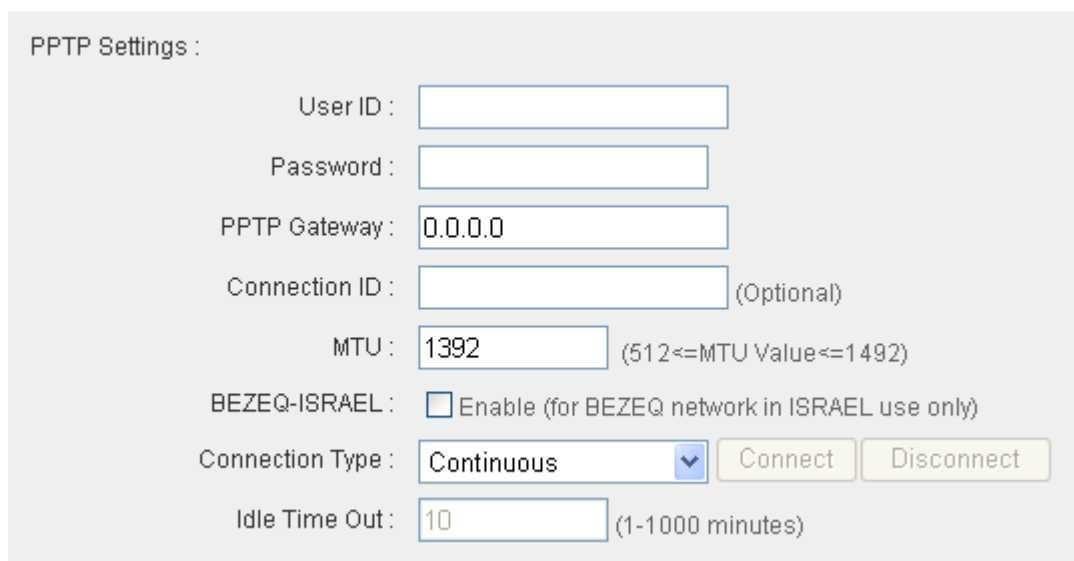


The screenshot shows the 'PPTP Settings' configuration window. It contains several fields: 'User ID' (empty text box), 'Password' (empty text box), 'PPTP Gateway' (0.0.0.0 text box), 'Connection ID' (empty text box with '(Optional)' label), 'MTU' (1392 text box with '(512<=MTU Value<=1492)' label), 'BEZEQ-ISRAEL' (checkbox labeled 'Enable (for BEZEQ network in ISRAEL use only)'), 'Connection Type' (dropdown menu set to 'Continuous' with 'Connect' and 'Disconnect' buttons), and 'Idle Time Out' (10 text box with '(1-1000 minutes)' label).

Here are descriptions of every setup items:

Item Name	Description
<i>User ID</i>	<i>Please input user ID (user name) assigned by your Internet service provider here.</i>
<i>Password</i>	<i>Please input the password assigned by your Internet service provider here.</i>
<i>PPTP Gateway</i>	<i>Please input the IP address of PPTP gateway assigned by your Internet service provider here.</i>
<i>Connection ID</i>	<i>Please input the connection ID here, this is optional and you can leave it blank.</i>
<i>MTU</i>	<i>Please input the MTU value of your network connection here. If you don't know, you can use default value.</i>
<i>BEZEQ-ISRAEL</i>	<i>Check 'Enable' box if you're using BEZEQ network service in Israel. Do not check this box if you're using other Internet service provider.</i>
<i>Connection Type</i>	<p><i>Please select the connection type of Internet connection you wish to use. There are 3 options:</i></p> <p><i>'Continuous' - keep internet connection alive, do not disconnect.</i></p> <p><i>'Connect on Demand' - only connects to Internet when there's a connect attempt,</i></p> <p><i>Manual - only connects to Internet when 'Connect' button on this page is pressed, and disconnects when 'Disconnect button is pressed.</i></p>
<i>Idle Time Out</i>	<i>Please specify the time to shutdown internet connect after no internet activity is detected in minute(s). This option is only available when connection type is 'Connect on Demand'.</i>

If you wish to select another connection type as broadband connection type, click 'Back'; or you can click 'OK' to finish with quick setup. You'll see the following messages:

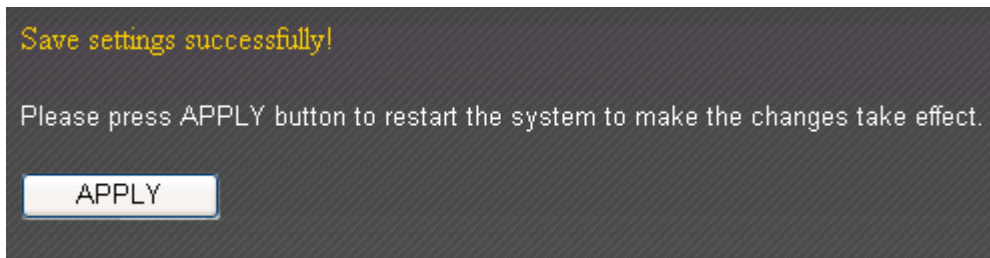


Please click 'Apply' to save changes you made and restart the broadband router, this requires about 30 seconds and the broadband router will stop responding (this is normal and is not malfunction). You can reconnect to this broadband router and continue on other settings later.

2-4-5 Using 'L2TP' as broadband connection type

If your ISP requires you to use L2TP (Layer-2 Tunneling Protocol) to establish connection, you can select this connection type to establish Internet connection. L2TP is another popular connection method for xDSL and other Internet connection types, and all required setting items are the same with PPTP connection.

Like PPTP, there are two kinds of required setting, we'll start from 'WAN Interface Settings':

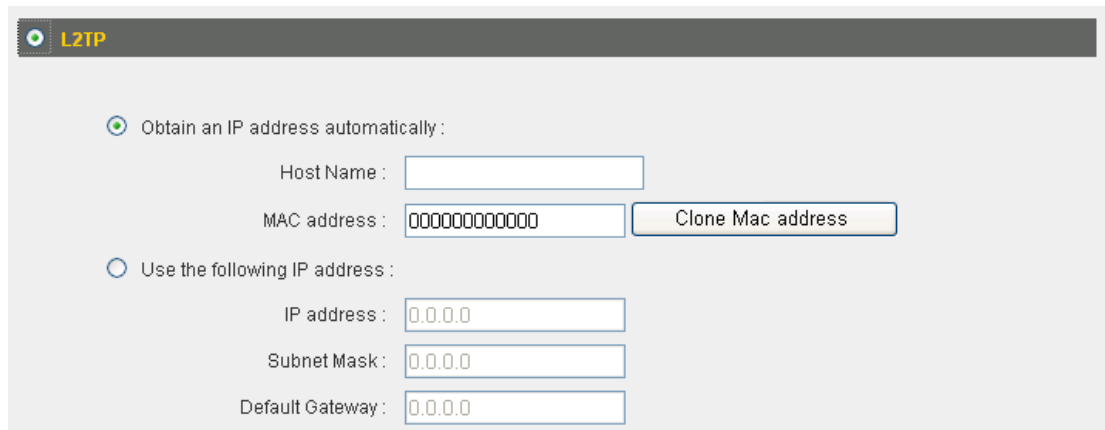


The screenshot shows the 'L2TP' tab in a configuration window. It has two radio button options for IP address acquisition. The first option, 'Obtain an IP address automatically', is selected and includes fields for 'Host Name' and 'MAC address' (with a 'Clone Mac address' button). The second option, 'Use the following IP address', is unselected and includes fields for 'IP address', 'Subnet Mask', and 'Default Gateway'. All fields are currently empty or contain placeholder zeros.

Please select the type of how you obtain IP address from your service provider here. You can choose 'Obtain an IP address automatically' (equal to DHCP, please refer to 'Dynamic IP' section above), or 'Use the following IP address' (equal to static IP address, please refer to 'PPPoE' section above).

WAN interface settings must be correctly set, or the Internet connection will fail even those settings of L2TP settings are correct. Please contact your Internet service provider if you don't know what you should fill in these fields.

Now please go to L2TP settings section:

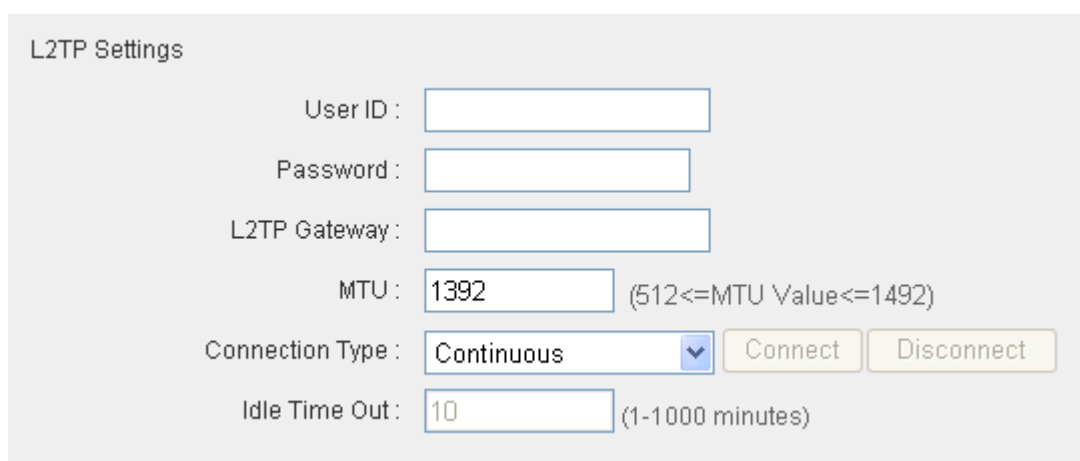


The screenshot shows the 'L2TP Settings' section. It contains several input fields: 'User ID', 'Password', 'L2TP Gateway', 'MTU' (set to 1392 with a range of 512 to 1492), 'Connection Type' (set to 'Continuous' with a dropdown arrow), and 'Idle Time Out' (set to 10 with a range of 1 to 1000 minutes). There are also 'Connect' and 'Disconnect' buttons.

Here are descriptions of every setup items:

Item Name	Description
<i>User ID</i>	<i>Please input user ID (user name) assigned by your Internet service provider here.</i>
<i>Password</i>	<i>Please input the password assigned by your Internet service provider here.</i>
<i>L2TP Gateway</i>	<i>Please input the IP address of PPTP gateway assigned by your Internet service provider here.</i>
<i>MTU</i>	<i>Please input the MTU value of your network connection here. If you don't know, you can use default value.</i>
<i>Connection Type</i>	<p><i>Please select the connection type of Internet connection you wish to use. There are 3 options:</i></p> <p><i>'Continuous' - keep internet connection alive, do not disconnect.</i></p> <p><i>'Connect on Demand' - only connects to Internet when there's a connect attempt,</i></p> <p><i>Manual - only connects to Internet when 'Connect' button on this page is pressed, and disconnects when 'Disconnect button is pressed.</i></p>
<i>Idle Time Out</i>	<i>Please specify the time to shutdown internet connect after no internet activity is detected in minute(s). This option is only available when connection type is 'Connect on Demand'.</i>

If you wish to select another connection type as broadband connection type, click 'Back'; or you can click 'OK' to finish with quick setup. You'll see the following messages:

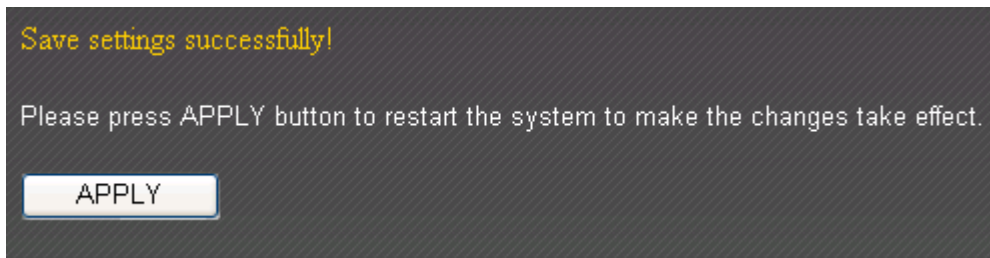

Please click 'Apply' to save changes you made and restart the broadband router, this requires about 30 seconds and the broadband router will stop responding (this is normal and is not malfunction). You can reconnect to this broadband router and continue on other settings later.

Chapter III: General Setup

This broadband router provides a 'Quick Setup' menu, and you can setup basic parameters of this broadband router.

 
Please follow the following instructions to use 'Quick Setup' menu:

1. Click 'General Setup' after logged in.



- 2.

All available setup items will appear as a list under 'General Setup' tab:

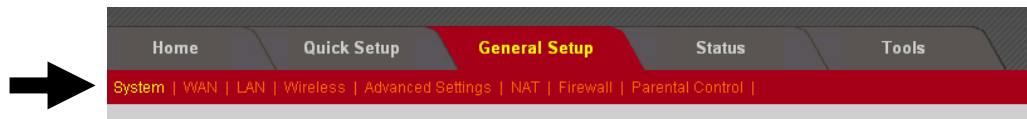

You can select one setup item from the list:

System - Basic system settings (please go to chapter 3-1)

WAN - Setup WAN port manually (please go to chapter 3-2)

LAN - Setup LAN port manually (please go to chapter 3-3)

Wireless - Setup wireless interface manually
(please go to chapter 3-4)

Advance Settings - Setup advanced settings of this broadband router
(Please go to chapter 3-5)


NAT – Network Address Translation settings
(Please go to chapter 3-6)

Firewall – Firewall settings (Please go to chapter 3-7)

Parental Control – Parental control, controls children from accessing inappropriate web site (Please go to chapter 3-8)

3-1 System

You can setup basic system settings of this broadband router in 'System' menu:

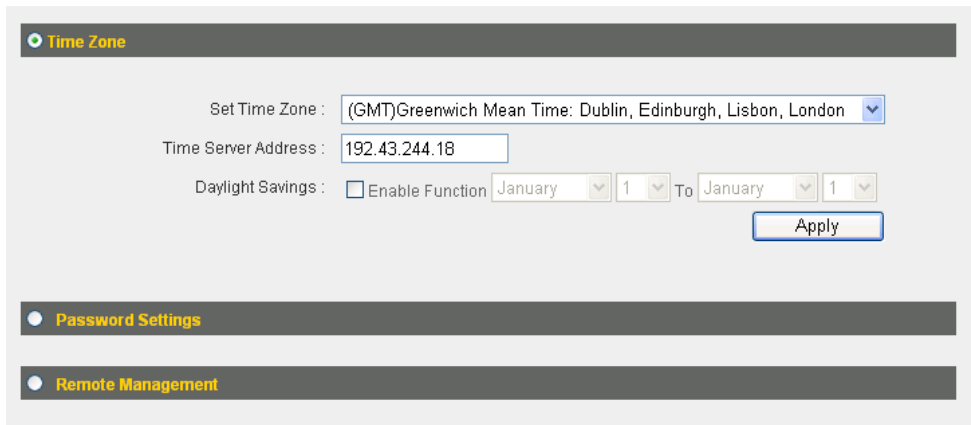

The screenshot shows a web-based configuration interface for a broadband router. At the top, there is a dark grey header bar with a yellow dot and the text 'Time Zone'. Below this, the 'Set Time Zone' is set to '(GMT)Greenwich Mean Time: Dublin, Edinburgh, Lisbon, London' with a dropdown arrow. The 'Time Server Address' is '192.43.244.18'. The 'Daylight Savings' section has an unchecked checkbox for 'Enable Function', followed by two date pickers: 'January 1' and 'To January 1'. An 'Apply' button is located to the right of the date pickers. Below the 'Time Zone' section, there are two more sections: 'Password Settings' and 'Remote Management', each with a yellow dot and text.

Time Zone

Set Time Zone : (GMT)Greenwich Mean Time: Dublin, Edinburgh, Lisbon, London

Time Server Address : 192.43.244.18

Daylight Savings : ☐ Enable Function January 1 To January 1

Apply


Password Settings

Remote Management

Please select the setting item you wish to set, then click 'Apply' button to proceed. You can also click 'Previous' button to back to 'System' menu.

3-1-1 Time Zone

You can change the time zone settings of this broadband router. It's important to have correct date and time setting if you need to read system log and use build-in firewall functions.

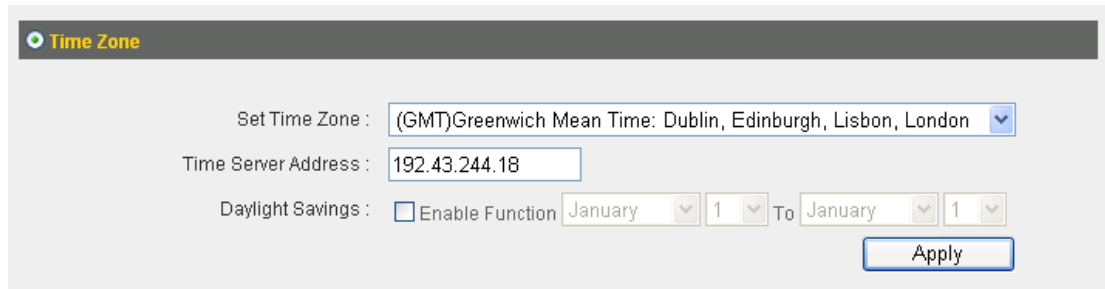


The screenshot shows the 'Time Zone' configuration page. At the top, there is a title bar with a green circle icon and the text 'Time Zone'. Below this, there are three main settings: 'Set Time Zone' with a dropdown menu showing '(GMT)Greenwich Mean Time: Dublin, Edinburgh, Lisbon, London'; 'Time Server Address' with a text input field containing '192.43.244.18'; and 'Daylight Savings' with an unchecked checkbox labeled 'Enable Function' and two date pickers set to 'January 1' and 'January 1'. An 'Apply' button is located at the bottom right of the form.

The descriptions of every setting item are listed as follow:

Item Name	Description
Time Zone	Please select a time zone of the country or region of your residence here. If you can't find the country / region of your residence here, please select a city / region which time zone is the same with the country / region of your residence.
Time Server Address	This load-balance router supports NTP (Network Time Protocol). NTP server will provide correct time for this router to setup the date and time of the router automatically. Please input the host name or IP address of NTP server here. If you don't know the host name or IP address of time server, please ask network administrator or use 'pool.ntp.org' as time server.
Daylight Savings	If the country / region of your residence use daylight saving time, please check 'Enable Function' box, and select the beginning and ending date of daylight time saving.

3-1-2 Password Settings

You can change the web login password of this broadband router. If you keep using the default password '1234', other people may access the configuration interface without your permission. Please change the password as soon as possible.

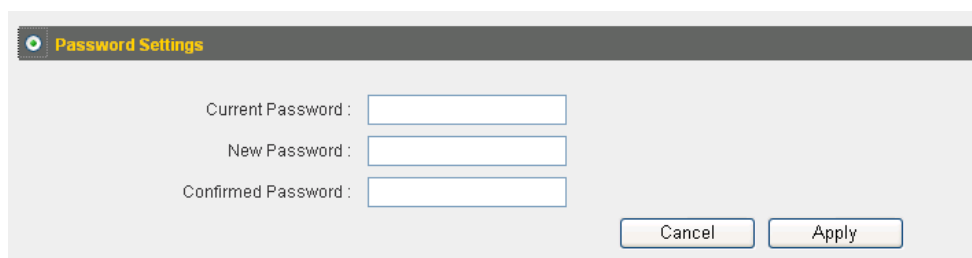The image shows a web browser window displaying the 'Password Settings' page. At the top, there is a dark header bar with a green circular icon and the text 'Password Settings'. Below the header, the page has a light gray background. There are three input fields: 'Current Password :', 'New Password :', and 'Confirmed Password :'. Each label is followed by a white rectangular input box with a thin blue border. At the bottom right of the form area, there are two buttons: 'Cancel' and 'Apply', both with a light gray background and a thin blue border.

The descriptions of every setting item are listed as follow:


Item Name	Description
<i>Current Password</i>	<i>Please input current password here.</i>
<i>New Password</i>	<i>Please input new password here.</i>
<i>Confirmed Password</i>	<i>Please input new password here again for confirmation.</i>

After you inputted current and new password, click 'Apply' to save changes, or you can click 'Cancel' to keep current password untouched. Please note that you'll be asked for username and password for login again if you changed password.

3-1-3 Remote Management

If you need to manage this broadband router outside of your LAN (i.e. from Internet), you can use this function to assign a remote IP address which is permitted to connect to this broadband router's web management interface from Internet.

If it's not required for you to manage this broadband router from Internet, you can disable this function to improve security.

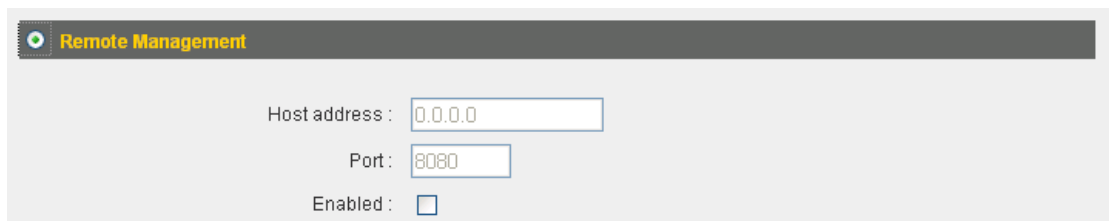

Remote Management

Host address :


Port :

Enabled : ☐

The descriptions of every setting item are listed as follow:

Item Name	Description
Host address	<i>Input the IP address of the remote host you wish to initiate a management access.</i>
Port	<i>You can define the port number this router should expect an incoming connection request. If you're providing a web service (default port number is 80), you should try to use other port number. You can use the default port setting '8080', or something like '32245' or '1429'. (Any integer between 1 and 65534)</i>
Enabled	<i>Check this box to enable remote management function. When this box is unchecked, no one can access this broadband router's management interface from Internet.</i>

Please click 'Apply' to save changes in this page, or you can click 'Cancel' to discard all settings in this page. After you click 'Apply' button, you'll see the following message:

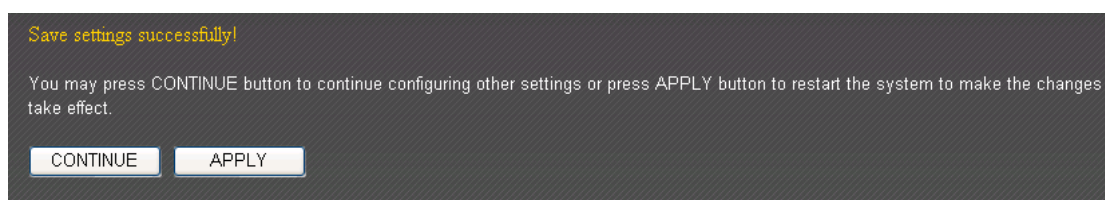

Save settings successfully!


You may press CONTINUE button to continue configuring other settings or press APPLY button to restart the system to make the changes take effect.

Please click 'Apply' to save changes you made and restart the broadband router, this requires about 30 seconds and the broadband router will stop responding (this is normal and is not malfunction). You can reconnect to this broadband router and continue on other settings later.

To setup other items now and restart broadband router later, click 'Continue'.

3-2 WAN

You can setup WAN (Wide Area Network, i.e. Internet) connections of this broadband router in 'WAN' menu:

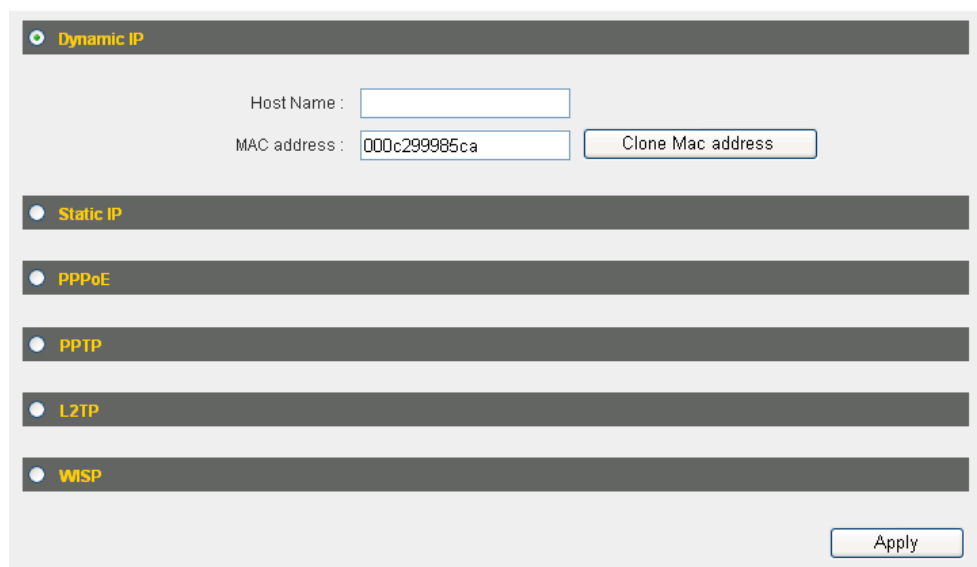


The screenshot shows the WAN configuration interface. At the top, there is a tab labeled 'Dynamic IP' with a green dot. Below it, there are two input fields: 'Host Name' and 'MAC address'. The 'MAC address' field contains the text '000c299985ca'. To the right of the 'MAC address' field is a button labeled 'Clone Mac address'. Below these fields are five radio buttons, each with a label: 'Static IP', 'PPPoE', 'PPTP', 'L2TP', and 'WSP'. The 'Dynamic IP' tab is currently selected. At the bottom right of the form is an 'Apply' button.

Please select the WAN connection type you wish to use to setup Internet connection, and click 'Apply' to save changes you made.

If you're not sure which connection type you should use, please contact your ISP's service hotline and ask for help. You'll not be able to connect to Internet with wrong connection type.

3-2-1 Dynamic IP


Dynamic IP means your ISP will assign an IP address to you automatically by 'DHCP' (Dynamic Host Configuration Protocol). Dynamic IP is often used by cable modem Internet connection.

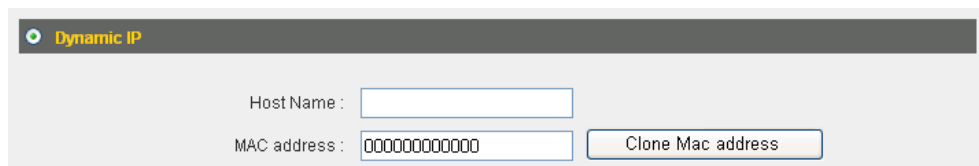A screenshot of a web-based configuration interface for Dynamic IP. At the top, there is a dark grey header bar with a green circular icon and the text "Dynamic IP". Below the header, the interface is light grey. It contains two input fields: "Host Name :" followed by an empty text box, and "MAC address :" followed by a text box containing "000000000000". To the right of the MAC address field is a button labeled "Clone Mac address".

Here are descriptions of every setup items:

Item Name	Description
<i>Host Name</i>	<i>Please input the host name of your computer, this is optional, and only required if your service provider asks you to do so.</i>
<i>MAC address</i>	<i>Please input MAC address of your computer here, if your service provider only permits computer with certain MAC address to access internet. If you're using the computer which used to connect to Internet via cable modem, you can simply press 'Clone Mac address' button to fill the MAC address field with the MAC address of your computer.</i>

If you wish to select another connection type as broadband connection type, click 'Back'; or you can click 'OK' to finish with quick setup. You'll see the following messages:

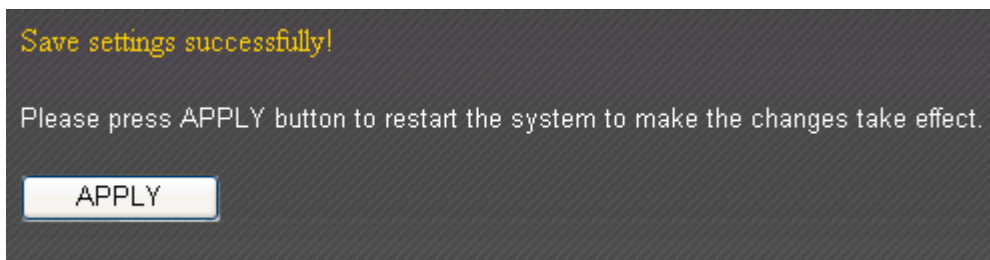


Please click 'Apply' to save changes you made and restart the broadband router, this requires about 30 seconds and the broadband router will stop responding (this is normal and is not malfunction). You can reconnect to this broadband router and continue on other settings later.

3-2-2 Static IP

Some ISP will give you a fixed IP address, and ask you to use this IP address to establish Internet connection. In this case, you have to select this connection type to establish connection with your ISP.

Please note that if your ISP is assigning a fixed IP address to you by DHCP or PPPoE, do not select this connection type. Please contact your ISP's service hotline to make sure you really need to use static IP as connection type.

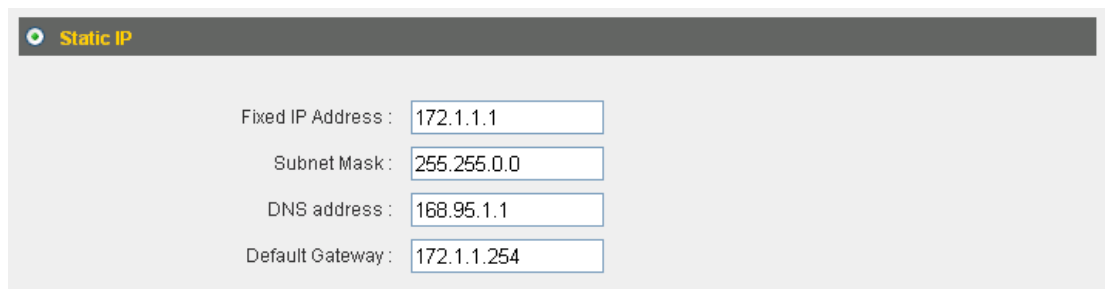

Static IP

Fixed IP Address : 172.1.1.1

Subnet Mask : 255.255.0.0

DNS address : 168.95.1.1


Default Gateway : 172.1.1.254

Here are descriptions of every setup items:

Item Name	Description
<i>IP address assigned by your by your service provider</i>	<i>Please input IP address assigned by your service provider.</i>
<i>Subnet Mask</i>	<i>Please input subnet mask assigned by your service provider.</i>
<i>DNS address</i>	<i>Please input the IP address of DNS server provided by your service provider.</i>
<i>Service Provider Gateway Address</i>	<i>Please input the IP address of DNS server provided by your service provider.</i>

You must use the addresses provided by your Internet service provider, wrong setting value will cause connection problem.


If you wish to select another connection type as broadband connection type, click 'Back'; or you can click 'OK' to finish with quick setup. You'll see the following messages:

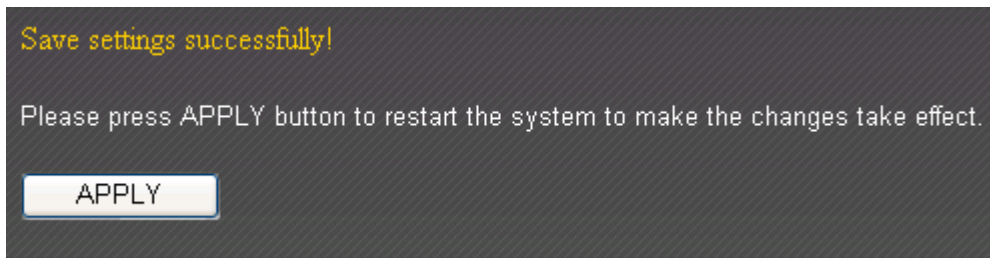

Please click 'Apply' to save changes you made and restart the broadband router, this requires about 30 seconds and the broadband router will stop responding (this is normal and is not malfunction). You can reconnect to this broadband router and continue on other settings later.

3-2-3 PPPoE

If your ISP requires you to establish Internet connection by PPPoE (Point-to-Point Protocol over Ethernet), you can use this connection type to establish Internet connection.

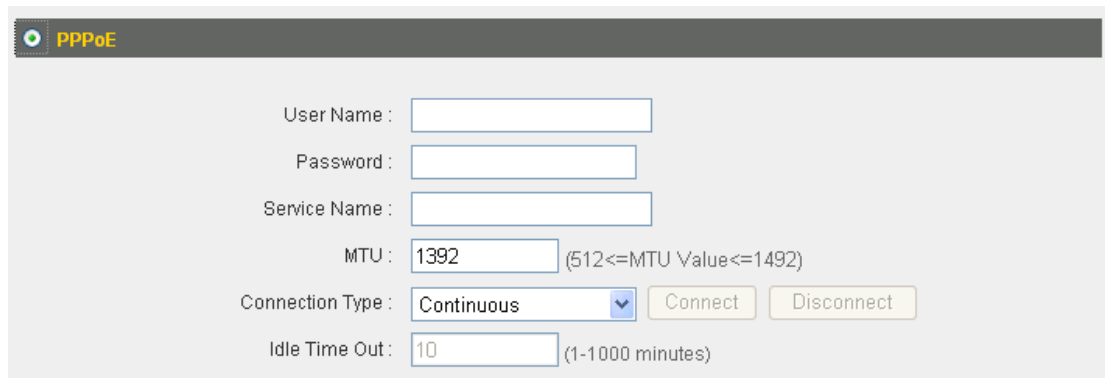


The screenshot shows a web-based configuration interface for PPPoE. At the top, there is a header with a green circle icon and the text 'PPPoE'. Below the header, there are several input fields and buttons. The fields are: 'User Name :', 'Password :', 'Service Name :', 'MTU : 1392 (512<=MTU Value<=1492)', 'Connection Type : Continuous', and 'Idle Time Out : 10 (1-1000 minutes)'. There are two buttons: 'Connect' and 'Disconnect'.

Here are descriptions of every setup items:

Item Name	Description
User Name	Please input user name assigned by your Internet service provider here.
Password	Please input the password assigned by your Internet service provider here.
Service Name	Please give a name to this Internet service, this is optional.
MTU	Please input the MTU value of your network connection here. If you don't know, you can use default value.
Connection Type	<p>Please select the connection type of Internet connection you wish to use. There are 3 options:</p> <p>'Continuous' - keep internet connection alive, do not disconnect.</p> <p>'Connect on Demand' - only connects to Internet when there's a connect attempt,</p> <p>Manual - only connects to Internet when 'Connect' button on this page is pressed, and disconnects when 'Disconnect button is pressed.</p>

<i>Idle Time Out</i>	<i>Please specify the time to shutdown internet connect after no internet activity is detected in minute(s). This option is only available when connection type is 'Connect on Demand'.</i>
----------------------	---

If you wish to select another connection type as broadband connection type, click 'Back'; or you can click 'OK' to finish with quick setup. You'll see the following messages:

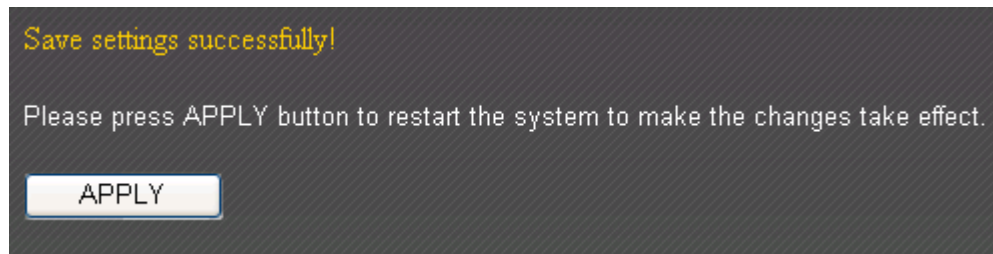


Please click 'Apply' to save changes you made and restart the broadband router, this requires about 30 seconds and the broadband router will stop responding (this is normal and is not malfunction). You can reconnect to this broadband router and continue on other settings later.

3-2-4 PPTP

If your ISP requires you to use PPTP (Point-to-Point Tunneling Protocol) to establish connection, you can select this connection type to establish Internet connection.

PPTP requires two kinds of setting: WAN interface setting (setup IP address) and PPTP setting (PPTP user name and password). Here we start from WAN interface setting first:

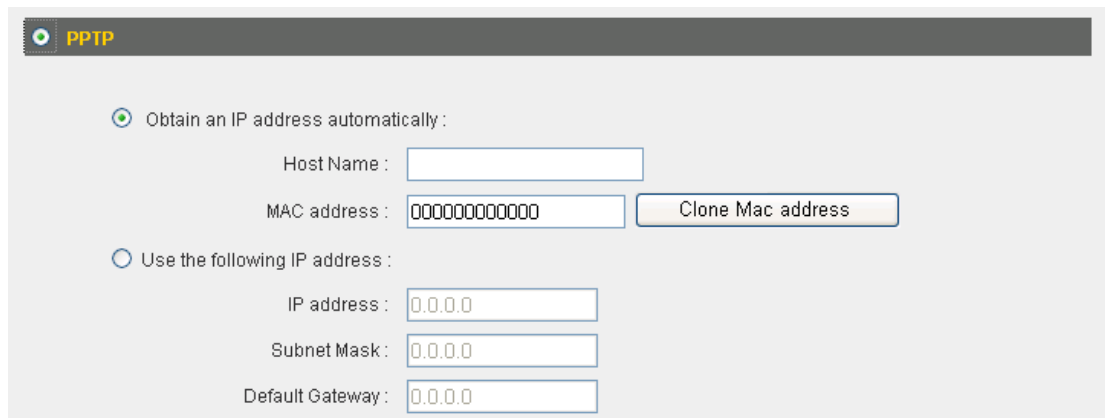

PPTP

☒ Obtain an IP address automatically :

Host Name :

MAC address :

☐ Use the following IP address :

IP address :


Subnet Mask :

Default Gateway :

Select the type of how you obtain IP address from your service provider here. You can choose 'Obtain an IP address automatically' (equal to DHCP, please refer to 'Cable Modem' section above), or 'Use the following IP address' (i.e. static IP address).

WAN interface settings must be correctly set, or the Internet connection will fail even those settings of PPTP settings are correct. Please contact your Internet service provider if you don't know what you should fill in these fields.

Now please go to PPTP settings section:

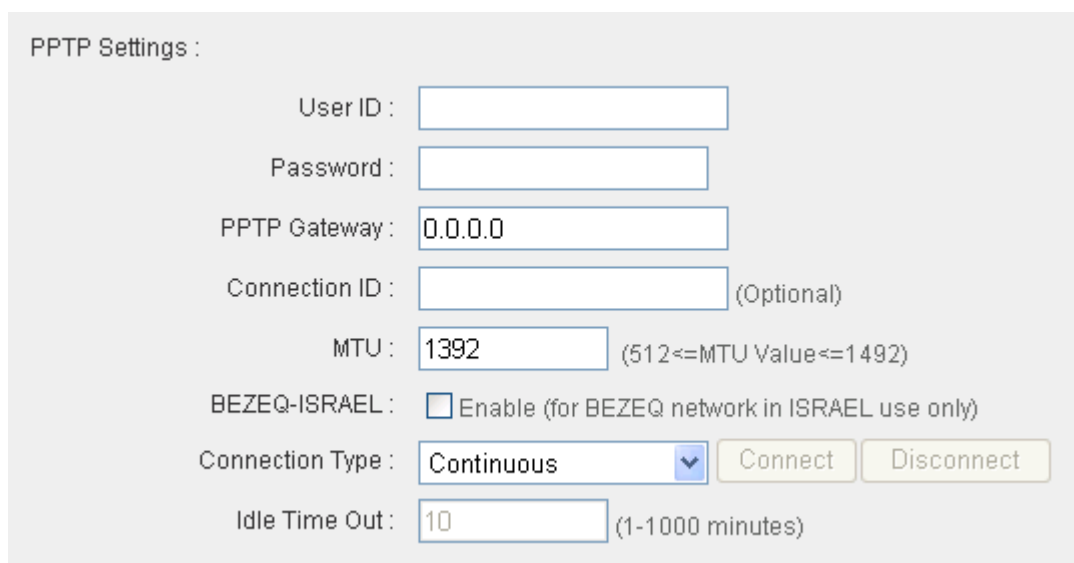

PPTP Settings :

User ID :

Password :

PPTP Gateway :

Connection ID : (Optional)

MTU : (512<=MTU Value<=1492)

BEZEQ-ISRAEL : ☐ Enable (for BEZEQ network in ISRAEL use only)


Connection Type :

Idle Time Out : (1-1000 minutes)

Here are descriptions of every setup items:

Item Name	Description
<i>User ID</i>	<i>Please input user ID (user name) assigned by your Internet service provider here.</i>
<i>Password</i>	<i>Please input the password assigned by your Internet service provider here.</i>
<i>PPTP Gateway</i>	<i>Please input the IP address of PPTP gateway assigned by your Internet service provider here.</i>
<i>Connection ID</i>	<i>Please input the connection ID here, this is optional and you can leave it blank.</i>
<i>MTU</i>	<i>Please input the MTU value of your network connection here. If you don't know, you can use default value.</i>
<i>BEZEQ-ISRAEL</i>	<i>Check 'Enable' box if you're using BEZEQ network service in Israel. Do not check this box if you're using other Internet service provider.</i>
<i>Connection Type</i>	<p><i>Please select the connection type of Internet connection you wish to use. There are 3 options:</i></p> <p><i>'Continuous' - keep internet connection alive, do not disconnect.</i></p> <p><i>'Connect on Demand' - only connects to Internet when there's a connect attempt,</i></p> <p><i>Manual - only connects to Internet when 'Connect' button on this page is pressed, and disconnects when 'Disconnect button is pressed.</i></p>
<i>Idle Time Out</i>	<i>Please specify the time to shutdown internet connect after no internet activity is detected in minute(s). This option is only available when connection type is 'Connect on Demand'.</i>

If you wish to select another connection type as broadband connection type, click 'Back'; or you can click 'OK' to finish with quick setup. You'll see the following messages:

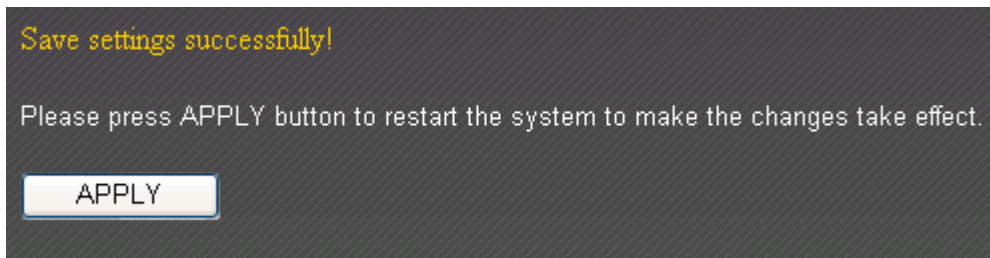


Please click 'Apply' to save changes you made and restart the broadband router, this requires about 30 seconds and the broadband router will stop responding (this is normal and is not malfunction). You can reconnect to this broadband router and continue on other settings later.

3-2-5 L2TP

If your ISP requires you to use L2TP (Layer-2 Tunneling Protocol) to establish connection, you can select this connection type to establish Internet connection. L2TP is another popular connection method for xDSL and other Internet connection types, and all required setting items are the same with PPTP connection.

Like PPTP, there are two kinds of required setting, we'll start from 'WAN Interface Settings':

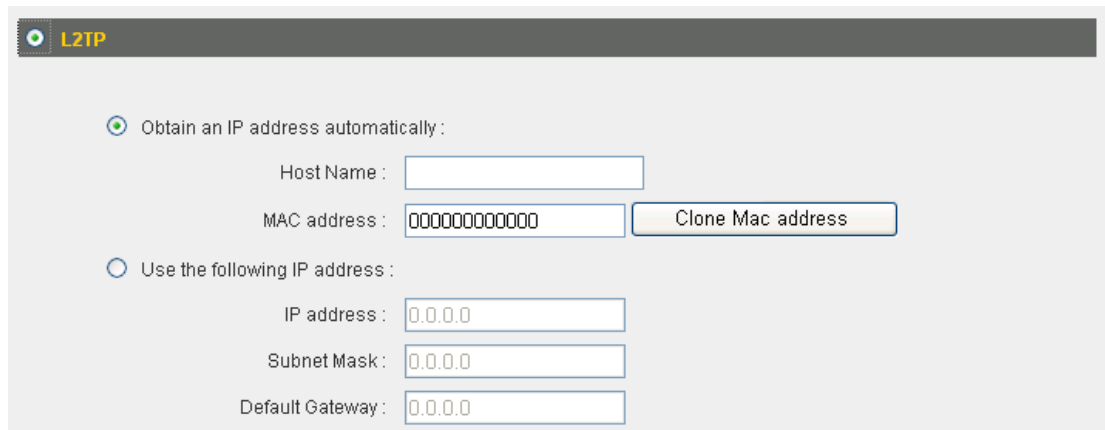

L2TP

☒ Obtain an IP address automatically :

Host Name :

MAC address :

☐ Use the following IP address :

IP address :


Subnet Mask :

Default Gateway :

Please select the type of how you obtain IP address from your service provider here. You can choose 'Obtain an IP address automatically' (equal to DHCP, please refer to 'Dynamic IP' section above), or 'Use the following IP address' (equal to static IP address, please refer to 'PPPoE' section above).

WAN interface settings must be correctly set, or the Internet connection will fail even those settings of L2TP settings are correct. Please contact your Internet service provider if you don't know what you should fill in these fields.

Now please go to L2TP settings section:

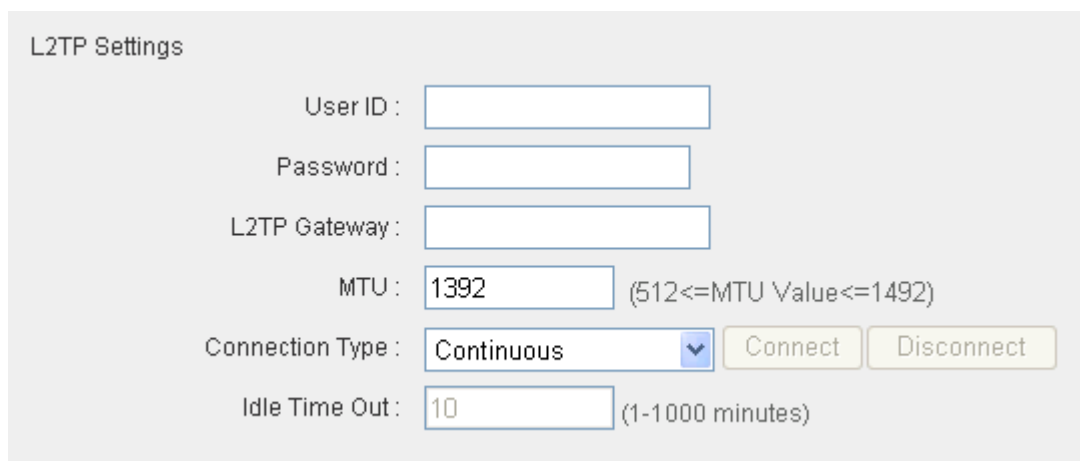

L2TP Settings

User ID :

Password :

L2TP Gateway :

MTU : (512<=MTU Value<=1492)


Connection Type :

Idle Time Out : (1-1000 minutes)

Here are descriptions of every setup items:

Item Name	Description
<i>User ID</i>	<i>Please input user ID (user name) assigned by your Internet service provider here.</i>
<i>Password</i>	<i>Please input the password assigned by your Internet service provider here.</i>
<i>L2TP Gateway</i>	<i>Please input the IP address of PPTP gateway assigned by your Internet service provider here.</i>
<i>MTU</i>	<i>Please input the MTU value of your network connection here. If you don't know, you can use default value.</i>
<i>Connection Type</i>	<i>Please select the connection type of Internet connection you wish to use. There are 3 options:</i> <i>'Continuous' - keep internet connection alive, do not disconnect.</i> <i>'Connect on Demand' - only connects to Internet when there's a connect attempt,</i> <i>Manual - only connects to Internet when 'Connect' button on this page is pressed, and disconnects when 'Disconnect button is pressed.</i>
<i>Idle Time Out</i>	<i>Please specify the time to shutdown internet connect after no internet activity is detected in minute(s). This option is only available when connection type is 'Connect on Demand'.</i>


If you wish to select another connection type as broadband connection type, click 'Back'; or you can click 'OK' to finish with quick setup. You'll see the following messages:

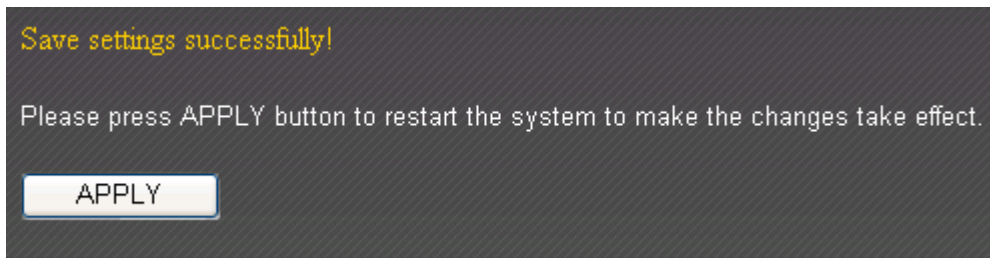

Please click 'Apply' to save changes you made and restart the broadband router, this requires about 30 seconds and the broadband router will stop responding (this is normal and is not malfunction). You can reconnect to this broadband router and continue on other settings later.

3-2-6 WISP

WISP (Wireless ISP) is a connection method which establishes Internet connection by wireless network. In this mode, BR-6228nS_nC broadband router will act as a wireless client and connect to another wireless access point to establish Internet connection.

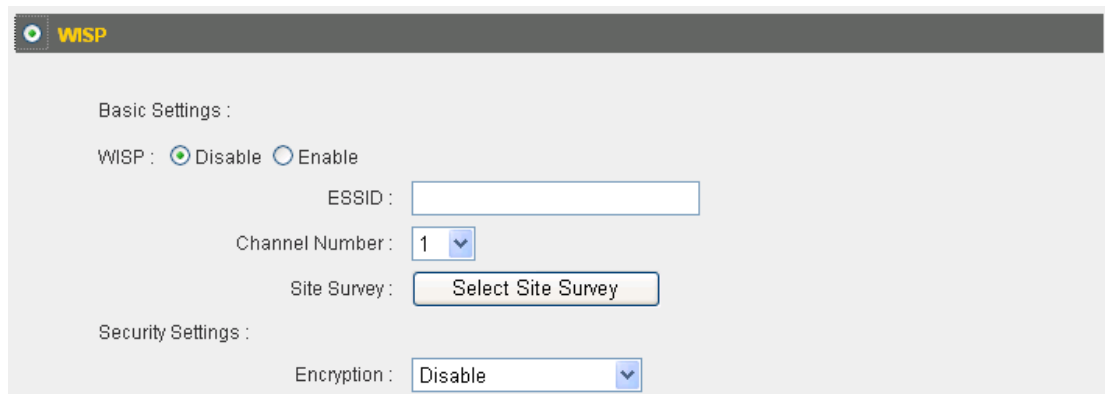

Basic Settings :

WISP : ☒ Disable ☐ Enable

ESSID :


Channel Number :

Site Survey :

Security Settings :


Encryption :

Here are descriptions of every setup items:

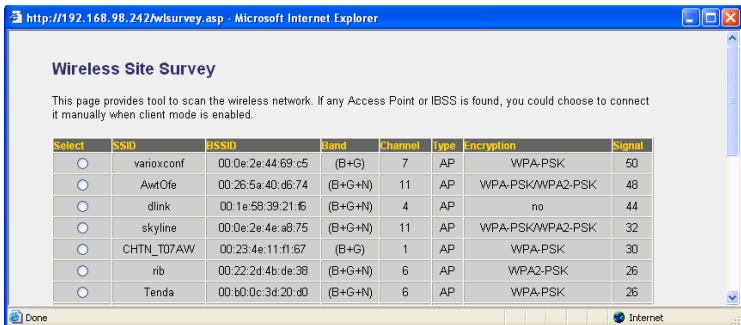Item Name	Description
<i>WISP</i>	<i>Enable or disable WISP function.</i>
<i>ESSID</i>	<i>Input the ESSID (i.e. the name of wireless access point) of your ISP's access point.</i>
<i>Channel Number</i>	<i>Select the wireless channel number of wireless access point you wish to connect.</i>
<i>Site Survey</i>	<i>Click this button to scan for wireless access points in range:</i>  <i>Select a wireless access point from the list (click 'Select' of the access point), and click 'Done' button located at the bottom of this window. If the wireless access point you wish to connect is not in the list, click 'Refresh' one or more times to rescan for wireless access points.</i>

<i>Security</i>	<i>According to the security settings of the wireless access point you wish to connect, you'll be prompted to input WEP key / WPA passphrase so you can pass the security check of access point.</i> <i>A correct WEP key / WPA passphrase is required to connect to wireless access point with security setting. Please ask your wireless ISP for correct WEP key / WPA passphrase.</i>
-----------------	---

If you wish to select another connection type as broadband connection type, click 'Back'; or you can click 'OK' to finish with quick setup. You'll see the following messages:

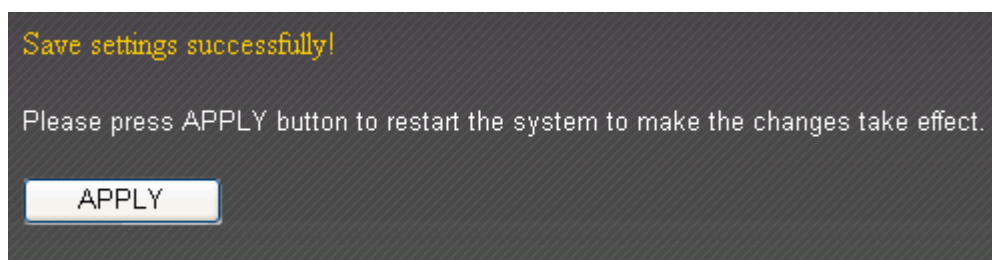

Please click 'Apply' to save changes you made and restart the broadband router, this requires about 30 seconds and the broadband router will stop responding (this is normal and is not malfunction). You can reconnect to this broadband router and continue on other settings later.

3-3 LAN (Wired)

You can setup Wired LAN (Local Area Network) connections of this broadband router in 'LAN' menu. This broadband router has 4 LAN ports and they'll all use the same LAN IP address settings. Please also note that both wired and wireless LAN uses the same LAN IP address settings, too.

LAN settings split into 3 sections: LAN IP, DHCP Server, and Static DHCP leases. Please refer to corresponding sections below for detailed setup instructions.

3-3-1 Before you start - Suggestions for deciding an IP address to be used with this broadband router

Before all computers using wired Ethernet connection (i.e. those computers connect to this router's LAN port 1 to 4 by Ethernet cable) or wireless connection can communicate with each other and access internet, they must have a valid IP address.

There are two ways to assign IP addresses to computers: static IP address (set the IP address for every computer manually), and dynamic IP address (IP address of computers will be assigned by router automatically). It's recommended for most of computers to use dynamic IP address, it will save a lot of time on setting IP addresses for every computer, especially when there are a lot of computers in your network; for servers and network devices which will provide services to other computer and users that come from Internet, static IP address should be used, so other computes can locate the server.

This broadband router has a built-in DHCP (Dynamic Host Configuration Protocol) server, and can help you to assign IP addresses to your client computers. Almost all network computers / devices manufactured after year 1995 are compatible with DHCP, and you can let this broadband router to assign the IP address to client computers / devices for you.

Suggestions on IP address numbering plan:


If you have no idea on how to define an IP address plan for your network, here are some suggestions.

- 1. A valid IP address has 4 fields: a.b.c.d, for most of home and company users, it's suggested to use 192.168.c.d, where c is an integer between 0 and 254, and d is an integer between 1 and 254. This router is capable to work with up to 253 clients, so you can set 'd' field of IP address of router as 1 or 254 (or any number between 1 and 254), and pick a number between 0 and 254 for field 'c'.**
- 2. In most cases, you should use '255.255.255.0' as subnet mask, which allows up to 253 clients (this also meets router's capability of working with up to 253 clients).**
- 3. For all servers and network devices which will provide services to other people (like Internet service, print service, and file service), they should use static IP address. Give each of them a unique number between 1 and 253, and maintain a list, so everyone can locate those servers easily.**
- 4. For computers which are not dedicated to provide specific service to others, they should use dynamic IP address.**

If you don't really understand the descriptions listed above, don't worry! We will provide recommended setup values below.

3-3-2 LAN IP

You can use this setting to assign an IP address to the LAN interface of this broadband router.

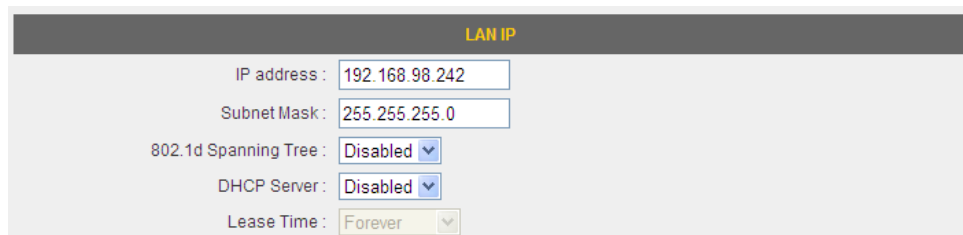

LAN IP

IP address : 192.168.98.242

Subnet Mask : 255.255.255.0

802.1d Spanning Tree : Disabled

DHCP Server : Disabled

Lease Time : Forever

Here are descriptions of every setup items:

Item Name	Description
<i>IP address</i>	<i>Please input the IP address of this broadband router's LAN interface.</i>
<i>Subnet Mask</i>	<i>Please input subnet mask for this network.</i>
<i>802.1d Spanning Tree</i>	<i>If you wish to activate 802.1d spanning tree function, select 'Enabled' for setup item '802.1d Spanning Tree', or set it to 'Disabled'.</i>
<i>DHCP Server</i>	<i>If you want to activate DHCP server function of this router, select 'Enabled', or set it to 'Disabled'.</i>
<i>Lease Time</i>	<i>Please select the lease time for every DHCP leases here. You can select the time period from the dropdown list, and the DHCP client will be forced to obtain a new IP address from this broadband router after this period of time. You can select 'Forever' if you're using this broadband router with only few computers (less than 30 computers)</i>

Recommended Value if you don't know what to fill:

IP Address: 192.168.1.254

Subnet Mask: 255.255.255.0

802.1d Spanning Tree: Disabled

DHCP Server: Enabled

3-3-3 DHCP Server

You can use this setting to decide the range of IP address leases.

DHCP Server

Start IP :

192.168.2.100

End IP :

192.168.2.200

Domain Name :

DNS1 address :

168.95.1.1

DNS2 address :

168.95.192.1

Here are descriptions of every setup items:

Item Name	Description
<i>Start IP</i>	<i>Please input the start IP address of the IP leases range.</i>
<i>End IP</i>	<i>Please input the end IP address of the IP leases range.</i>
<i>Domain Name</i>	<i>If you wish, you can also input the domain name for your network. This is optional.</i>
<i>DNS1 address</i>	<i>Input the IP address of DNS server provided by your ISP here. This field is REQUIRED.</i>
<i>DNS2 address</i>	<i>Input another IP address of DNS server provided by your ISP here. This field is optional and you can leave it blank.</i>

Recommended Value if you don't know what to fill:

Lease Time: Two Weeks (or 'Forever', if you have less than 20 computers)

Start IP: 192.168.1.1

End IP: 192.168.1.200

Domain Name: (leave it blank)

NOTE:

- 1. The number of the last field (mentioned 'd' field) of 'End IP' must be greater than 'Start IP', and can not the same with router's IP address.**
- 2. The former three fields of IP address of 'Start IP', 'End IP', and 'IP Address of 'LAN IP' section (mentioned 'a', 'b', and 'c' field) should be the same.**
- 3. These settings will affect wireless clients, too.**

3-3-4 Static DHCP Leases

If you wish to assign a fixed IP address to certain computers / devices by DHCP, you can use this function to establish a MAC-to-IP address table here, so you can assign a specific IP address to a specific computer / network device by its MAC address.

Static DHCP Leases Table

This allows only 16 sets of addresses.

NO.	MAC address	IP address	Select
-----	-------------	------------	--------

Delete Selected

Delete All

Reset

☐ Enable Static DHCP Leases

New

MAC address :

IP address :

Add

Clear

Here are descriptions of every setup items:

Item Name	Description
Enable Static DHCP Leases	Check this box to enable this function, otherwise uncheck it to disable this function.
MAC Address	Input the MAC address of the computer or network device (total 12 characters, with character from 0 to 9, and from a to f, like '001122aabbcc').
IP address	Input the IP address you want to assign to this computer or network device.
Add	After you inputted MAC address and IP address pair, click this button to add the pair to static DHCP leases table.
Clear	Click this button to remove texts in MAC address and IP address field.

All MAC-to-IP address entries will be listed in this page, and this broadband router supports up to 16 static DHCP leases:

Static DHCP Leases Table

This allows only 16 sets of addresses.

NO.	MAC address	IP address	Select
1	11:22:33:44:55:66	192.168.2.200	<input type="checkbox"/>
2	aa:bb:cc:dd:ee:ff	192.168.2.100	<input type="checkbox"/>

☐ Enable Static DHCP Leases

MAC address : IP address :

To delete one or more entries listed here, please check the box of the mapping entry (under 'Select'), and click 'Delete Selected' button.

If you wish to delete all mapping entries, click 'Delete All' button. To deselect all checked boxes, click 'Reset' button.

When you finished with the settings in this page, you can click 'Apply' button to save changes you made in this page, or you can click 'Cancel' to discard changes. After you click 'Apply' button, you'll see the following messages:


Save settings successfully!

You may press CONTINUE button to continue configuring other settings or press APPLY button to restart the system to make the changes take effect.

Please click 'Apply' to save changes you made and restart the broadband router, this requires about 30 seconds and the broadband router will stop responding (this is normal and is not malfunction). You can reconnect to this broadband router and continue on other settings later.

3-2 Wireless

You can setup Wireless LAN connection parameters of this broadband router in 'Wireless' menu:

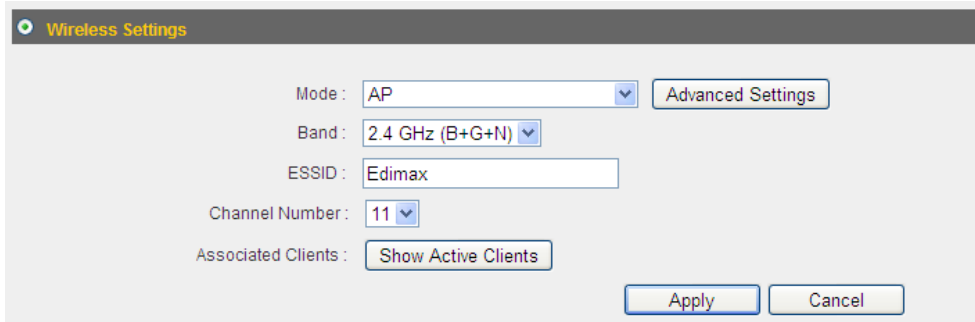


The image shows a 'Wireless Settings' configuration window. It has a title bar with a green circle icon and the text 'Wireless Settings'. The window contains several settings: 'Mode' is set to 'AP' with a dropdown arrow; 'Band' is set to '2.4 GHz (B+G+N)' with a dropdown arrow; 'ESSID' is set to 'Edimax' in a text box; 'Channel Number' is set to '11' with a dropdown arrow; and 'Associated Clients' has a 'Show Active Clients' button. There is an 'Advanced Settings' button next to the Mode dropdown. At the bottom right are 'Apply' and 'Cancel' buttons.

Mode :	AP	Advanced Settings
Band :	2.4 GHz (B+G+N)	
ESSID :	Edimax	
Channel Number :	11	
Associated Clients :	Show Active Clients	
		Apply Cancel

Please select one setting in this menu, then click 'Apply' to proceed. If you wish to go back to previous page, click 'Previous'.

3-2-1 Basic Settings

You can set basic settings of wireless LAN here.

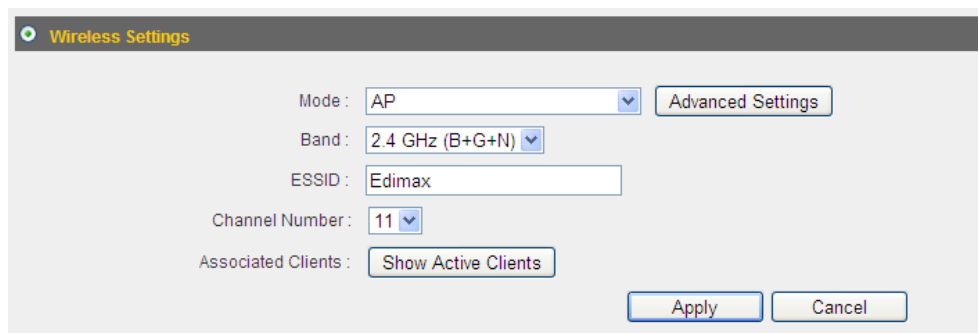A screenshot of a 'Wireless Settings' dialog box. The title bar is dark grey with a green circle icon and the text 'Wireless Settings'. The main area is light grey. It contains several settings: 'Mode' is a dropdown menu set to 'AP'; 'Band' is a dropdown menu set to '2.4 GHz (B+G+N)'; 'ESSID' is a text input field containing 'Edimax'; 'Channel Number' is a dropdown menu set to '11'; and 'Associated Clients' is a button labeled 'Show Active Clients'. There is also an 'Advanced Settings' button next to the 'Mode' dropdown. At the bottom right are 'Apply' and 'Cancel' buttons.

Please select the working mode of this broadband router from 'Mode' dropdown list first:

a. *AP*: Standard wireless AP (access point).

b. *Station-Infrastructure*: This broadband router acts as both wireless communication client and server - connects to another wireless access point as client, and serves other wireless clients as server.

c. *AP Bridge-Point to Point*: Connect this router with another broadband router, to expand the scope of network.


d. *AP Bridge-Point to Multi-Point*: Connect this router with up to four other broadband routers, to expand the scope of network.

e. *AP Bridge-WDS*: Connect this router with up to four WDS-capable broadband routers, to expand the scope of network.

f. *Universal Repeater*: This broadband router will repeat other wireless access point's signal to extend its wireless signal coverage, and also acts as a wireless access point to serve other wireless clients.

3-2-1-1 AP mode

In AP mode, the following settings will appear:

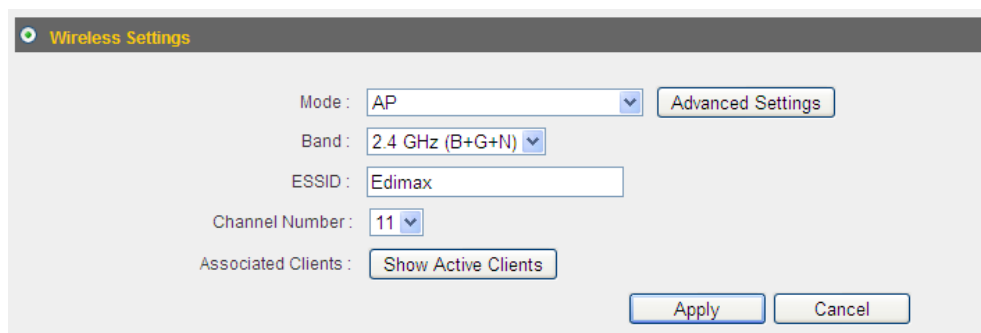

The image shows a 'Wireless Settings' window. At the top, there's a title bar with a green circle icon and the text 'Wireless Settings'. Below this, there are several settings: 'Mode' is set to 'AP' with a dropdown arrow; next to it is a button labeled 'Advanced Settings'. 'Band' is set to '2.4 GHz (B+G+N)' with a dropdown arrow. 'ESSID' is set to 'Edimax' in a text box. 'Channel Number' is set to '11' with a dropdown arrow. 'Associated Clients' has a button labeled 'Show Active Clients'. At the bottom right, there are two buttons: 'Apply' and 'Cancel'.


Here are descriptions of every setup items:

Item Name	Description
<i>Band</i>	<p><i>Please select the radio band from one of following options:</i></p> <p><i>2.4 GHz (B): 2.4GHz band, only allows 802.11b wireless network client to connect this router (maximum transfer rate 11Mbps).</i></p> <p><i>2.4 GHz (N): 2.4GHz band, only allows 802.11n wireless network client to connect this router (maximum transfer rate 300Mbps).</i></p> <p><i>2.4 GHz (B+G): 2.4GHz band, only allows 802.11b and 802.11g wireless network client to connect this router (maximum transfer rate 11Mbps for 802.11b clients, and maximum 54Mbps for 802.11g clients).</i></p> <p><i>2.4 GHz (G): 2.4GHz band, only allows 802.11g wireless network client to connect this router (maximum transfer rate 11Mbps).</i></p> <p><i>2.4 GHz (B+G+N): 2.4GHz Band, Allows 802.11b, 802.11g, and 802.11N wireless clients. It's recommends to select this band to maximize compatibility.</i></p>
<i>ESSID</i>	<p><i>This is the name of broadband router. You can</i></p>

	<p><i>type any alphanumeric characters here, maximum 32 characters. ESSID is used to identify your own broadband router from others when there are other broadband routers in the same area. Default SSID is 'default', it's recommended to change default ESSID value to the one which is meaningful to you, like myhome, office_room1, etc.</i></p>
<i>Channel Number</i>	<p><i>Please select a channel from the dropdown list of 'Channel Number', available channel numbers are 1 to 13. You can choose any channel number you want to use, and almost all wireless clients can locate the channel you're using automatically without any problem. However, it's still useful to remember the channel number you use, some wireless client supports manual channel number select, and this would help in certain scenario when there is some radio communication problem.</i></p>
<i>Associated Clients</i>	<p><i>Click 'Show Active Clients' button to show the list of all connected wireless clients. You can click 'Refresh' in new window to get latest list again, or click 'Close' to close the window.</i></p> <p><i>Please note that if you have pop-up blocker installed, you may have to disable it or tell your pop-up blocker to allow the popup window, or you will not be able to see the wireless client list window.</i></p>

TIPS: You can try to change channel number to another one if you think the data transfer rate is too slow, or keep having problem while transferring the file over wireless network. There could be some other broadband routers using the same channel, which will disturb the radio communication between wireless client and the broadband router.

When you finished with the settings in this page, you can click 'Apply' button to save changes you made in this page, or you can click 'Cancel' to discard changes. After you click 'Apply' button, you'll see the following messages:

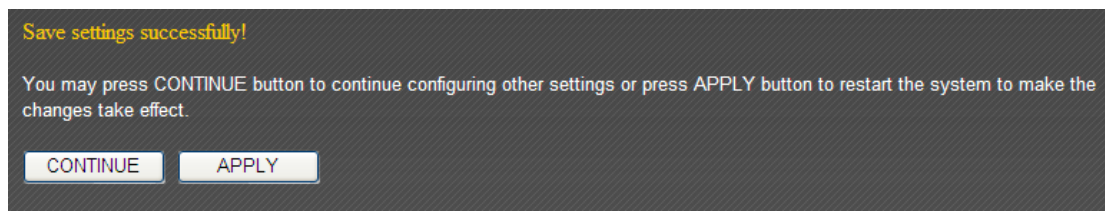


Please click 'Apply' to save changes you made and restart the broadband router, this requires about 30 seconds and the broadband router will stop responding (this is normal and is not malfunction). You can reconnect to this broadband router and continue on other settings later.

You can click 'Continue' to continue on other settings without restart the broadband router, however, the changes you made will not take effect before you restart the broadband router.

3-2-1-2 Station-Infrastructure

In Station-Infrastructure mode, you can select a wireless access point to become its wireless client, and also acts as wireless access point to serve other wireless clients. If you have the access privilege of other wireless access point nearby, and you wish to use that access point to access Internet, you can use this connection type:

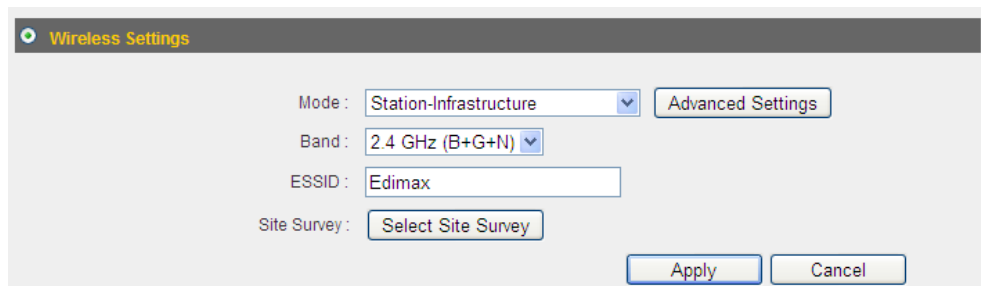
A screenshot of the 'Wireless Settings' dialog box. The title bar is dark grey with a green circle icon and the text 'Wireless Settings'. The main area is light grey. It contains several fields: 'Mode' is a dropdown menu set to 'Station-Infrastructure' with a blue arrow icon; next to it is a button labeled 'Advanced Settings'; 'Band' is a dropdown menu set to '2.4 GHz (B+G+N)' with a blue arrow icon; 'ESSID' is a text input field containing 'Edimax'; 'Site Survey' is a button labeled 'Select Site Survey'. At the bottom right are two buttons: 'Apply' and 'Cancel'.

Here are descriptions of every setup items:

Item Name	Description
<i>Band</i>	<p><i>Please select the radio band from one of following options (must be the same with the wireless access point you wish to connect):</i></p> <p><i>2.4 GHz (B): 2.4GHz band, only allows 802.11b wireless network client to connect this router (maximum transfer rate 11Mbps).</i></p> <p><i>2.4 GHz (N): 2.4GHz band, only allows 802.11n wireless network client to connect this router (maximum transfer rate 300Mbps).</i></p> <p><i>2.4 GHz (B+G): 2.4GHz band, only allows 802.11b and 802.11g wireless network client to connect this router (maximum transfer rate 11Mbps for 802.11b clients, and maximum 54Mbps for 802.11g clients).</i></p> <p><i>2.4 GHz (G): 2.4GHz band, only allows 802.11g wireless network client to connect this router (maximum transfer rate 11Mbps).</i></p> <p><i>2.4 GHz (B+G+N): 2.4GHz Band, Allows 802.11b, 802.11g, and 802.11N wireless</i></p>

	<i>clients. It's recommends to select this band to maximize compatibility.</i>
<i>ESSID</i>	<i>This is the name of broadband router. You can type any alphanumerical characters here, maximum 32 characters. ESSID is used to identify your own broadband router from others when there are other broadband routers in the same area. Default SSID is 'default', it's recommended to change default ESSID value to the one which is meaningful to you, like myhome, office_room1, etc.</i>
<i>Site Survey</i>	<p><i>Click 'Select Site Survey' and a popup window will appear. All reachable wireless access points will be shown in the window. Select the wireless access point you wish to connect from the list, and click 'Done'. If the wireless access point you wish to connect is not listed, you can click 'Refresh' to rescan.</i></p> <p><i>If you still can't find the wireless access point you wish to connect, please move the broadband router to the place nearer to the access point you wish to connect.</i></p>
<i>WLAN MAC</i>	<i>Some wireless access points will only allow clients with certain MAC address to establish connection. In this case, you can input the MAC address that will be accepted by the wireless access point you wish to connect here. You can also click 'Clone MAC' button to use the MAC address of your computer (the one you used to connect to the web management interface currently).</i>
<i>Auto MAC Clone</i>	<i>If you wish to use the MAC address of wired LAN interface of this broadband router, select 'Enable', or select 'Disable' to not to use the MAC address of the wired LAN interface of this broadband router.</i>

When you finished with the settings in this page, you can click 'Apply' button to save changes you made in this page, or you can click 'Cancel' to discard changes. After you click 'Apply' button, you'll see the following messages:

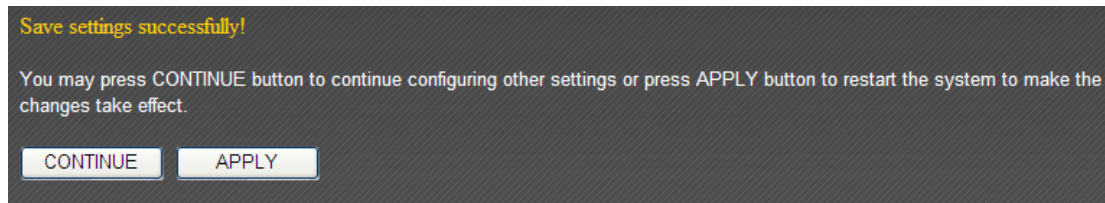

Please click 'Apply' to save changes you made and restart the broadband router, this requires about 30 seconds and the broadband router will stop responding (this is normal and is not malfunction). You can reconnect to this broadband router and continue on other settings later.


You can click 'Continue' to continue on other settings without restart the broadband router, however, the changes you made will not take effect before you restart the broadband router.

3-2-1-3 AP Bridge-Point to Point

In this mode, you can use this broadband router as a wireless network bridge and let all computers connected to the LAN ports of both wireless access points to communicate with each other. **This mode supports only one wireless access point peer.**

Please note that when you select this mode, this broadband router will act as wireless bridge only, and will not accept other wireless clients.

Also, you can connect to the wireless access point with the same functionality only. If you wish to connect to the wireless access points made by other manufacturer, please select 'AP Bridge-WDS' mode if the wireless access point you wish to connect supports WDS.

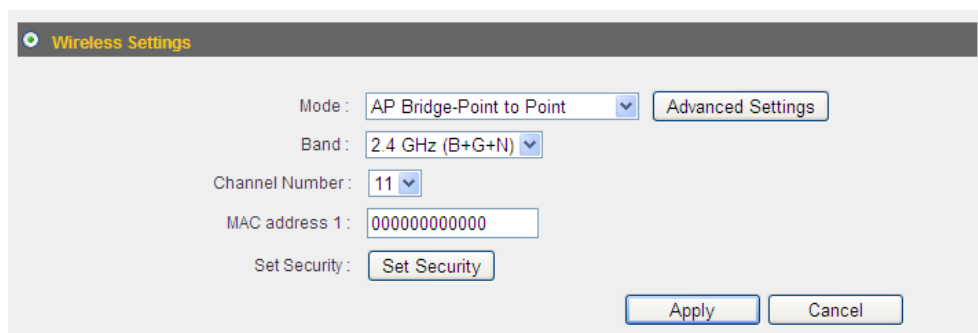
A screenshot of a 'Wireless Settings' configuration window. The window has a title bar with a green circle icon and the text 'Wireless Settings'. Inside, there are several settings: 'Mode' is set to 'AP Bridge-Point to Point' with a dropdown arrow; next to it is an 'Advanced Settings' button. 'Band' is set to '2.4 GHz (B+G+N)' with a dropdown arrow. 'Channel Number' is set to '11' with a dropdown arrow. 'MAC address 1' is set to '000000000000' in a text box. 'Set Security' is a button. At the bottom right are 'Apply' and 'Cancel' buttons.

Here are descriptions of every setup items:

Item Name	Description
<i>Band</i>	<p><i>Please select the radio band from one of following options (must be the same with the wireless access point you wish to connect):</i></p> <p><i>2.4 GHz (B): 2.4GHz band, only allows 802.11b wireless network client to connect this router (maximum transfer rate 11Mbps).</i></p> <p><i>2.4 GHz (N): 2.4GHz band, only allows 802.11n wireless network client to connect this router (maximum transfer rate 300Mbps).</i></p> <p><i>2.4 GHz (B+G): 2.4GHz band, only allows 802.11b and 802.11g wireless network client to connect this router (maximum transfer rate 11Mbps for 802.11b clients, and maximum 54Mbps for 802.11g clients).</i></p>

	<p><i>2.4 GHz (G): 2.4GHz band, only allows 802.11g wireless network client to connect this router (maximum transfer rate 11Mbps).</i></p> <p><i>2.4 GHz (B+G+N): 2.4GHz Band, Allows 802.11b, 802.11g, and 802.11N wireless clients. It's recommends to select this band to maximize compatibility.</i></p>
<i>Channel Number</i>	<i>Select the channel number you wish to use; both access points must use the same channel.</i>
<i>MAC address 1</i>	<i>Input the MAC address of another wireless access point (the one you wish to connect).</i>
<i>Set Security</i>	<i>Click 'Set Security' button to set security functions of this wireless connection to improve security. Please refer to chapter 3-2-1-7 for detailed instructions.</i>

When you finished with the settings in this page, you can click 'Apply' button to save changes you made in this page, or you can click 'Cancel' to discard changes. After you click 'Apply' button, you'll see the following messages:

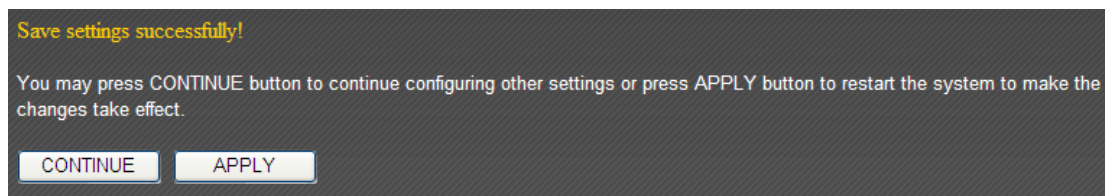

Please click 'Apply' to save changes you made and restart the broadband router, this requires about 30 seconds and the broadband router will stop responding (this is normal and is not malfunction). You can reconnect to this broadband router and continue on other settings later.

You can click 'Continue' to continue on other settings without restart the broadband router, however, the changes you made will not take effect before you restart the broadband router.

3-2-1-4 AP Bridge-Point to Multi-Point

In this mode, you can use this broadband router as a wireless network bridge and let all computers connected to the LAN ports of all wireless access points to communicate with each other. **This mode supports up to four wireless access point peers.**

The image shows a 'Wireless Settings' window. At the top, there's a title bar with a green circle icon and the text 'Wireless Settings'. Below it, the 'Mode' is set to 'AP Bridge-Point to Multi-Point' with a dropdown arrow. To the right of the mode is an 'Advanced Settings' button. Below the mode, the 'Band' is set to '2.4 GHz (B+G+N)' with a dropdown arrow. Below the band, the 'Channel Number' is set to '11' with a dropdown arrow. Below the channel number, there are four 'MAC address' fields, each with a text input box containing '000000000000'. Below the MAC addresses, there is a 'Set Security' button. At the bottom right, there are 'Apply' and 'Cancel' buttons.

Please note that when you select this mode, this broadband router will act as wireless bridge only, and will not accept other wireless clients.


Also, you can connect to the wireless access point with the same functionality only. If you wish to connect to the wireless access points made by other manufacturer, please select 'AP Bridge-WDS' mode if the wireless access point you wish to connect supports WDS.

Here are descriptions of every setup items:

Item Name	Description
<i>Band</i>	<p><i>Please select the radio band from one of following options (must be the same with the wireless access point you wish to connect):</i></p> <p><i>2.4 GHz (B): 2.4GHz band, only allows 802.11b wireless network client to connect this router (maximum transfer rate 11Mbps).</i></p> <p><i>2.4 GHz (N): 2.4GHz band, only allows 802.11n wireless network client to connect this router (maximum transfer rate 300Mbps).</i></p> <p><i>2.4 GHz (B+G): 2.4GHz band, only allows</i></p>

	<p><i>802.11b and 802.11g wireless network client to connect this router (maximum transfer rate 11Mbps for 802.11b clients, and maximum 54Mbps for 802.11g clients).</i></p> <p><i>2.4 GHz (G): 2.4GHz band, only allows 802.11g wireless network client to connect this router (maximum transfer rate 11Mbps).</i></p> <p><i>2.4 GHz (B+G+N): 2.4GHz Band, Allows 802.11b, 802.11g, and 802.11N wireless clients. It's recommends to select this band to maximize compatibility.</i></p>
<i>Channel Number</i>	<i>Select the channel number you wish to use; all access points must use the same channel.</i>
<i>MAC address 1 to 4</i>	<i>Input the MAC address of other wireless access points (the access points you wish to connect).</i>
<i>Set Security</i>	<i>Click 'Set Security' button to set security functions of this wireless connection to improve security. Please refer to chapter 3-2-1-7 for detailed instructions.</i>

When you finished with the settings in this page, you can click 'Apply' button to save changes you made in this page, or you can click 'Cancel' to discard changes. After you click 'Apply' button, you'll see the following messages:

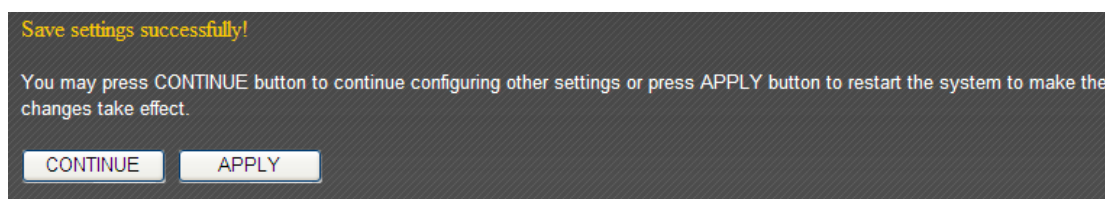

Please click 'Apply' to save changes you made and restart the broadband router, this requires about 30 seconds and the broadband router will stop responding (this is normal and is not malfunction). You can reconnect to this broadband router and continue on other settings later.

You can click 'Continue' to continue on other settings without restart the broadband router, however, the changes you made will not take effect before you restart the broadband router.

3-2-1-5 AP Bridge-WDS

In this mode, this broadband router acts as both wireless communication bridge and wireless access point. This broadband router can establish communication with up to four WDS-compatible wireless access points, and let all computers connected to the LAN ports of every wireless access points communicate with each other. The broadband router is able to serve other wireless clients and acts as a wireless access point at the same time.

The screenshot shows the 'Wireless Settings' page with the following configuration:


- Mode: AP Bridge-WDS (selected in a dropdown menu)
- Band: 2.4 GHz (B+G+N) (selected in a dropdown menu)
- ESSID: Edimax (text input)
- Channel Number: 11 (selected in a dropdown menu)
- Associated Clients: Show Active Clients (button)
- MAC address 1: 000000000000 (text input)
- MAC address 2: 000000000000 (text input)
- MAC address 3: 000000000000 (text input)
- MAC address 4: 000000000000 (text input)
- Set Security: Set Security (button)
- Buttons: Apply, Cancel

Here are descriptions of every setup items:

Item Name	Description
Band	<p>Please select the radio band from one of following options (must be the same with the wireless access point you wish to connect):</p> <p>2.4 GHz (B): 2.4GHz band, only allows 802.11b wireless network client to connect this router (maximum transfer rate 11Mbps).</p> <p>2.4 GHz (N): 2.4GHz band, only allows 802.11n wireless network client to connect this router (maximum transfer rate 300Mbps).</p> <p>2.4 GHz (B+G): 2.4GHz band, only allows 802.11b and 802.11g wireless network client to connect this router (maximum transfer rate 11Mbps for 802.11b clients, and maximum</p>

	<p>54Mbps for 802.11g clients).</p> <p>2.4 GHz (G): 2.4GHz band, only allows 802.11g wireless network client to connect this router (maximum transfer rate 11Mbps).</p> <p>2.4 GHz (B+G+N): 2.4GHz Band, Allows 802.11b, 802.11g, and 802.11N wireless clients. It's recommends to select this band to maximize compatibility.</p>
ESSID	<p>This is the name of broadband router. You can type any alphanumerical characters here, maximum 32 characters. ESSID is used to identify your own broadband router from others when there are other broadband routers in the same area. Default SSID is 'default', it's recommended to change default ESSID value to the one which is meaningful to you, like myhome, office_room1, etc.</p>
Channel Number	<p>Select the channel number you wish to use; all access points must use the same channel.</p>
Associated Clients	<p>Click 'Show Active Clients' button to show the list of all connected wireless clients. You can click 'Refresh' in new window to get latest list again, or click 'Close' to close the window.</p> <p>Please note that if you have pop-up blocker installed, you may have to disable it or tell your pop-up blocker to allow the popup window, or you will not be able to see the wireless client list window.</p>
MAC address 1 to 4	<p>Input the MAC address of other wireless access points (the access points you wish to connect).</p>
Set Security	<p>Click 'Set Security' button to set security functions of this wireless connection to improve security. Please refer to chapter 3-2-1-7 for detailed instructions.</p>

When you finished with the settings in this page, you can click 'Apply' button to save changes you made in this page, or you can click 'Cancel' to discard changes. After you click 'Apply' button, you'll see the following messages:

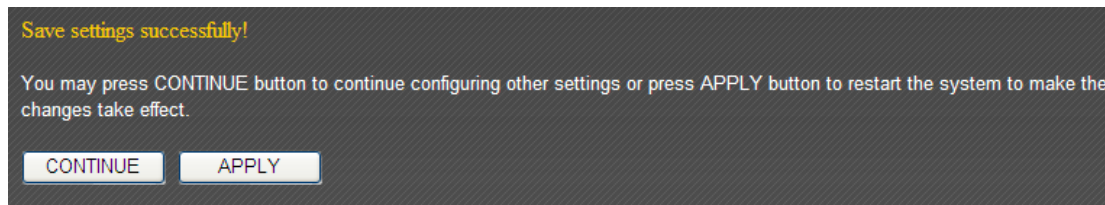


Please click 'Apply' to save changes you made and restart the broadband router, this requires about 30 seconds and the broadband router will stop responding (this is normal and is not malfunction). You can reconnect to this broadband router and continue on other settings later.

You can click 'Continue' to continue on other settings without restart the broadband router, however, the changes you made will not take effect before you restart the broadband router.

3-2-1-6 Universal Repeater

In this mode, this broadband router acts as a wireless repeater. It will repeat the signal of the wireless access point you specified, to extend its wireless coverage. The broadband router will still accept wireless clients when in this mode.

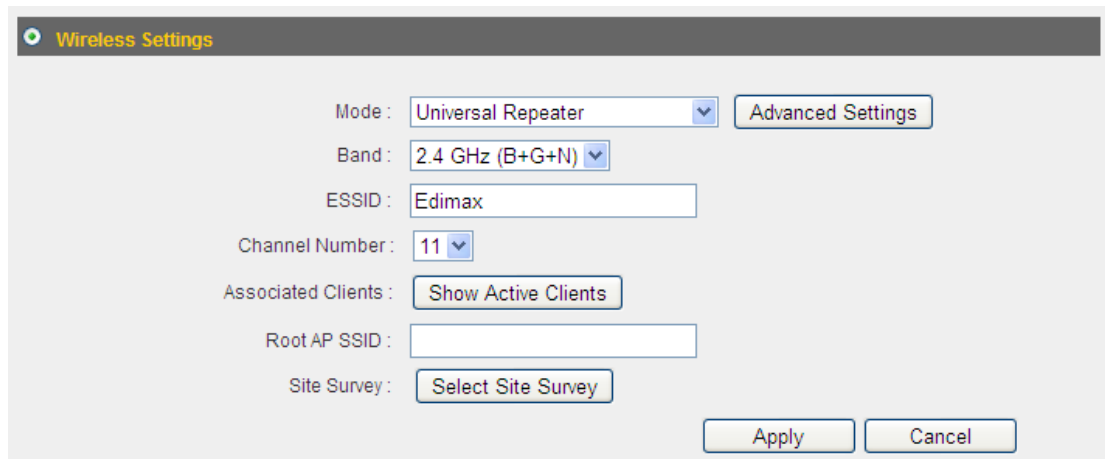

The image shows a 'Wireless Settings' window with the following fields and buttons:


- Mode:** A dropdown menu set to 'Universal Repeater'.
- Band:** A dropdown menu set to '2.4 GHz (B+G+N)'.
- ESSID:** A text box containing 'Edimax'.
- Channel Number:** A dropdown menu set to '11'.
- Associated Clients:** A button labeled 'Show Active Clients'.
- Root AP SSID:** An empty text box.
- Site Survey:** A button labeled 'Select Site Survey'.
- Buttons:** 'Advanced Settings' (top right), 'Apply' (bottom right), and 'Cancel' (bottom right).

Here are descriptions of every setup items:

Item Name	Description
Band	<p><i>Please select the radio band from one of following options (must be the same with the wireless access point you wish to connect):</i></p> <p><i>2.4 GHz (B): 2.4GHz band, only allows 802.11b wireless network client to connect this router (maximum transfer rate 11Mbps).</i></p> <p><i>2.4 GHz (N): 2.4GHz band, only allows 802.11n wireless network client to connect this router (maximum transfer rate 300Mbps).</i></p> <p><i>2.4 GHz (B+G): 2.4GHz band, only allows 802.11b and 802.11g wireless network client to connect this router (maximum transfer rate 11Mbps for 802.11b clients, and maximum 54Mbps for 802.11g clients).</i></p> <p><i>2.4 GHz (G): 2.4GHz band, only allows 802.11g wireless network client to connect this router</i></p>

	<p><i>(maximum transfer rate 11Mbps).</i></p> <p><i>2.4 GHz (B+G+N): 2.4GHz Band, Allows 802.11b, 802.11g, and 802.11N wireless clients. It's recommends to select this band to maximize compatibility.</i></p>
<i>ESSID</i>	<p><i>This is the name of broadband router. You can type any alphanumerical characters here, maximum 32 characters. ESSID is used to identify your own broadband router from others when there are other broadband routers in the same area. Default SSID is 'default', it's recommended to change default ESSID value to the one which is meaningful to you, like myhome, office_room1, etc.</i></p>
<i>Channel Number</i>	<p><i>Select the channel number you wish to use; all access points must use the same channel.</i></p>
<i>Associated Clients</i>	<p><i>Click 'Show Active Clients' button to show the list of all connected wireless clients. You can click 'Refresh' in new window to get latest list again, or click 'Close' to close the window.</i></p> <p><i>Please note that if you have pop-up blocker installed, you may have to disable it or tell your pop-up blocker to allow the popup window, or you will not be able to see the wireless client list window.</i></p>
<i>Root AP SSID</i>	<p><i>Please input the SSID of the wireless access point you wish to extend signal coverage.</i></p>
<i>Site Survey</i>	<p><i>Click 'Select Site Survey' and a popup window will appear. All reachable wireless access points will be shown in the window. Select the wireless access point you wish to connect from the list, and click 'Done'. If the wireless access point you wish to connect is not listed, you can click 'Refresh' to rescan.</i></p> <p><i>If you still can't find the wireless access point you wish to connect, please move the broadband router to the place nearer to the access point you wish to connect.</i></p>

When you finished with the settings in this page, you can click 'Apply' button to save changes you made in this page, or you can click 'Cancel' to discard changes. After you click 'Apply' button, you'll see the following messages:

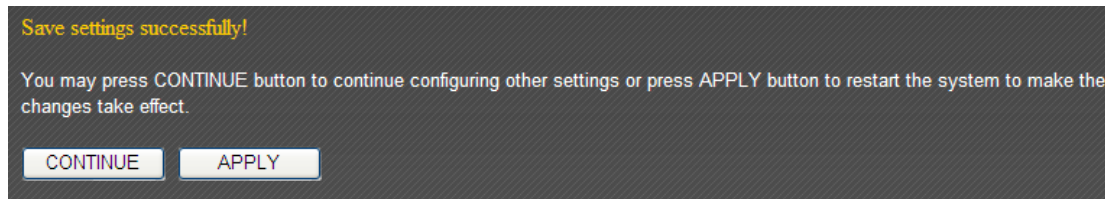


Please click 'Apply' to save changes you made and restart the broadband router, this requires about 30 seconds and the broadband router will stop responding (this is normal and is not malfunction). You can reconnect to this broadband router and continue on other settings later.

You can click 'Continue' to continue on other settings without restart the broadband router, however, the changes you made will not take effect before you restart the broadband router.

3-2-2 Set Security

In certain AP working modes, you can enable encryption to improve security level.

When you click 'Set Security' button, the following window will appear:

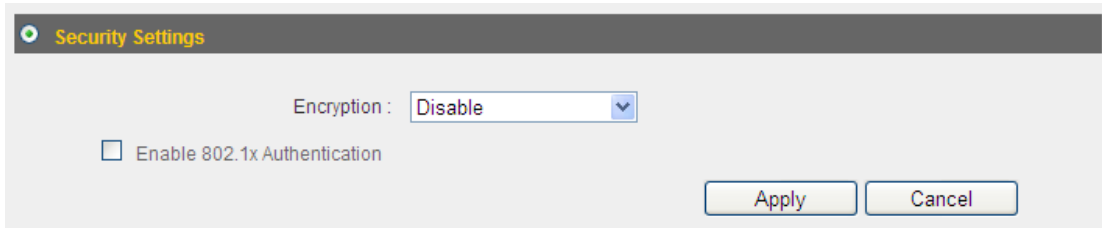A screenshot of a 'Security Settings' dialog box. The title bar is dark gray with a green circular icon and the text 'Security Settings' in yellow. The main area is light gray. It contains an 'Encryption' label followed by a dropdown menu showing 'Disable'. Below this is a checkbox labeled 'Enable 802.1x Authentication' which is currently unchecked. At the bottom right are two buttons: 'Apply' and 'Cancel'.


Please select an encryption method from 'Encryption' dropdown menu, and corresponding setting will appear:

Disabled

Encryption is disabled. It's **not recommended** to disable encryption because other people may use certain wireless scanner to copy the data transferred over air.

WEP

Select WEP to enable WEP (Wired Equivalent Privacy) encryption:

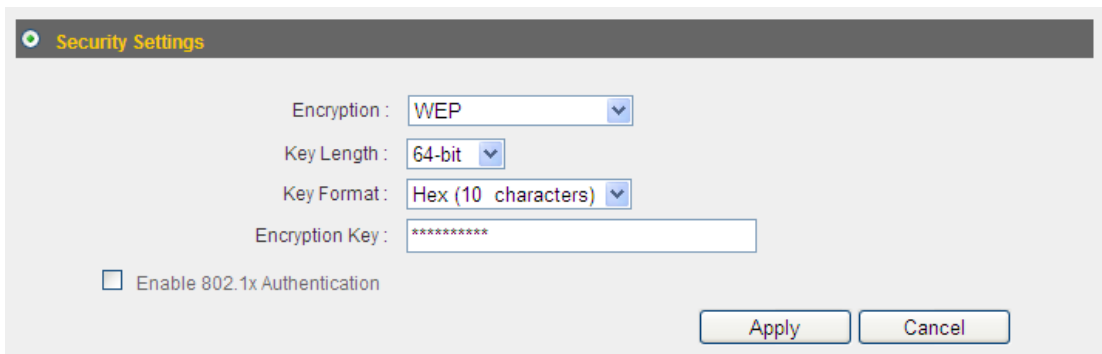


The screenshot shows a 'Security Settings' dialog box. It has a title bar with a green circle icon and the text 'Security Settings'. Inside the dialog, there are four dropdown menus: 'Encryption' set to 'WEP', 'Key Length' set to '64-bit', and 'Key Format' set to 'Hex (10 characters)'. Below these is a text field for 'Encryption Key' containing ten asterisks. At the bottom left is a checkbox labeled 'Enable 802.1x Authentication' which is unchecked. At the bottom right are two buttons: 'Apply' and 'Cancel'.

Here are descriptions of every setup items:

Item Name	Description
<i>Key Length</i>	<i>There are two types of WEP key length: 64-bit and 128-bit. Using '128-bit' is safer than '64-bit', but will reduce some data transfer performance.</i>
<i>Key Format</i>	<i>There are two types of key format: ASCII and Hex. When you select a key format, the number of characters of key will be displayed. For example, if you select '64-bit' as key length, and 'Hex' as key format, you'll see the message at the right of 'Key Format' is 'Hex (10 characters)', which means the length of WEP key is 10 characters.</i>
<i>Default Tx Key</i>	<i>You can set up to four sets of WEP key, and you can decide which key is being used by default here. If you don't know which one you should use, select 'Key 1'.</i>
<i>Encryption Key</i>	<i>Input WEP key characters here, the number of characters must be the same as the number displayed at 'Key Format' field. You can use any alphanumerical characters (0-9, a-z, and A-Z) if you select 'ASCII' key format, and if you select 'Hex' as key format, you can use characters 0-9, a-f, and A-F.</i>
<i>Enable 802.1x Authentication</i>	<i>Check this box to enable 802.1x authentication function. You need a Radius authentication</i>

	<i>server to perform 802.1x authentication.</i>
<i>Server IP address</i>	<i>Input Radius authentication server's IP address here.</i>
<i>RADIUS Server Port</i>	<i>Input Radius authentication server's service port here. Generally it's 1812.</i>
<i>RADIUS Server Password</i>	<i>Input the password of Radius server here.</i>


Please click 'Apply' to save changes, or click 'Reset' to clear the texts in all fields. If you click 'Apply', the following messages will appear:

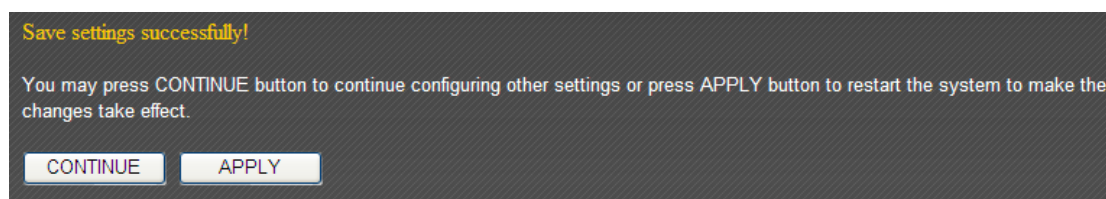

You can click 'Continue' to back to previous page and continue setting, or click 'Apply' to restart the broadband router so the changes will take effect.

WPA pre-shared key

WPA (Wi-Fi Protected Access) is also an encryption method and is safer than WEP. It's recommended to use WPA instead of WEP when you need to use encryption to protect your data security.

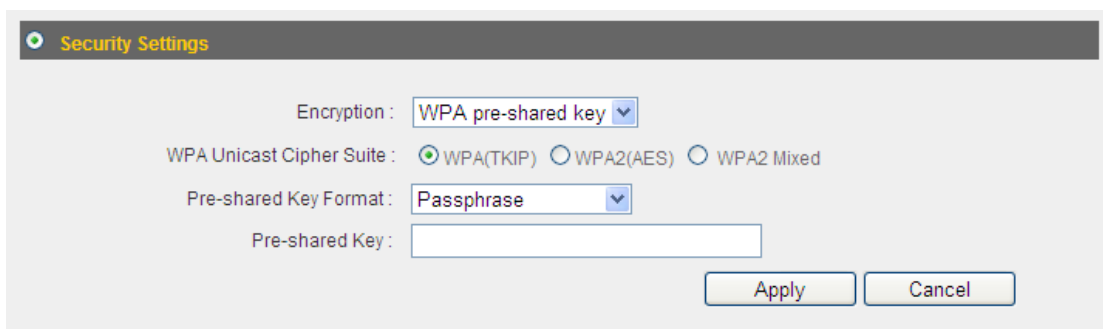

The screenshot shows a 'Security Settings' window. At the top, there's a title bar with a green circle icon and the text 'Security Settings'. Below this, the 'Encryption' dropdown is set to 'WPA pre-shared key'. Underneath, the 'WPA Unicast Cipher Suite' section has three radio buttons: 'WPA(TKIP)' (selected), 'WPA2(AES)', and 'WPA2 Mixed'. The 'Pre-shared Key Format' dropdown is set to 'Passphrase'. Below that is a text input field for the 'Pre-shared Key'. At the bottom right, there are two buttons: 'Apply' and 'Cancel'.

Here are descriptions of every setup items:


Item Name	Description
WPA Unicast Cipher Suite	Please select a type of WPA cipher suite. Available options are: WPA (TKIP), WPA2 (AES), and WPA2 Mixed. You can select one of them, but you have to make sure your wireless client support the cipher you selected.
Pre-shared Key Format	Select the type of pre-shared key, you can select Passphrase (8 or more alphanumerical characters, up to 63), or Hex (64 characters of 0-9, and a-f).
Pre-shared Key	Please input the WPA passphrase here. It's not recommended to use a word that can be found in a dictionary due to security reason.

Please click 'Apply' to save changes, or click 'Reset' to clear the texts in all fields. If you click 'Apply', the following messages will appear:

You can click 'Continue' to back to previous page and continue setting, or click 'Apply' to restart the broadband router so the changes will take effect.

WPA RADIUS

If you have RADIUS authentication server on your local network, you can authenticate the wireless clients by RADIUS server's user database. Only authenticated clients can establish wireless connection with this broadband router.

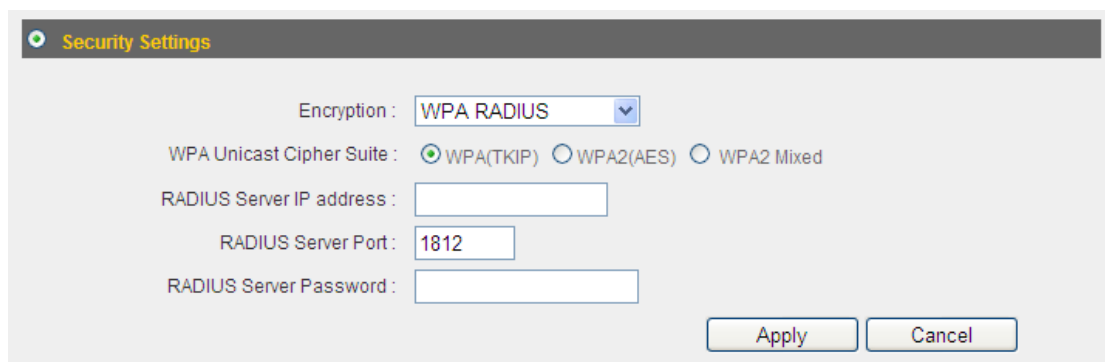


The screenshot shows the 'Security Settings' window. At the top, there's a tab labeled 'Security Settings'. Below it, the 'Encryption' dropdown is set to 'WPA RADIUS'. Under 'WPA Unicast Cipher Suite', there are three radio buttons: 'WPA(TKIP)' (selected), 'WPA2(AES)', and 'WPA2 Mixed'. Below these are three input fields: 'RADIUS Server IP address' (empty), 'RADIUS Server Port' (containing '1812'), and 'RADIUS Server Password' (empty). At the bottom right, there are 'Apply' and 'Cancel' buttons.

Here are descriptions of every setup items:

Item Name	Description
<i>WPA Unicast Cipher Suite</i>	<i>Please select a type of WPA cipher suite. Available options are: WPA (TKIP), WPA2 (AES), and WPA2 Mixed. You can select one of them, but you have to make sure your wireless client support the cipher you selected.</i>
<i>RADIUS Server IP address</i>	<i>Input the IP address of RADIUS authentication server here.</i>
<i>RADIUS Server Port</i>	<i>Input the port number of RADIUS authentication server here. Most of RADIUS server will use port number 1812 and you can keep using default value.</i>
<i>RADIUS Server Password</i>	<i>Input the password of RADIUS authentication server here.</i>

Please click 'Apply' to save changes, or click 'Reset' to clear the texts in all fields. If you click 'Apply', the following messages will appear:

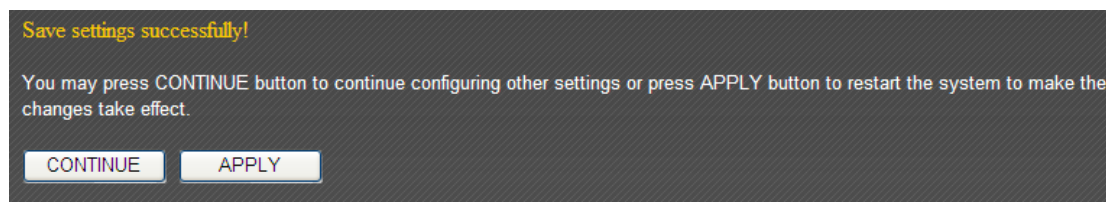

You can click 'Continue' to back to previous page and continue setting, or click 'Apply' to restart the broadband router so the changes will take effect.

3-2-3 MAC Address Filtering

This function will help you to prevent unauthorized users from connecting to your wireless router; only those wireless devices who have the MAC address you assigned here can gain access to your wireless router. You can use this function with other security measures described in previous section, to create a safer wireless environment. Up to 20 MAC addresses can be assigned.

MAC Address Filtering

It allows to entry 20 sets address only. :

NO.	MAC address	Comment	Select
-----	-------------	---------	--------

☐ Enable Wireless Access Control

MAC address : Comment:

To enable MAC address filtering, please check ‘Enable Wireless Access Control’ box in this page, the descriptions of other setting items are listed as follow:

Item Name	Description
MAC address	Input the MAC address you wish to add to the MAC address to the table.
Comment	You can input any text here as the comment of this MAC address, like ‘ROOM 2A Computer’ or anything. You can input up to 16 alphanumerical characters here. This is optional and you can leave it blank, however, it’s recommended to use this field to write a comment for every MAC addresses as a memory aid.
Add	Click ‘Add’ button to add the MAC address and associated comment to the MAC address filtering table.
Clear	Click ‘Clear’ to remove the value you inputted in MAC address and comment field.

All MAC address entries will be listed in this page:

NO.	MAC address	Comment	Select
1	11:22:33:44:55:66	John's Computer	<input type="checkbox"/>
2	aa:bb:cc:dd:ee:ff	Mary's Computer	<input type="checkbox"/>

Delete SelectedDelete All

To delete one or more entries listed here, please check the box of the entry you wish to delete (Under 'Select'), and click 'Delete Selected' button. If you wish to delete all mapping entries, click 'Delete All' button.

When you finished with the settings in this page, you can click 'Apply' button to save changes you made in this page, or you can click 'Cancel' to discard changes. After you click 'Apply' button, you'll see the following messages:

Save settings successfully!

You may press CONTINUE button to continue configuring other settings or press APPLY button to restart the system to make the changes take effect.

CONTINUEAPPLY

Please click 'Apply' to save changes you made and restart the broadband router, this requires about 30 seconds and the broadband router will stop responding (this is normal and is not malfunction). You can reconnect to this broadband router and continue on other settings later.

3-2-4 WPS (Wi-Fi Protected Setup) Settings

WPS (Wi-Fi Protected Setup) provides a convenient way to establish the connection between this broadband router and wireless clients. Any WPS-compatible wireless clients can establish secure connection with this broadband router with simple push-button type configuration or PinCode type configuration.

WPS(Wi-Fi Protected Setup) Settings

☒ Enable WPS

Wi-Fi Protected Setup Information :

WPS Status: : Configured

Self PinCode: : 74074136

SSID : Edimax

Authentication Mode : WEP

Passphrase Key :

Device Configure

Config Mode Registrar

Configure via Push Button : Start PBC

Configure via Client PinCode : Start PIN

Here are descriptions of every setup items:

Item Name	Description
<i>Enable WPS</i>	<i>Check this box to enable WPS function, uncheck it to disable WPS.</i>
<i>WPS Status</i>	<i>If the wireless security (encryption) function of this wireless router is properly set, you'll see 'Configured' message here. If wireless security function has not been set, you'll see 'unConfigured'.</i>
<i>Self PIN code</i>	<i>This is the WPS PIN code of this wireless router. This code is useful when you need to build wireless connection by WPS with other WPS-enabled wireless devices.</i>
<i>SSID</i>	<i>The SSID of this wireless router will be displayed here.</i>
<i>Authentication Mode</i>	<i>The wireless security authentication mode of this wireless router will be displayed here.</i>
<i>Passphrase Key</i>	<i>The WPA passphrase will be displayed as asterisk here.</i>
<i>Config Mode</i>	<i>Select the WPS configuration role of this</i>

	<p><i>broadband router.</i></p> <p><i>Registrar: This broadband router will act as WPS registrar and wait for wireless clients to send WPS configuration request.</i></p> <p><i>Enrollee: This broadband router will act as WPS enrollee and send WPS configuration request to other WPS registrar.</i></p>
<i>Configure via Push Button</i>	<p><i>Click 'Start PBC' to start Push-Button type WPS configuration (PBC). Please push the WPS push-button on other WPS-compatible network devices to begin WPS configuration.</i></p> <p><i>You can also push the 'WPS / Reset' button located at the back of this broadband router to start PBC without using web configuration interface.</i></p>
<i>Configure via Client PinCode</i>	<p><i>Please input the PinCode displayed at the configuration software of WPS-enabled wireless client, and click 'Start PIN' to establish connection with the wireless client.</i></p>

3-3 Advance Settings

This router provides various network functionalities like QoS and DDNS, and you can configure these functions in 'Advanced Settings' menu.

The screenshot displays the 'Advanced Settings' menu of a router. The menu is organized into a list of options: QoS, DDNS, Port Forwarding, and DMZ(Demilitarized Zone). The 'DDNS' option is currently selected, indicated by a green circle next to its label. Below the 'DDNS' header, the 'Dynamic DNS' section is visible. It includes a toggle for 'Dynamic DNS' set to 'Disabled' (with 'Enabled' as an alternative option). A dropdown menu for 'Provider' is set to 'DynDNS'. Below this, there are three text input fields for 'Domain Name', 'Account / E-Mail', and 'Password / Key'. At the bottom right of the DDNS section, there are 'Apply' and 'Cancel' buttons. The other menu items ('QoS', 'Port Forwarding', and 'DMZ') are listed below but are not currently selected.

QoS

DDNS

Dynamic DNS : ☐ Enabled ☒ Disabled

Provider :

Domain Name :

Account / E-Mail :

Password / Key :

Apply Cancel

Port Forwarding


DMZ(Demilitarized Zone)

3-3-1 QoS

Quality of service provides an efficient way for computers on the network to share the internet bandwidth with a promised quality of internet service. Without QoS, all computers and devices on the network will compete with each other to get internet bandwidth, and some applications which require guaranteed bandwidth (like video streaming and network telephone) will be affected, therefore an unpleasing result will occur, like the interruption of video / audio transfer.

With this function, you can limit the maximum bandwidth or give a guaranteed bandwidth for a specific computer, to avoid said unpleasing result from happening.

3-3-1-1 Basic QoS Settings

 **QoS**

☐ Enable QoS

Total Download Bandwidth : kbps

Total Upload Bandwidth : kbps

Current QoS Table :

Priority	Rule Name	Upload Bandwidth	Download Bandwidth	Select
----------	-----------	------------------	--------------------	--------

Edit

Delete Selected

Delete All

Move Up

Move Down

Reset

Apply

Cancel

QoS Rules Table :

Rule Name :

Bandwidth :

Download ▾

Kbps

guarantee ▾

Local IP Address :

-

Local Port Range :

Remote IP Address :

-

Remote Port Range :

Traffic Type :

None ▾

Protocol :

TCP ▾

Add


Reset

Here are descriptions of every setup items:

Item Name	Description
<i>Enable QoS</i>	<i>Check this box to enable QoS function, uncheck it to disable QoS.</i>
<i>Total Download Bandwidth</i>	<i>You can set the limit of total download bandwidth in kbits. To disable download bandwidth limitation, input '0' here.</i>
<i>Total Upload Bandwidth</i>	<i>You can set the limit of total upload bandwidth in kbits. To disable upload bandwidth limitation, input '0' here.</i>
<i>Rule Name</i>	<i>Input a name for this QoS rule for identification purpose. This name should be unique and not the same with others.</i>
<i>Bandwidth</i>	<p><i>Set the speed limitation for this QoS rule:</i></p> <div> <div>Bandwidth :</div> <div> <div>Download ▾</div> <div></div> <div>Kbps</div> <div>guarantee ▾</div> </div> </div> <div> <div>(1)</div> <div>(2)</div> <div>(3)</div> </div> <p><i>(1) Please select Download / Upload for the direction of data for this QoS rule first,</i></p> <p><i>(2) Input the data rate for this QoS rule,</i></p> <p><i>(3) and select Guarantee (provides a guaranteed speed for this rule), or Max (</i></p>
<i>Local IP Address</i>	<i>Set the IP address range that will be affected by this QoS rule. If only one IP address is involved, input the IP address in left field only.</i>
<i>Local Port Range</i>	<i>Set the port range that will activate this QoS rule. If only one port is involved, input a single number here (1 to 65535); if multiple ports are involved, input starting / ending port number in x-y format (like 10-20).</i>
<i>Remote IP Address</i>	<i>Set remote IP addresses that will trigger this QoS rule. If only one IP address is involved, input</i>

	<i>the IP address in left field only.</i>
<i>Remote Port Range</i>	<i>Set the port range that will activate this QoS rule. If only one port is involved, input a single number here (1 to 65535); if multiple ports are involved, input starting / ending port number in x-y format (like 10-20).</i>
<i>Traffic Type</i>	<i>If you're creating a QoS rule for a specific type of traffic, you can select it from this menu and you don't have to input port range above.</i>
<i>Protocol</i>	<i>Select the protocol type here (TCP or UDP).</i>
<i>Add</i>	<i>Click 'add' button to add a new QoS rule (detailed instructions will be given below).</i>
<i>Reset</i>	<i>If you want to erase all values you just entered. Click 'Reset'</i>
<i>Edit</i>	<i>If you want to modify the content of a specific rule, please check the 'select' box of the rule you want to edit, then click 'Edit' button. Only one rule should be selected a time!</i>
<i>Delete Selected</i>	<i>You can delete selected rules by clicking this button. You can select one or more rules to delete by check the 'select' the box of the rule(s) you want to delete a time. If the QoS table is empty, this button will be grayed out and cannot be clicked.</i>
<i>Delete All</i>	<i>By clicking this button, you can delete all rules currently listed in the QoS table. If the QoS table is empty, this button will be grayed out and cannot be clicked.</i>
<i>Move Up</i>	<i>Move selected rule up. First QoS rule will be proceed first, so you can move higher priority rules up.</i>
<i>Move Down</i>	<i>Move selected rule down.</i>

When you finished with the settings in this page, you can click 'Apply' button to save changes you made in this page, or you can click 'Cancel' to discard changes. After you click 'Apply' button, you'll see the following messages:

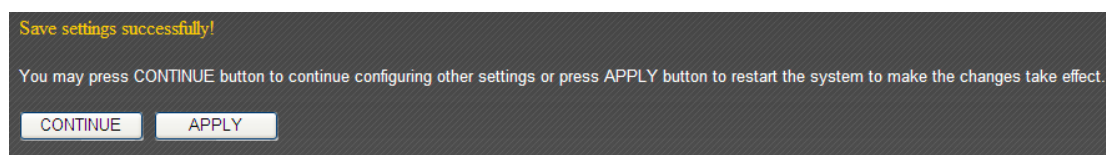

Please click 'Apply' to save changes you made and restart the broadband router, this requires about 30 seconds and the broadband router will stop responding (this is normal and is not malfunction). You can reconnect to this broadband router and continue on other settings later.

3-3-2 DDNS

DDNS (Dynamic DNS) is a IP-to-Hostname mapping service for those Internet users who don't have a static (fixed) IP address. It will be a problem when such user wants to provide services to other users on Internet, because their IP address will vary every time when connected to Internet, and other user will not be able to know the IP address they're using at a certain time.

This router supports DDNS service of following service providers:

3322 (<http://www.3322.org/>)

DHS (<http://www.dhs.org>)

DynDNS (<http://www.dyndns.org/>)

ODS (<http://ods.org>)

TZO (<http://www.tzo.com/>)

GnuDIP (<http://gnudip2.sourceforge.net/>)


DyNS (<http://www.dyns.cx/>)

ZoneEdit (<http://www.zoneedit.com>)

DHIS (<http://www.dhis.org/>)

CyberGate (<http://cybergate.planex.co.jp/ddns/>)

Please go to one of DDNS service provider's webpage listed above, and get a free DDNS account by the instructions given on their webpage. After that, you can use the DDNS page to setup DDNS parameters to use DDNS service:

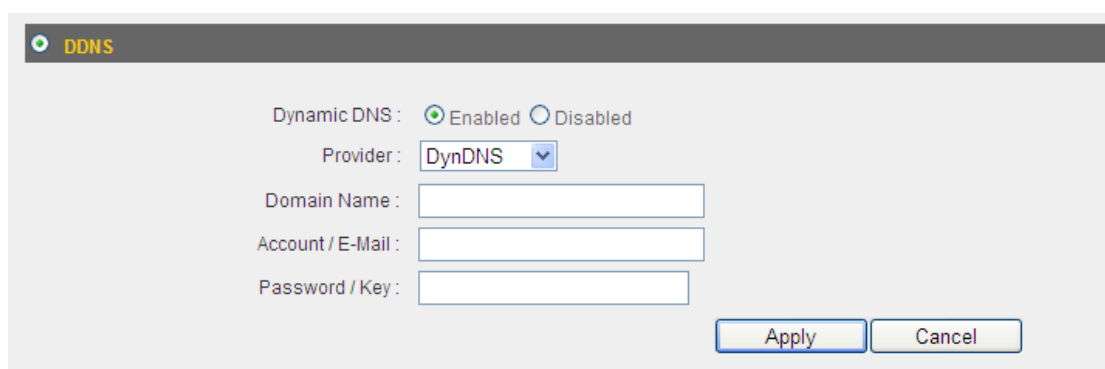

DDNS

Dynamic DNS : ☒ Enabled ☐ Disabled

Provider : DynDNS ▼

Domain Name :

Account / E-Mail :

Password / Key :

Apply Cancel

Here are descriptions of every setup items:

Item Name	Description
<i>Dynamic DNS</i>	<i>If you want to enable DDNS function, please select 'Enabled'; otherwise please select 'Disabled'</i>
<i>Provider</i>	<i>Select your DDNS service provider here.</i>
<i>Domain Name</i>	<i>Input the domain name you've obtained from DDNS service provider.</i>
<i>Account / E-Mail</i>	<i>Input account or email of DDNS registration.</i>
<i>Password / Key</i>	<i>Input DDNS service password or key.</i>

If your DDNS provider is 'DHIS', the settings will be different:

Dynamic DNS : ☒ Enabled ☐ Disabled

Provider :

HostID :

ISAddr :

Authentication Type :

HostPass :

Here are descriptions of every setup items:

Item Name	Description
HostID	Please input the HostID you applied during DHIS registration.
ISAddr	Please input the ISAddr you applied during DHIS registration.
Authentication Type	Please select the DHIS user authentication type from dropdown menu: password or QRC.
HostPass	Please input the HostID you applied during DHIS registration. (This field will appear only when authentication type is password).
AuthP / AuthQ	Please input the AuthP/AuthQ you applied during DHIS registration.

	(This field will appear only when authentication type is QRC).
--	--

When you finished with the settings in this page, you can click ‘Apply’ button to save changes you made in this page, or you can click ‘Cancel’ to discard changes. After you click ‘Apply’ button, you’ll see the following messages:

Save settings successfully!

You may press CONTINUE button to continue configuring other settings or press APPLY button to restart the system to make the changes take effect.

CONTINUE

APPLY

Please click ‘Apply’ to save changes you made and restart the broadband router, this requires about 30 seconds and the broadband router will stop responding (this is normal and is not malfunction). You can reconnect to this broadband router and continue on other settings later.

3-3-3 Port Forwarding

This function allows you to redirect a single port or consecutive ports of Internet IP address to the same port of the IP address on local network. The port number(s) of Internet IP address and private IP address (the IP address on local network) must be the same.

If the port number of Internet IP address and private IP address is different, please use 'Virtual Server' function.

The port forwarding setting page looks like this:

Port Forwarding

☒ Enable Port Forwarding

Private IP	Computer name	Type	Port Range	Comment
<input type="text"/>	<< -----Select-----	Both	<input type="text"/> - <input type="text"/>	<input type="text"/>

Add Reset

Here are descriptions of every setup items:

Item Name	Description
Enable Port Forwarding	Check this box to enable port forwarding, and uncheck this box to disable port forwarding.
Private IP	Input the IP address of the computer on local network which provides internet service.
Computer name	All computer names found by this broadband router on local network will be listed here. You can select the computer name and click '<<' button to add selected computer's IP address to 'Private IP' field. Please note that this list may not be able to list all computers on your local network.
Type	Select the type of connection, TCP or UDP. If you're not sure, please select 'Both'.
Port Range	Input the starting port number in the left field, and input the ending port number in the right field. If you only want to redirect a single port number, just fill the port number in the left

	<i>field.</i>
<i>Comment</i>	<i>Please input any text to describe this mapping, up to 16 alphanumerical characters.</i>
<i>Add</i>	<i>Add the mapping to port forwarding table.</i>
<i>Reset</i>	<i>Remove all inputted values.</i>

All existing URLs will be displayed in 'Current URL Blocking Table':

Current Port Forwarding Table :						
NO.	Computer name	Private IP	Type	Port Range	Comment	Select
1	OFFLINE	192.168.98.205	TCP+UDP	1000-2000	SIP Phone	<input type="checkbox"/>
				<input type="button" value="Delete Selected"/>	<input type="button" value="Delete All"/>	<input type="button" value="Reset"/>

If you want to delete a specific port forwarding entry, check the 'select' box of the port forwarding entry you want to delete, then click 'Delete Selected' button. (You can select more than one port forwarding entries). If you want to delete all port forwarding entries listed here, please click 'Delete All' button or you can also click 'Reset' button to unselect all port forwarding entries.

When you finished with the settings in this page, you can click 'Apply' button to save changes you made in this page, or you can click 'Cancel' to discard changes. After you click 'Apply' button, you'll see the following messages:

Save settings successfully!

You may press CONTINUE button to continue configuring other settings or press APPLY button to restart the system to make the changes take effect.

Please click 'Apply' to save changes you made and restart the broadband router, this requires about 30 seconds and the broadband router will stop responding (this is normal and is not malfunction). You can reconnect to this broadband router and continue on other settings later.

3-3-4 DMZ

Demilitarized Zone (DMZ) is a special area in your local network. This area resides in local network, and all computers in this area uses private IP address, too. But these private IP addresses are mapped to a certain Internet IP address, so other people on Internet can fully access those computers in DMZ.

The DMZ setting page looks like this:

DMZ(Demilitarized Zone)

☒ Enable DMZ

Public IP address	Client PC IP address	Computer name
<input checked="" type="radio"/> Dynamic IP Session 1 <input type="radio"/> Static IP <input type="text"/>	<input type="text"/>	<< -----Select-----
<div>Add Reset</div>		

Here are descriptions of every setup items:

Item Name	Description
Enable DMZ	Check this box to enable DMZ function, uncheck this box to disable DMZ function.
Public IP address	You can select 'Dynamic IP' or 'Static IP' here. If you select 'Dynamic IP', you have to select an Internet connection session from dropdown menu; if you select 'Static IP', please input the IP address that you want to map to a specific private IP address.
Client PC IP address	Please input the private IP address that the Internet IP address will be mapped to.
Type	Select the type of connection, TCP or UDP. If you're not sure, please select 'Both'.
Port Range	Input the starting port number in the left field, and input the ending port number in the right field. If you only want to redirect a single port number, just fill the port number in the left field.
Comment	Please input any text to describe this mapping,

	<i>up to 16 alphanumerical characters.</i>
<i>Add</i>	<i>Add the mapping to port forwarding table.</i>
<i>Reset</i>	<i>Remove all inputted values.</i>

NOTE: Please note that every public IP address can be mapped to a single Client PC IP address only.

All existing DMZ entries will be displayed in 'Current DMZ Table':

Current DMZ Table :				
NO.	Computer name	Public IP address	Client PC IP address	Select
1	OFFLINE	----	192.168.98.205	<input type="checkbox"/>
				<input type="button" value="Delete Selected"/> <input type="button" value="Delete All"/> <input type="button" value="Reset"/>

If you want to delete a specific DMZ entry, check the 'select' box of the DMZ entry you want to delete, then click 'Delete Selected' button. (You can select more than one DMZ entries). If you want to delete all DMZ entries listed here, please click 'Delete All' button or you can also click 'Reset' button to unselect all DMZ entries.

When you finished with the settings in this page, you can click 'Apply' button to save changes you made in this page, or you can click 'Cancel' to discard changes. After you click 'Apply' button, you'll see the following messages:

Save settings successfully!

You may press CONTINUE button to continue configuring other settings or press APPLY button to restart the system to make the changes take effect.

Please click 'Apply' to save changes you made and restart the broadband router, this requires about 30 seconds and the broadband router will stop responding (this is normal and is not malfunction). You can reconnect to this broadband router and continue on other settings later.

3-5 NAT

Network address translations solve the problem of sharing a single IP address to multiple computers. Without NAT, all computers must be assigned with a valid Internet IP address to get connected to Internet, but Internet service providers only provide very few IP addresses to every user. Therefore it's necessary to use NAT technology to share a single Internet IP address to multiple computers on local network, so everyone can get connected to Internet.

This broadband router supports four types of NAT functions, and the instructions of these functions will be given below.

3-5-1 Virtual Server

This function allows you to redirect a port on Internet IP address (on WAN port) to a specified port of an IP address on local network, so you can setup an Internet service on the computer on local network, without exposing it on Internet directly. You can also build many sets of port redirection, to provide many different Internet services on different local computers via a single Internet IP address.

Virtual Server

☐ Enable Virtual Server

Private IP	Computer name	Private Port	Type	Public Port	Comment
<input type="text"/>	<div><<-----Select----->></div>	<input type="text"/>	Both	<input type="text"/>	<input type="text"/>

AddReset

Current Virtual Server Table:

NO.	Computer name	Private IP	Private Port	Type	Public Port	Comment	Select
-----	---------------	------------	--------------	------	-------------	---------	--------

Delete SelectedDelete AllReset


ApplyCancel

Here are descriptions of every setup items:

Item Name	Description
<i>Enable Virtual Server</i>	<i>Check this box to enable virtual server, and uncheck this box to disable virtual server.</i>
<i>Private IP</i>	<i>Input the IP address of the computer which provides Internet service.</i>
<i>Computer name</i>	<i>All computer names found by this broadband router on local network will be listed here. You can select the computer name and click '<<' button to add selected computer's IP address to 'Private IP' field.</i> <i>Please note that this list may not be able to list all computers on your local network.</i>
<i>Private Port</i>	<i>Input the port number of the IP address which provides Internet service.</i>
<i>Type</i>	<i>Select the type of connection, TCP or UDP. If you're not sure, please select 'Both'</i>
<i>Public Port</i>	<i>Please select the port number of Internet IP address which will be redirected to the port number of local IP address defined above.</i>
<i>Comment</i>	<i>Please input any text to describe this mapping, up to 16 alphanumerical characters.</i>
<i>Add</i>	<i>Add the mapping to virtual server table.</i>
<i>Reset</i>	<i>Remove all inputted values.</i>

All existing virtual server mappings will be displayed in this page. To delete one or more mappings, check the box of the mapping, then click 'Delete Selected' button to remove the mapping. To delete all existing mappings, click 'Delete All' button. If you want to uncheck all boxes, click 'Reset'.

When you finished with the settings in this page, you can click 'Apply' button to save changes you made in this page, or you can click 'Cancel' to discard changes. After you click 'Apply' button, you'll see the following messages:

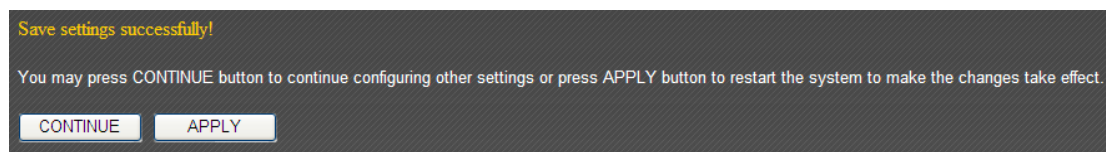

Please click 'Apply' to save changes you made and restart the broadband router, this requires about 30 seconds and the broadband router will stop responding (this is normal and is not malfunction). You can reconnect to this broadband router and continue on other settings later.

3-5-2 Special Applications

Some applications require more than one connection a time; these applications won't work with simple NAT rules. In order to make these applications work, you can use this function to let these applications work.

Special applications

☒ Enable Special Applications

IP Address	Computer name	TCP Port to Open	UDP Port to Open	Comment
0.0.0.0	<< -----Select-----			

Popular Applications Select Game Add

Add Reset

Current Trigger-Port Table

NO.	Computer name	IP Address	TCP Port to Open	UDP Port to Open	Comment	Select
-----	---------------	------------	------------------	------------------	---------	--------

Delete Selected Delete All Reset

Apply Cancel


Here are descriptions of every setup items:

Item Name	Description
<i>Enable</i>	<i>Check this box to enable support for special applications, and uncheck this box to disable this support.</i>
<i>IP Address</i>	<i>Input the IP address of the computer which is going to use the special application.</i>
<i>Computer name</i>	<i>All computer names found by this broadband router on local network will be listed here. You can select the computer name and click '<<' button to add selected computer's IP address to 'IP Address' field.</i> <i>Please note that this list may not be able to list all computers on your local network.</i>
<i>TCP Port to Open</i>	<i>Input the TCP port number required by the special application, the port number can be a single value, or a range (like 20-50). If you need to input more than one port number and they're not contiguous, list all port numbers here and separate them by comma (,). If the application does not use TCP port, leave it</i>

	<i>blank.</i>
<i>UDP Port to Open</i>	<i>Input the UDP port number required by the special application, the port number can be a single value, or a range (like 20-50). If you need to input more than one port number and they're not contiguous, list all port numbers here and separate them by comma (,). If the application does not use UDP port, leave it blank.</i>
<i>Comment</i>	<i>You can input any text here to help you remember the purpose of this item. This is optional.</i>
<i>Select Game</i>	<p><i>This router comes with a numerous port mapping settings of network games. If the game you wish to set is listed here, you can select it from dropdown menu.</i></p> <p><i>After a game is selected, click 'Add' (the one next to 'Select Game' dropdown list) to add the connection parameters to all respective fields.</i></p>
<i>Add</i>	<i>Click this button to add a new port mapping rule to special applications table.</i>
<i>Reset</i>	<i>Click this button to remove all values in every field.</i>

All existing special application mappings will be displayed in this page. To delete one or more mappings, check the box of the mapping, then click 'Delete Selected' button to remove the mapping. To delete all existing mappings, click 'Delete All' button. If you want to uncheck all boxes, click 'Reset'.


When you finished with the settings in this page, you can click 'Apply' button to save changes you made in this page, or you can click 'Cancel' to discard changes. After you click 'Apply' button, you'll see the following messages:

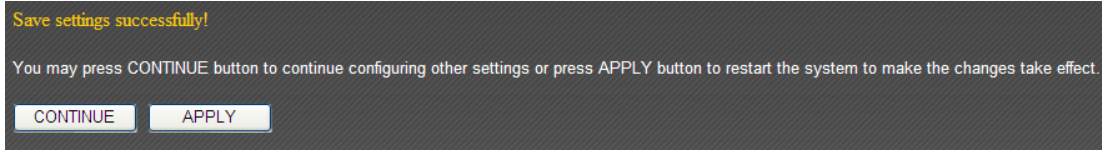

Please click 'Apply' to save changes you made and restart the broadband router, this requires about 30 seconds and the broadband router will stop responding (this is normal and is not malfunction). You can reconnect to this broadband router and continue on other settings later.

3-5-3 UPnP Setting

BR-6228nS_nC broadband router supports UPnP (universal plug-and-play), which allows other network devices to communicate with this broadband router to exchange information about network capability for intercommunication.

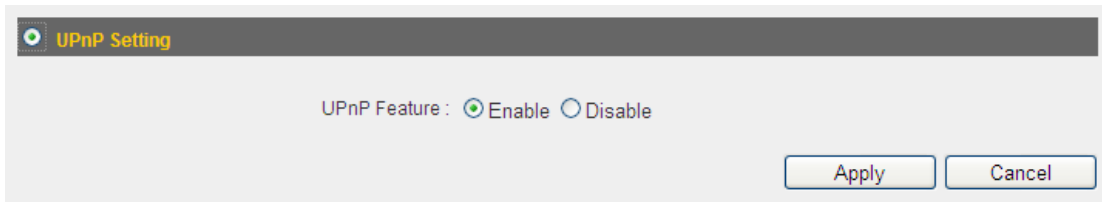
A screenshot of the UPnP Setting dialog box. The title bar is dark gray with a green icon and the text "UPnP Setting". The main area is light gray and contains the text "UPnP Feature : ☒ Enable ☐ Disable". At the bottom right, there are two buttons: "Apply" and "Cancel".

UPnP Setting

UPnP Feature : ☒ Enable ☐ Disable

Apply Cancel

After you made your choice, please click 'Apply' button:

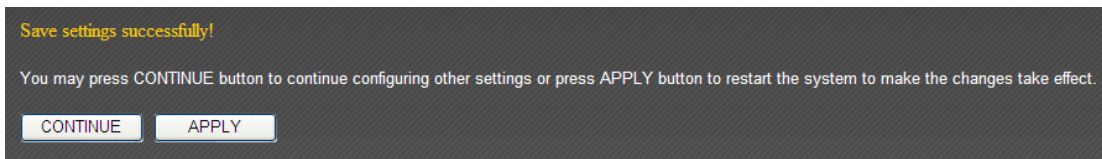A screenshot of a confirmation dialog box with a dark gray background. It displays the message "Save settings successfully!" in yellow. Below this, it says "You may press CONTINUE button to continue configuring other settings or press APPLY button to restart the system to make the changes take effect." At the bottom, there are two buttons: "CONTINUE" and "APPLY".

Save settings successfully!


You may press CONTINUE button to continue configuring other settings or press APPLY button to restart the system to make the changes take effect.

CONTINUE APPLY

Please click 'Apply' to save changes you made and restart the broadband router, this requires about 30 seconds and the broadband router will stop responding (this is normal and is not malfunction). You can reconnect to this broadband router and continue on other settings later.

3-5-4 ALG Settings


ALG (Application Layer Gateway) is a kind of network connection ability support for specific network applications like game and instant online chat. Without ALG support, these applications will not be able to communicate with their server when working with BR-6228nS_nC broadband router.

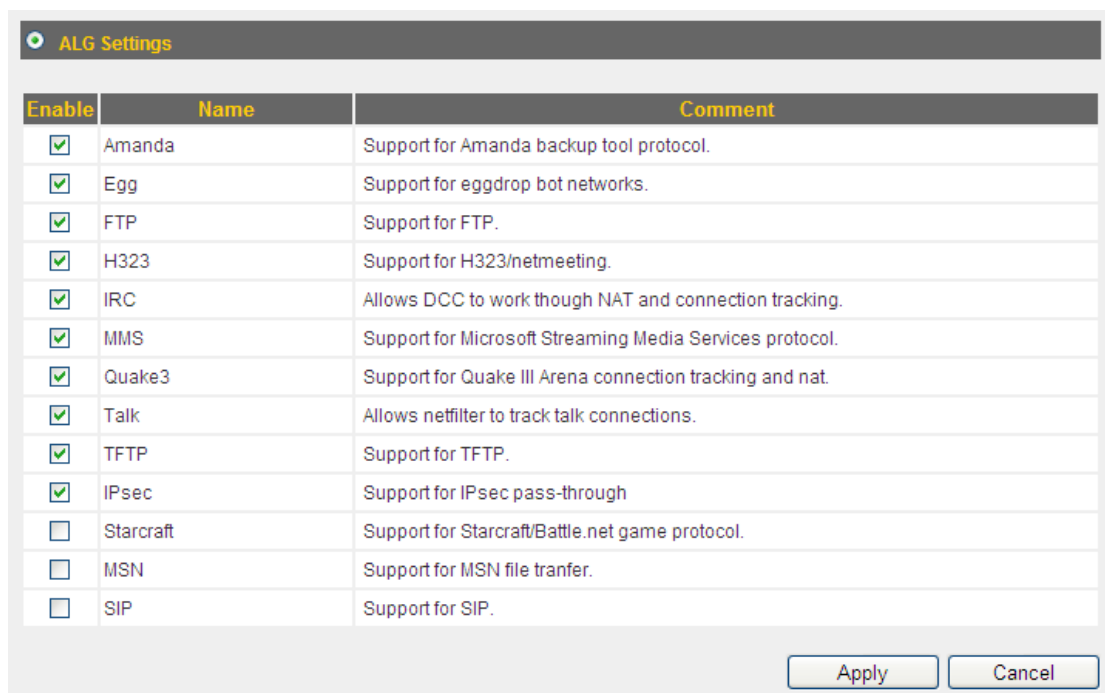

Enable	Name	Comment
<input checked="" type="checkbox"/>	Amanda	Support for Amanda backup tool protocol.
<input checked="" type="checkbox"/>	Egg	Support for eggdrop bot networks.
<input checked="" type="checkbox"/>	FTP	Support for FTP.
<input checked="" type="checkbox"/>	H323	Support for H323/netmeeting.
<input checked="" type="checkbox"/>	IRC	Allows DCC to work though NAT and connection tracking.
<input checked="" type="checkbox"/>	MMS	Support for Microsoft Streaming Media Services protocol.
<input checked="" type="checkbox"/>	Quake3	Support for Quake III Arena connection tracking and nat.
<input checked="" type="checkbox"/>	Talk	Allows netfilter to track talk connections.
<input checked="" type="checkbox"/>	TFTP	Support for TFTP.
<input checked="" type="checkbox"/>	IPsec	Support for IPsec pass-through
<input type="checkbox"/>	Starcraft	Support for Starcraft/Battle.net game protocol.
<input type="checkbox"/>	MSN	Support for MSN file tranfer.
<input type="checkbox"/>	SIP	Support for SIP.

Apply Cancel

All applications that require ALG support and compatible with this broadband router is listed here. You can check all applications you will use on local computer. After you made your choice, please click 'Apply' button:

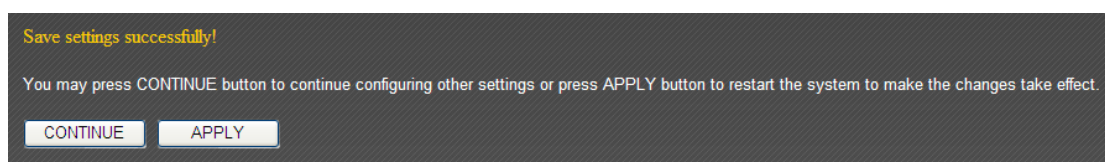

Save settings successfully!

You may press CONTINUE button to continue configuring other settings or press APPLY button to restart the system to make the changes take effect.

CONTINUE APPLY

Please click 'Apply' to save changes you made and restart the broadband router, this requires about 30 seconds and the broadband router will stop responding (this is normal and is not malfunction). You can reconnect to this broadband router and continue on other settings later.

3-5-5 Static Routing

In most cases, all your computers on local network will use default gateway (generally provided by your ISP) to access servers on Internet. However, if you have preferred network route you wish to redirect network traffic, you can use this function to create dedicated route for specific network destination and bypass default gateway.

Most users will not require this function to access Internet.

Static Routing

☒ Enable Static Routing

Destination LAN IP	Subnet Mask	Default Gateway	Hop Count	Interface
<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	LAN

Current Static Routing Table:


NO.	Destination LAN IP	Subnet Mask	Default Gateway	Hop Count	Interface	Select
-----	--------------------	-------------	-----------------	-----------	-----------	--------

Here are descriptions of every setup items:

Item Name	Description
<i>Enable Static Routing</i>	<i>Enable static routing function.</i>
<i>Destination LAN IP</i>	<i>Input destination network's address here.</i>
<i>Subnet Mask</i>	<i>Input the subnet mask of destination network here.</i>
<i>Default Gateway</i>	<i>Input the IP address of the gateway which leads to this network here.</i>
<i>Hop Count</i>	<i>Input the hop count (the distance between destination network and this broadband router) here.</i>
<i>Interface</i>	<i>Input the interface which leads to destination network.</i>
<i>Add</i>	<i>Click to add this static route policy to static route table.</i>
<i>Reset</i>	<i>Click to clear all inputted texts.</i>

If you want to delete a specific static route entry, check the 'select' box of the static route entry you want to delete, then click 'Delete Selected' button. (You can select more than one static route entries). If you want to delete all static route entries listed here, please click 'Delete All' button or you can also click 'Reset' button to unselect all static route entries.

When you finished with the settings in this page, you can click 'Apply' button to save changes you made in this page, or you can click 'Cancel' to discard changes. After you click 'Apply' button, you'll see the following messages:

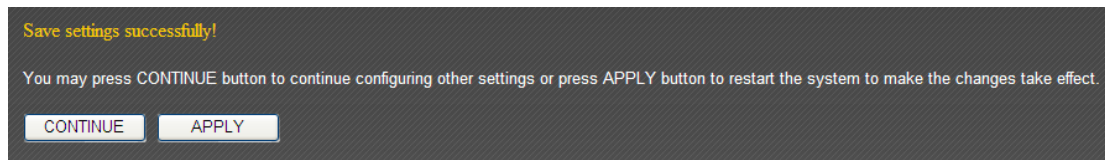

Please click 'Apply' to save changes you made and restart the broadband router, this requires about 30 seconds and the broadband router will stop responding (this is normal and is not malfunction). You can reconnect to this broadband router and continue on other settings later.

3-6 Firewall

This broadband router supports several firewall functions which will help you to protect your network and computer. In this chapter, instructions for using these functions will be given, so you can utilize these functions to protect your network from hackers and malicious intruders.

3-6-1 Access Control

By using access control, you can restrict your computers from accessing improper website, or using disallowed applications. You can even only allow computers with certain MAC address to access the network, or deny the computers in the list from accessing Internet.

MAC Filtering: Deny or allow access based on MAC address of client computer

☐ Enable MAC Filtering ☒ Deny ☐ Allow

Client PC MAC address	Computer name	Comment
<input type="text"/>	<< -----Select----- >>	<input type="text"/>

Add Reset

MAC Filtering Table:

NO.	Computer name	Client PC MAC address	Comment	Select
-----	---------------	-----------------------	---------	--------

Delete Selected Delete All Reset

Here are descriptions of every setup items:

Item Name	Description
Enable MAC Filtering	Check this box to enable MAC address based filtering, and please select 'Deny' or 'Allow' to decide the behavior of MAC filtering table. If you select deny, all MAC addresses listed in filtering table will be denied from connecting Internet; if you select allow, only MAC addresses listed in filtering table will be able to connect to Internet.
Client PC MAC address	Please input the MAC address of computer or network device here, dash (-) or colon (:) are

	<i>not required. (i.e. If the MAC address label of your wireless device indicates 'aa-bb-cc-dd-ee-ff' or 'aa:bb:cc:dd:ee:ff', just input 'aabbccddeeff')</i>
Computer Name	<p><i>All computer names found by this broadband router on local network will be listed here. You can select the computer name and click '<<' button to add selected computer's IP address to 'Private IP' field.</i></p> <p><i>Please note that this list may not be able to list all computers on your local network. If you think some computer doesn't appear in the list, select 'Refresh' and this broadband router will rescan for all computers attached to LAN port again.</i></p>
Comment	<i>You can input any text here as the comment of this MAC address, like 'ROOM 2A Computer' or anything. You can input up to 16 alphanumerical characters here. This is optional and you can leave it blank, however, it's recommended to use this field to write a comment for every MAC addresses as a memory aid.</i>
Add	<i>Click 'Add' button to add the MAC address and associated comment to the MAC address filtering table.</i>
Reset	<i>Remove all inputted values.</i>

All MAC address entries will be listed in this page:

MAC Filtering Table:

NO.	Computer name	Client PC MAC address	Comment	Select
1	OFFLINE	11:22:33:44:55:66	Banned PC	<input type="checkbox"/>

To delete one or more entries listed here, please check the box of the mapping entry (under 'Select'), and click 'Delete Selected' button.

If you wish to delete all mapping entries, click 'Delete All' button. To deselect all checked boxes, click 'Reset' button.

If you wish to use IP address-based filtering, please use 'IP Filtering Table' in this page:

IP Filtering Table :

NO.	Client PC Description	Client PC IP address	Client Service	Protocol	Port Range	Select
1	Banned computer	192.168.98.1		TCP+UDP	100-200	<input type="checkbox"/>

Please check 'Enable IP Filtering Table' box first, and select 'Deny' or 'Allow' to decide the behavior of IP filtering table (Deny the access of IP addresses in the list, or allow the access of IP addresses in the list). You have to click 'Add PC' button to add a new IP address to the list:

Access Control Add PC

This page allows users to define service limitation of client PC, including IP address and service type.

Client PC Description:

Client PC IP address : -

Here are descriptions of every setup items:

Item Name	Description
Client PC Description	Please input any text to describe this IP address, up to 16 alphanumerical characters.
Client PC IP address	Please input the starting IP address in the left field, and input the end IP address in the right field to define a range of IP addresses, or just input the IP address in the left field to define a single IP address.

You also have to select the type of Internet services that will be applied to this access control rule from the list:

Client PC Service		
Service Name	Detail Description	Select
WWW	HTTP, TCP Port 80, 3128, 8000, 8080, 8081	<input type="checkbox"/>
E-mail Sending	SMTP, TCP Port 25	<input type="checkbox"/>
News Forums	NNTP, TCP Port 119	<input type="checkbox"/>
E-mail Receiving	POP3, TCP Port 110	<input type="checkbox"/>
Secure HTTP	HTTPS, TCP Port 443	<input type="checkbox"/>
File Transfer	FTP, TCP Port 21	<input type="checkbox"/>
MSN Messenger	TCP Port 1863	<input type="checkbox"/>
Telnet Service	TCP Port 23	<input type="checkbox"/>
AIM	AOL Instant Messenger, TCP Port 5190	<input type="checkbox"/>
NetMeeting	H.323, TCP Port 389,522,1503,1720,1731	<input type="checkbox"/>
DNS	UDP Port 53	<input type="checkbox"/>
SNMP	UDP Port 161, 162	<input type="checkbox"/>
VPN-PPTP	TCP Port 1723	<input type="checkbox"/>
VPN-L2TP	UDP Port 1701	<input type="checkbox"/>
TCP	All TCP Port	<input type="checkbox"/>
UDP	All UDP Port	<input type="checkbox"/>

You can select multiple services here. If you wish to deny or allow all services of certain IP address(es), please select both 'TCP' and 'UDP'.

If the service you wish to deny or allow is not listed, you can use 'User Define Service' table to add a new service of your own:


User Define Service	
Protocol:	<input type="text" value="Both"/>
Port Range:	<input type="text"/>

Here are descriptions of every setup items:

Item Name	Description
<i>Protocol</i>	<i>Please select the protocol type of this service: TCP or UDP, or 'Both'.</i>
<i>Port Range</i>	<p><i>Please input the port range if this service. For a single port number, just input the number of service port (like '110').</i></p> <p><i>If this service consists multiple continuous ports, you can input '110-120' for port number 110 to 120, or '110,115,120' for port number 110, 115, and 120.</i></p>

Click 'Add' to add this IP address restriction rule to the list (and back to previous page), or click 'Reset' to clear all texts in every field.

When you finished with the settings in this page, you can click 'Apply' button to save changes you made in this page, or you can click 'Cancel' to discard changes. After you click 'Apply' button, you'll see the following messages:

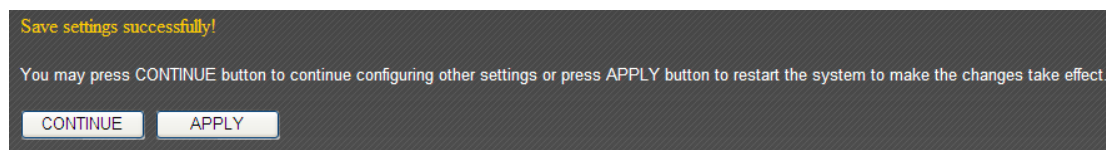

Please click 'Apply' to save changes you made and restart the broadband router, this requires about 30 seconds and the broadband router will stop responding (this is normal and is not malfunction). You can reconnect to this broadband router and continue on other settings later.

3-6-2 URL Blocking

If you want to prevent computers in local network from accessing certain website (like pornography, violence, or anything you want to block), you can use this function to stop computers in local network from accessing the site you defined here.


This function is useful for parents and company managers.

The screenshot shows a web interface for URL Blocking. At the top, there is a header bar with a green circle icon and the text "URL Blocking". Below this, there is a checkbox labeled "Enable URL Blocking" which is checked. Underneath the checkbox is a label "URL/Keyword:" followed by a text input field. To the right of the input field are two buttons: "Add" and "Reset".

Here are descriptions of every setup items:

Item Name	Description
<i>Enable URL Blocking</i>	<i>Check this box to enforce URL Blocking, uncheck it to disable URL Blocking.</i>
<i>URL/Keyword</i>	<i>Input the URL (host name or IP address of website, like http://www.blocked-site.com or http://11.22.33.44), or the keyword which is contained in URL (like pornography, cartoon, stock, or anything).</i>
<i>Add</i>	<i>Click 'Add' button to add the URL / keyword to the URL / Keyword filtering table.</i>
<i>Reset</i>	<i>Click 'Reset' to remove the value you inputted in URL/Keyword field.</i>


All existing URLs will be displayed in 'Current URL Blocking Table':

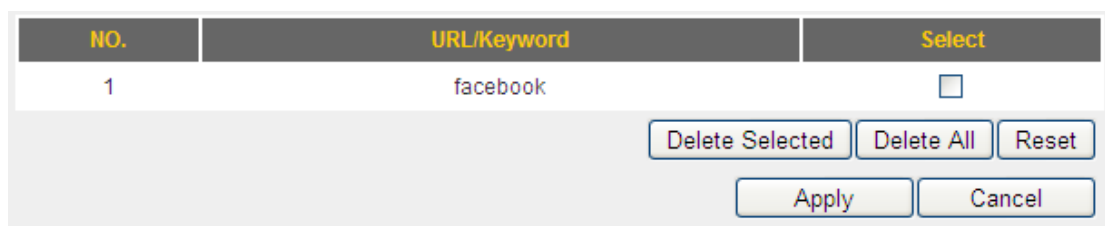The screenshot shows a table with three columns: "NO.", "URL/Keyword", and "Select". The first row contains the number "1", the keyword "facebook", and an unchecked checkbox. Below the table, there are five buttons: "Delete Selected", "Delete All", "Reset", "Apply", and "Cancel".

If you want to delete a specific URL/Keyword entry, check the 'select' box of the MAC address you want to delete, then click 'Delete Selected' button. (You can select more than

one URL/Keyword). If you want to delete all URL/Keyword listed here, please click 'Delete All' button, or you can also click 'Reset' button to unselect all URL/Keywords.

When you finished with the settings in this page, you can click 'Apply' button to save changes you made in this page, or you can click 'Cancel' to discard changes. After you click 'Apply' button, you'll see the following messages:

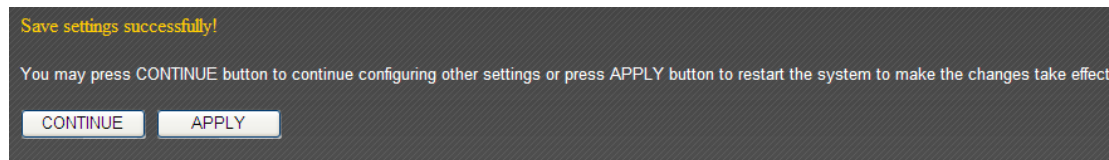


Please click 'Apply' to save changes you made and restart the broadband router, this requires about 30 seconds and the broadband router will stop responding (this is normal and is not malfunction). You can reconnect to this broadband router and continue on other settings later.

3-6-3 DoS

Denial of Service (DoS) is a common attack measure, by transmitting a great amount of data or request to your Internet IP address and server, the Internet connection will become very slow, and server may stop responding because it is not capable to handle too much traffics.

This router has a built-in DoS attack prevention mechanism; when you activate it, the router will stop the DoS attack for you:

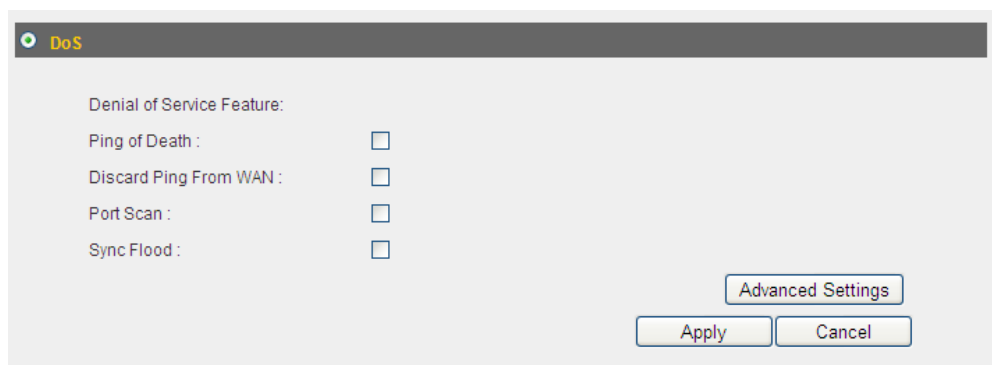

Here lists four kinds of DoS attacks, please select the type of DoS attack you wish this broadband router to protect, and you can select multiple types of attacks.

The descriptions of every DoS attack is listed below:

Item Name	Description
<i>Ping of Death</i>	<i>Ping of Death is a special packet, and it will cause certain computer to stop responding. Check this box and the router will filter this kind of packet out.</i>
<i>Discard Ping From WAN</i>	<i>Ping is a common and useful tool to know the connection status of a specified remote network device, but some malicious intruder will try to fill your network bandwidth with a lot of PING request data packet, to make your internet connection become very slow, even unusable. Check this box and the router will ignore all inbound PING request, but when you activate this function, you will not be able to ping your own router from internet, too.</i>
<i>Port Scan</i>	<i>Some malicious intruder will try to use a 'port</i>

	<i>scanner' to know how many ports of your Internet IP address are open, and they can collect a lot of valuable information by doing so. Check this box and the router will block all traffics which are trying to scan your Internet IP address.</i>
<i>Sync Flood</i>	<i>This is another kind of attack, which uses a lot of fake connection request to consume the memory of your server, and try to make your server become unusable. Check this box and the router will filter this kind of traffic out.</i>

If you need to specify the details of every DoS attack, please click 'Advanced Settings' button, and the following settings will appear:

Denial of Service

The Broadband router's firewall can block common hacker attacks, including DoS, Port Scan, and discard Ping from WAN.

Denial of Service Feature

☒ Ping of Death : 5 Ping of Death Packet(S) Per Second Burst 5

☒ Discard Ping From WAN :

☒ Port Scan :

- ☒ NMAP FIN / URG / PSH
- ☒ Xmas tree
- ☒ Another Xmas tree
- ☒ Null scan
- ☒ SYN / RST
- ☒ SYN / FIN
- ☒ SYN (only unreachable port)

☒ Sync Flood : 30 Packet(S) Per Second Burst 30


Apply Cancel

The descriptions of every setup item are listed below:

Item Name	Description
<i>Ping of Death</i>	<i>Set the threshold of when this DoS prevention mechanism will be activated. Please check the box of Ping of Death, and input the frequency of threshold (how many packets per second, minute, or hour), you can also input the 'Burst' value, which means when this number of 'Ping of Death' packet is received in very short time, this DoS prevention mechanism will be activated.</i>
<i>Discard Ping From WAN</i>	<i>Check the box to activate this DoS prevention mechanism.</i>

<i>Port Scan</i>	<i>Many kind of port scan methods are listed here, please check one or more DoS attack methods you want to prevent.</i>
<i>Sync Flood</i>	<i>Like Ping of Death, you can set the threshold of when this DoS prevention mechanism will be activated.</i>


When you finished with the settings in this page, you can click 'Apply' button to save changes you made in this page, or you can click 'Cancel' to discard changes. After you click 'Apply' button, you'll see the following messages:

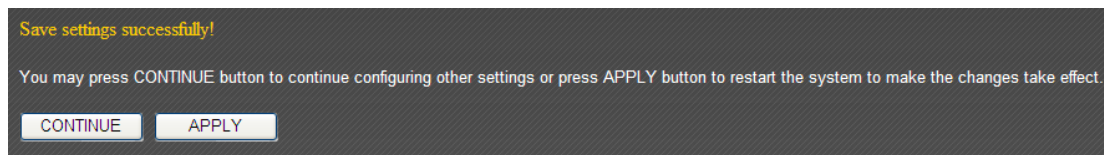

Please click 'Apply' to save changes you made and restart the broadband router, this requires about 30 seconds and the broadband router will stop responding (this is normal and is not malfunction). You can reconnect to this broadband router and continue on other settings later.

3-6-4 Parental Control


For those families who have children in the house, parental control is a very useful function for parents: If parents are not at home, child will not be able to access Internet so their Internet usage can be monitored by parents.

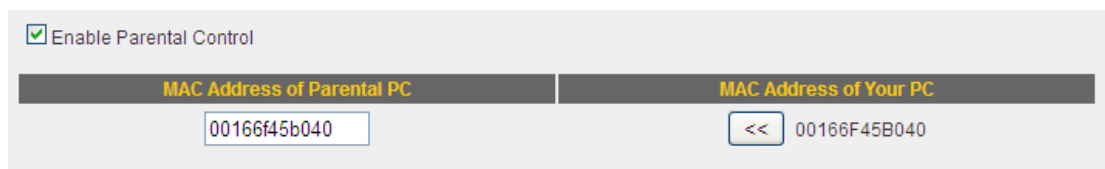

To enable parental control function, check 'Enable Parental Control' box. If this function is enabled, this broadband router will check parent computer's presence before allowing other computers to access Internet. By default, your PC's MAC address will be listed here automatically. If you're adding other PC's MAC address, you can input it manually in 'MAC Address of Parental PC' box.

Please note you don't need to add : or - in MAC address, just input 12 hexadecimal numbers (like shown above).

You can also setup a time-based parental control by schedule function:

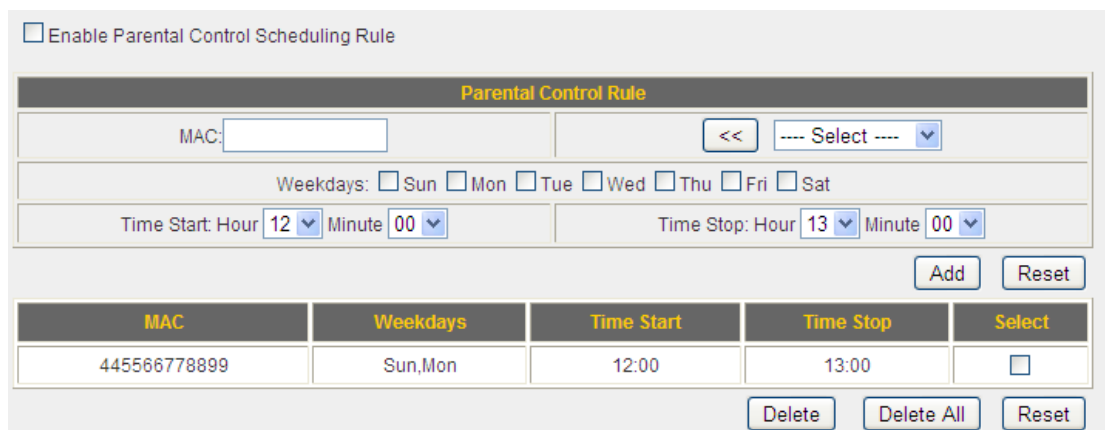


The descriptions of every setup item are listed below:

Item Name	Description
MAC	<i>Input computer's MAC address which will be controlled by parental control. You can input the MAC address manually in 'MAC' box, or select a computer's MAC address in 'Select'</i>

	<p><i>dropdown list, then click << button.</i></p> <p><i>Please note that only active (connected to LAN port of this broadband router and switched on) computer's MAC address will be listed here. If you think some computer's MAC address doesn't appear, you can select 'Refresh' and this broadband router will rescan for all computers on LAN again.</i></p>
<i>Weekdays</i>	<i>Select weekdays which will be affect by this parental control rule.</i>
<i>Time Start / Time Stop</i>	<i>Select starting / ending time this parental control rule will take effect.</i>
<i>Add</i>	<i>Add this parental control rule to the list.</i>
<i>Reset</i>	<i>Clear all inputted texts.</i>

When one or more parental control rule is appear in the list, you can select it/them by selecting its 'Select' box (under 'Select'), and click 'Delete' button to remove it/them from the list. Click 'Delete All' to remove all parental control rules. You can also click 'Reset' to unselect all selected parental control rules. When you finished with the settings in this page, you can click 'Apply' button to save changes you made in this page, or you can click 'Cancel' to discard changes. After you click 'Apply' button, you'll see the following messages:

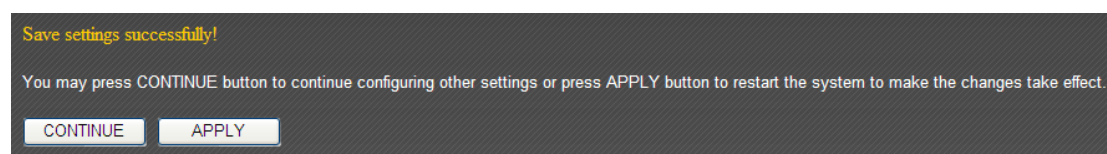


Please click 'Apply' to save changes you made and restart the broadband router, this requires about 30 seconds and the broadband router will stop responding (this is normal and is not malfunction). You can reconnect to this broadband router and continue on other settings later.


3-7 Status

In this menu, you can check the operation status of this broadband router. To view the status, follow the following instructions:


1. Click 'Status' tab from main menu:

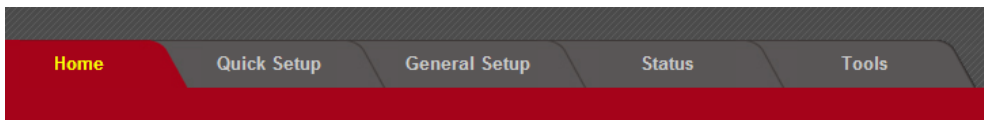

2. The basic system information will be shown:

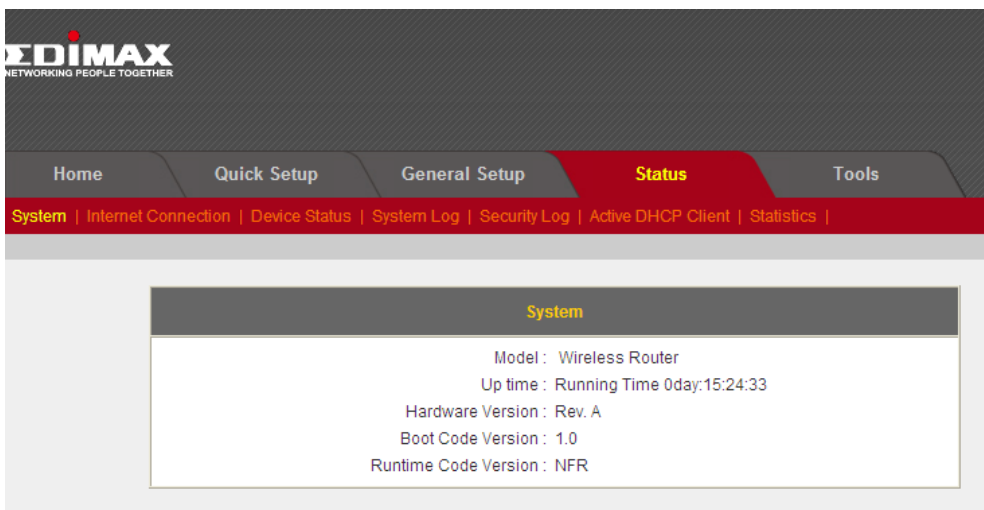

You can check basic system information about this broadband router here. In addition, you can click other information about this broadband router by click status list under 'Status' tab:

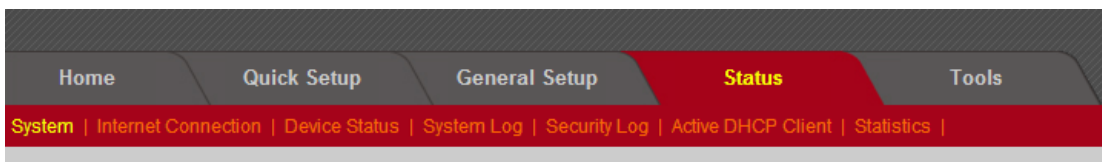

See detailed description for every kind of information below.

3-7-1 Internet Connection

This page shows the current status of Internet connection.

Internet Connection	
IP Address Mode :	Dynamic IP disconnect
IP Address :	
Subnet Mask :	
Default Gateway :	0.0.0.0
MAC Address :	00:0C:29:99:85:CA
Primary DNS :	168.95.1.1
Secondary DNS :	168.95.192.1

3-7-2 Device Status


This page shows current wireless LAN and wired LAN configuration.

Wireless Configuration	
Mode :	Universal Repeater
ESSID :	Edimax
Channel Number :	11
Security :	WEP

LAN Configuration	
IP Address :	192.168.98.242
Subnet Mask :	255.255.255.0
DHCP Server :	Disable
MAC Address :	00:1f:1f:b1:00:ec

3-7-3 System Log

This page shows all logged system information. You can use scroll bar to view the logs, or click 'Save' to download the log file to your computer. You can also click 'Clear' to remove all logs, or click 'Refresh' to reload logs.

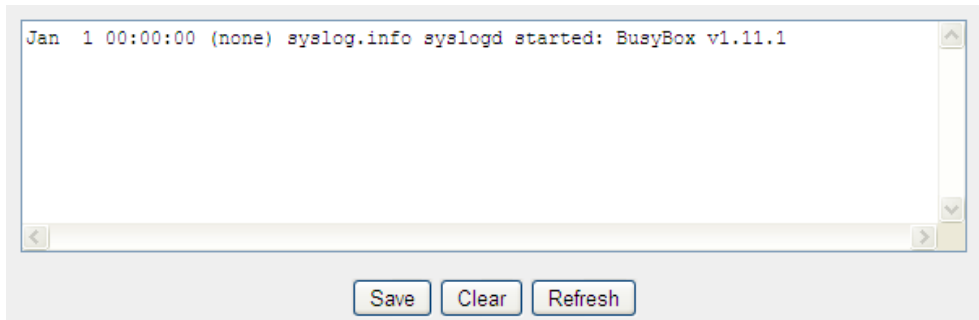


The image shows a web-based system log interface. It features a text area with a single log entry: "Jan 1 00:00:00 (none) syslog.info syslogd started: BusyBox v1.11.1". The text area has a vertical scrollbar on the right and a horizontal scrollbar at the bottom. Below the text area are three buttons: "Save", "Clear", and "Refresh".

```
Jan 1 00:00:00 (none) syslog.info syslogd started: BusyBox v1.11.1
```

Save Clear Refresh

3-7-4 Security Log

This page shows all logged security-related information. You can use scroll bar to view the logs, or click 'Save' to download the log file to your computer. You can also click 'Clear' to remove all logs, or click 'Refresh' to reload logs.

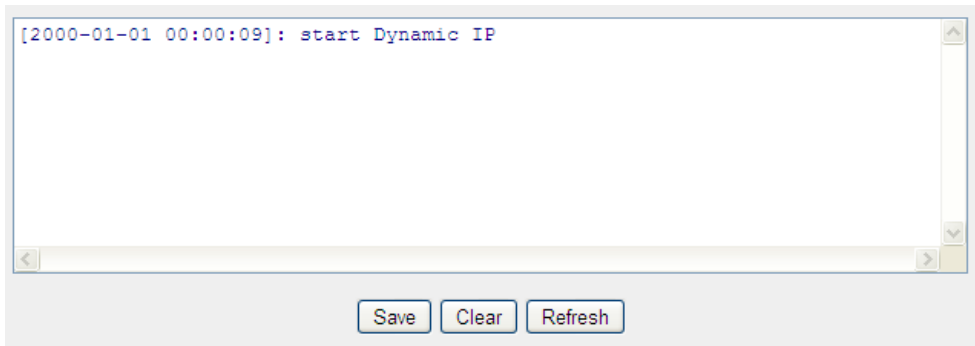

3-7-5 Active DHCP Client

This page shows all current DHCP clients. You can click 'Refresh' to reload the list.

IP Address	MAC Address	Time Expired(sec)
None	----	----

Refresh

3-7-6 Statistics

This page shows the statistical information of network interfaces of this broadband router, and the total system uptime.

Wireless LAN	Sent Packets	66907
	Received Packets	66889
Ethernet LAN	Sent Packets	38191
	Received Packets	21058
Ethernet WAN	Sent Packets	14521
	Received Packets	0
Running Time		<button>Restart</button>


Refresh

3-8 Tools


This broadband router comes with several tools that will help you to manage the configuration of broadband router, upgrade the firmware, and restart the broadband router.

To use these tools, follow the following instructions:

1. Click 'Tools' tab.

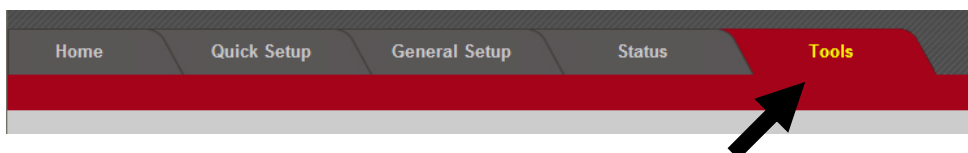


2. The list of tools will appear:

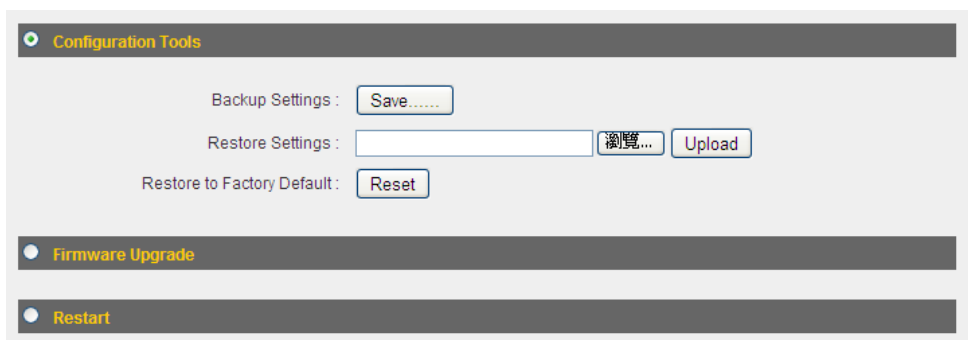

Please select the tool you wish to use, then click 'Apply' button. If you wish to go back to previous page, click 'Previous' button.

3-8-1 Configuration Tools

In this page, you can backup and restore current system configuration, and reset all settings to factory default value.

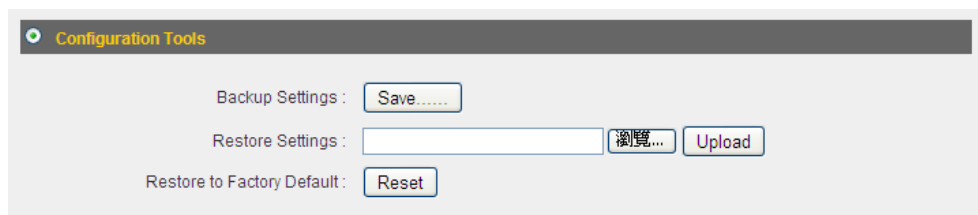

The screenshot shows a web interface titled "Configuration Tools". It contains three sections: "Backup Settings" with a "Save....." button; "Restore Settings" with a text input field, a "浏览..." (Browse...) button, and an "Upload" button; and "Restore to Factory Default" with a "Reset" button.

Here are descriptions of every setup items:


Item Name	Description
<i>Backup Settings</i>	<i>Click 'Save...' button to download the current configuration as 'config.bin' file. Save this file on your computer to keep current configuration. If you want to keep more than one version of configuration file, please rename the configuration file to another name.</i>
<i>Restore Settings</i>	<i>Click 'Browse...' button to select a previously-saved configuration file from your computer, then click 'Upload' to upload the configuration file to broadband router, and the configuration of broadband router will be replaced by the content of uploaded configuration file.</i>
<i>Restore to Factory Default</i>	<i>Click 'Reset' button to restore the settings of the broadband router to factory default value. A pop-up message window will appear and ask you to confirm the reset.</i>

3-8-2 Firmware Upgrade

New firmware releases will provide new functions to this broadband router, and you can use firmware upgrade function to upgrade the firmware to new version.

NOTE: It's recommended to use wired Ethernet connection to upload the firmware file, please refrain from using wireless connection to upload the firmware file. Also, please do not switch the broadband router or computer you used to upload the firmware file off during firmware upgrade. This will cause broadband router become malfunction and unusable.


Please download the firmware file from our company's website and save it on your computer, and use firmware upgrade function to upgrade firmware:

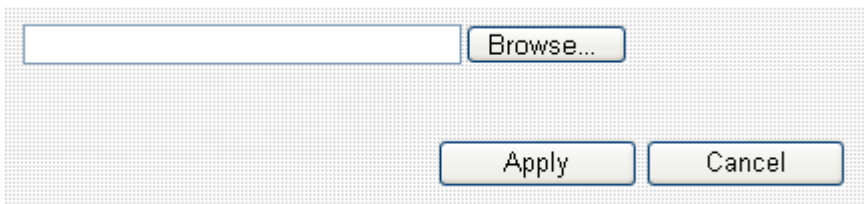A screenshot of a web-based firmware upload interface. It features a text input field on the left and a 'Browse...' button on the right. Below these, there are two buttons: 'Apply' and 'Cancel'.

Please click 'Browse...' button to select the firmware file saved on your computer, then click 'Apply' button to start firmware upload. The broadband router will restart after file upload is successful, and all settings will be lost. Please use default IP address (192.168.2.1) to connect to the broadband router and set every settings again.

3-8-3 Restart

If you found that the broadband router is not functioning correctly, or responding slowly then usual, you can use this function to restart the broadband router, and this may correct the problem.

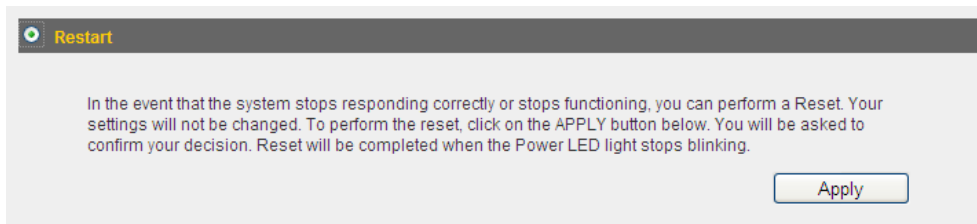


Click 'Apply' button to restart the broadband router. You'll be prompted to confirm the restart, click 'OK' to restart the broadband router.

3-9 Language

This broadband router's web-based user interface supports several languages. You can change the display language by click 'Language' button in main menu.

To change the display language, select 'Language' dropdown menu from upper-right corner of main menu, and select the language you wish to use.

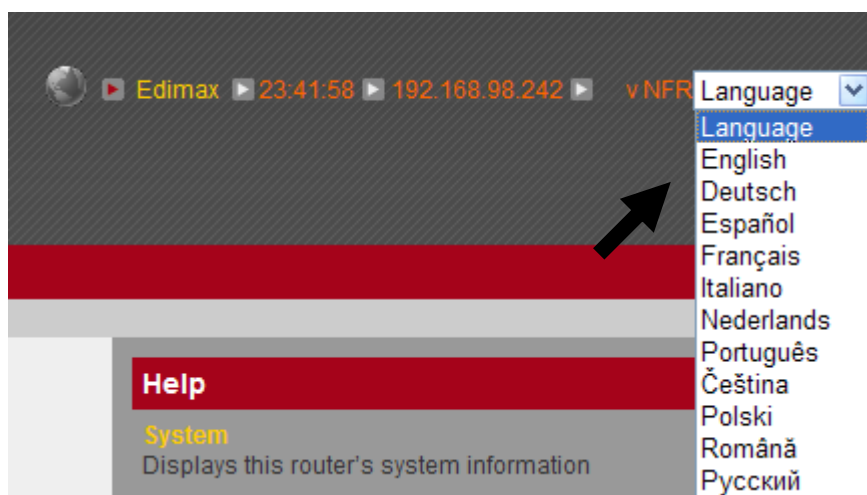



Edimax Technology Co., Ltd.
No.3, Wu-Chuan 3rd Road, Wu-Gu,
New Taipei City 24891, Taiwan

Edimax Technology Europe B.V.
Nijverheidsweg 25 5683 CJ Best
The Netherlands

Edimax Computer Company
3350 Scott Blvd., Bldg.15 Santa Clara,
CA 95054, USA