

How to Change Administrator Password in the Router

Introduction


This FAQ is applied to the below Edimax models and operation systems.

Models: BR-6478AC, BR-6428nS V2, BR-6428nC, BR-6228nS V2, BR-6228nC V2

Operation System: Windows XP, Windows Vista, Windows 7, Windows 8

Configuration Steps


1. Power on the router, and connect the router LAN port and the computer using the cable.
2. Open the web browser, type "192.168.2.1" on the address bar, and press enter.

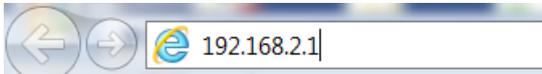

3. The default account and password is admin/1234. Please input the account and password, and click "OK".



- Click "Administrator", click "Password", and you are able to configure the password here. Enter original password in the field "Current Password", and then enter new password in the field "New Password" and "Confirmed Password. Please note that "New Password" and "Confirm Password" must be the same. Click "Apply" to save.

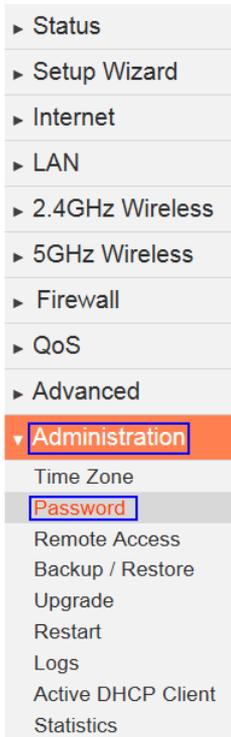

The "Password" configuration page features a "Help" button in the top right corner. It contains three input fields: "Current Password" with the value "1234", "New Password" with the value "Edimax", and "Confirmed Password" with the value "Edimax" and a small "x" icon to its right. An "Apply" button is centered at the bottom of the form.

- It will log out, and pop out the window as below. Please enter new password to log in the web management. The administrator password is changed successfully.

